


# PACKAGE CONTENTS

## For 10'x20' Model- GM1101


This carport is packed in two boxes. Please check the contents according to this list. If there's any part missing, contact us immediately to get replacement.

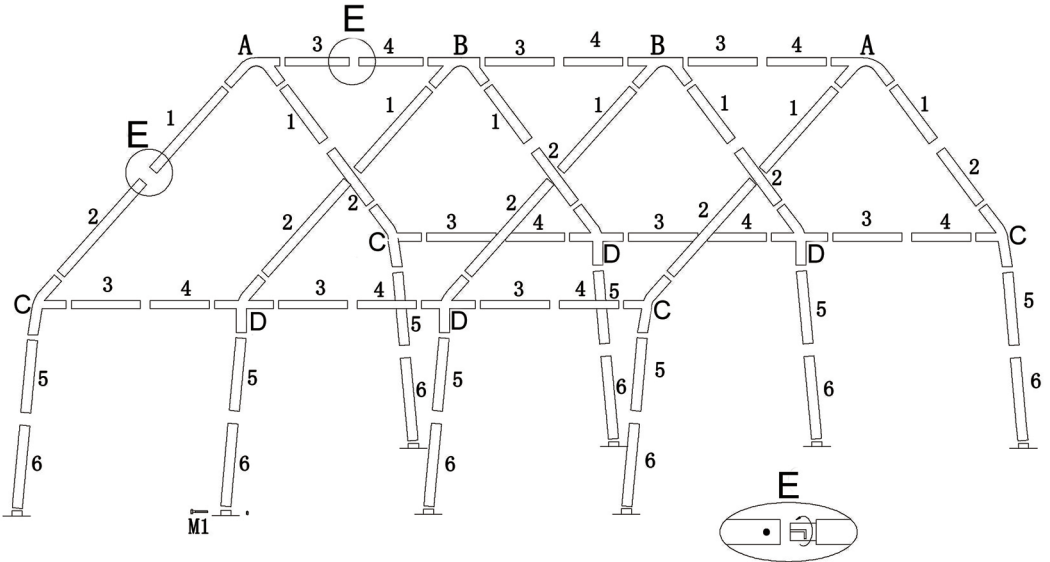

1#		8pcs			1pc
2#		8pcs			2pcs
3#		9pcs			2pcs
4#		9pcs			24pcs
5#		8pcs			8pcs
6#		8pcs			56pcs
		8pcs		 M8×50	8pcs
A		2pcs	C		4pcs
B		2pcs	D		4pcs


# INSTALLATION

1

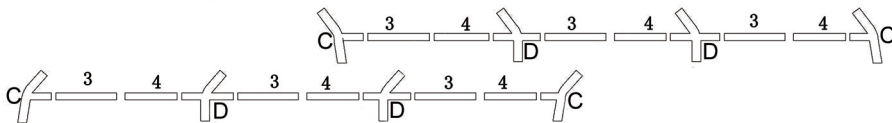

## STEP 1


Assemble the upper frame using Pole #3, #4 & the Connector D, C.

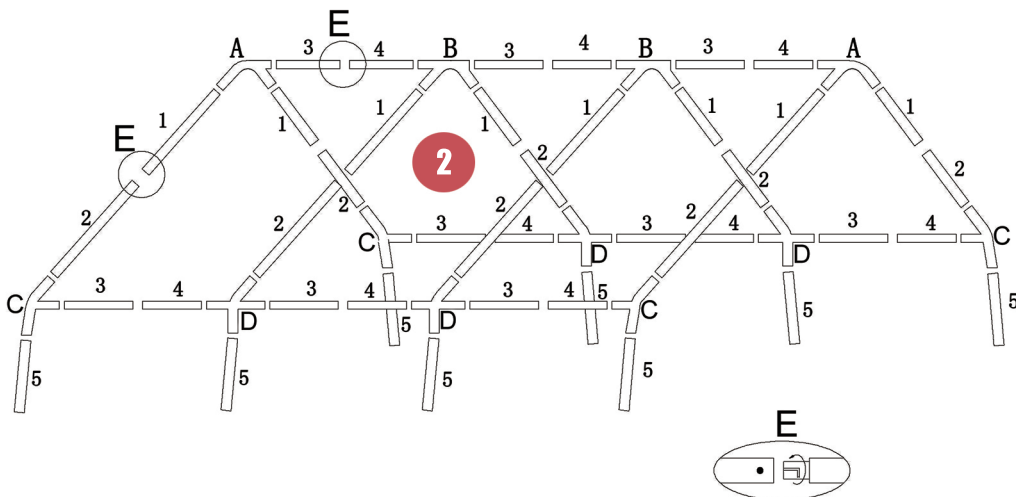

## STEP 2


Attaching the roof section to the upper frame using Pole #1, #2, #3, #4 & the connector A, B. Connect the pipes together starting with the center frame (See Diagram E)

# INSTALLATION

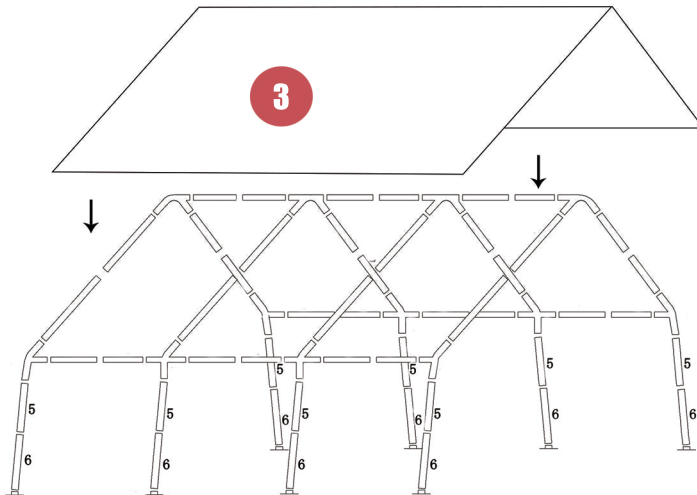

## STEP 3

Place the cover tightly over the frame. And slot the remaining legs (Pole#5, #6) into the matching position, Ensure the Base Plates are at the base and be fixed by a bolt

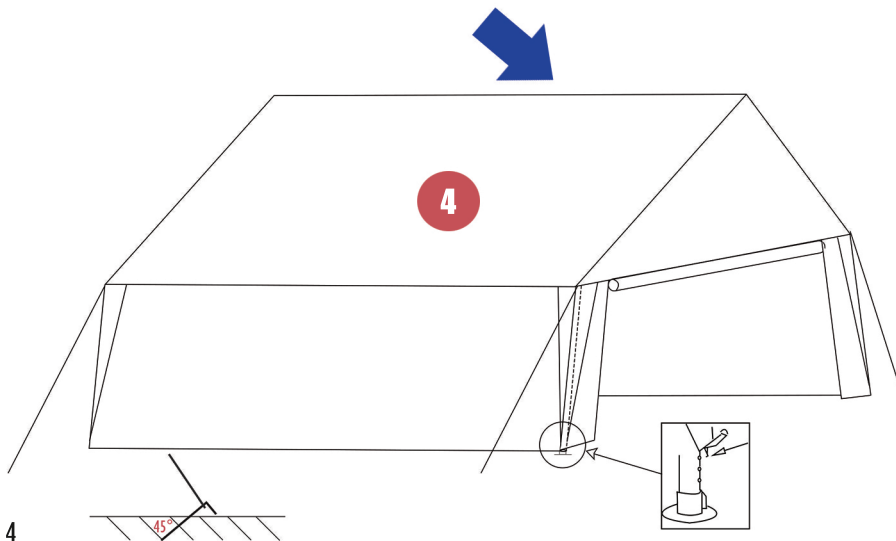

## STEP 4

Hang the side panels to the holes by the Elastic Balls. All side panels can be hung or took down separately. Pull the leg cover tight by the elastic ball and attach the metal hooks into the tube holes near the feet. If the cover becomes loose, tighten by moving the hook to a lower hole. Then secure the tent with Ropes and the Stakes. We recommend the Stakes are at a 45 degree angle in the ground facing away the tent to ensure maximum tension.