




Take Drawer Bottom (H) & turn it over onto it's face. Use (6) Small Screws to attach the Metal Box Sides (A) to the Drawer Bottom. Shown above.

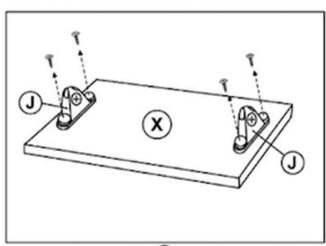


Take Drawer Face (X) (included in a separate package) & use (4) Small Screws to secure Mounting Brackets (located inside Metal Box Sides). Method Shown above.

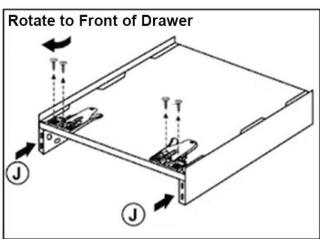


Attach Drawer Glide Release Clips © & screw them into place as shown. Use the mechanism to dislodge the Mounting Brackets J in order to attach them to the Drawer Face (X).

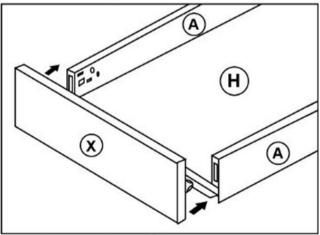

Pop Drawer Face \bigotimes into place on front of drawer, where there are small openings in Metal Box Sides \bigotimes .

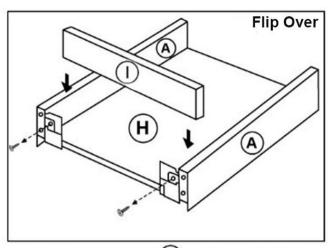

Slide Drawer Back (1) into 90 degree angle against the Metal Box Sides (Shown above) and use (2) Small Screws to secure into place.

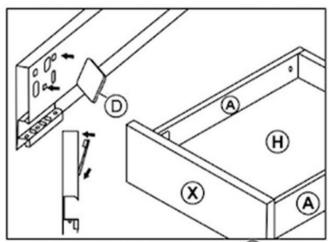

Take Plastic Hole Cover Clips (D) and clip them into place inside drawer Metal Box Sides (A), shown above.