

HD2600 wall mount bracket kit includes:

- 1 - Wall mount bracket
- 5 - 1-5/8" wood screws
- 5 - Toggle bolt wall mount anchors
- 4 - Thumb screws



Step 1 - Install thumb screws on bottom of DVD player.



Step 2 - Use a pencil to mark the approximate desired location of DVD player once mounted.



Step 3 - OPTIONAL - Use a stud finder to locate any possible studs in your wall.




Step 4 - Level wall mount bracket on your wall and mark all 5 mounting holes.



Step 5 - If you are fastening the bracket to drywall, use a 1/2" drill bit to drill through the wall where no studs exist.



Step 6 - Insert toggle bolts and attach hinged wing nuts so the tip of the bolt passes the end of the nut.

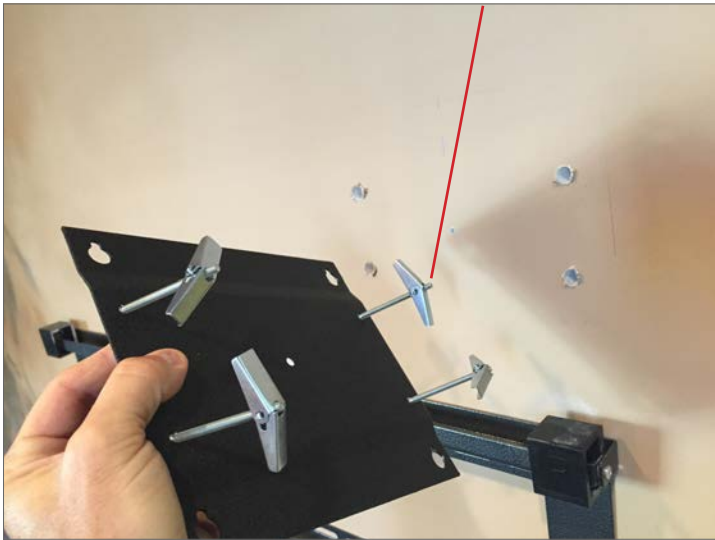

Step 7 - Make sure that wall mount bracket is mounted so that the notch of the DVD mounting hole is facing down (1). Insert toggle bolts into wall and push all the way in so wing nuts open.



Step 8 - Slightly pull each corner of the bracket towards you and tighten each bolt until there is about 1/2" of space between the wall and the bracket. Move to the next bolt, until all bolts have the same spacing. Continue pulling the bracket and move around all bolts again until plate is flush to the wall.



Step 9 - OPTIONAL - use 1 5/8" wood screw for remaining "non toggle bolt" holes.



Step 10 - Slide player into mounting holes and push the player down.



You should be able to see the thumb screws slide down into the notches below the mounting hole.



Step 11 - Slightly pull the player away from the wall to make sure it is secure in the bracket.



Step 12 - You can now connect the power supply and HDMI, Composite and/or Component wires.



Step 13 - Re-Install TV

