




Installation Guide

Pro-12 handwash sink & Axxis restroom



Tools & Hardware

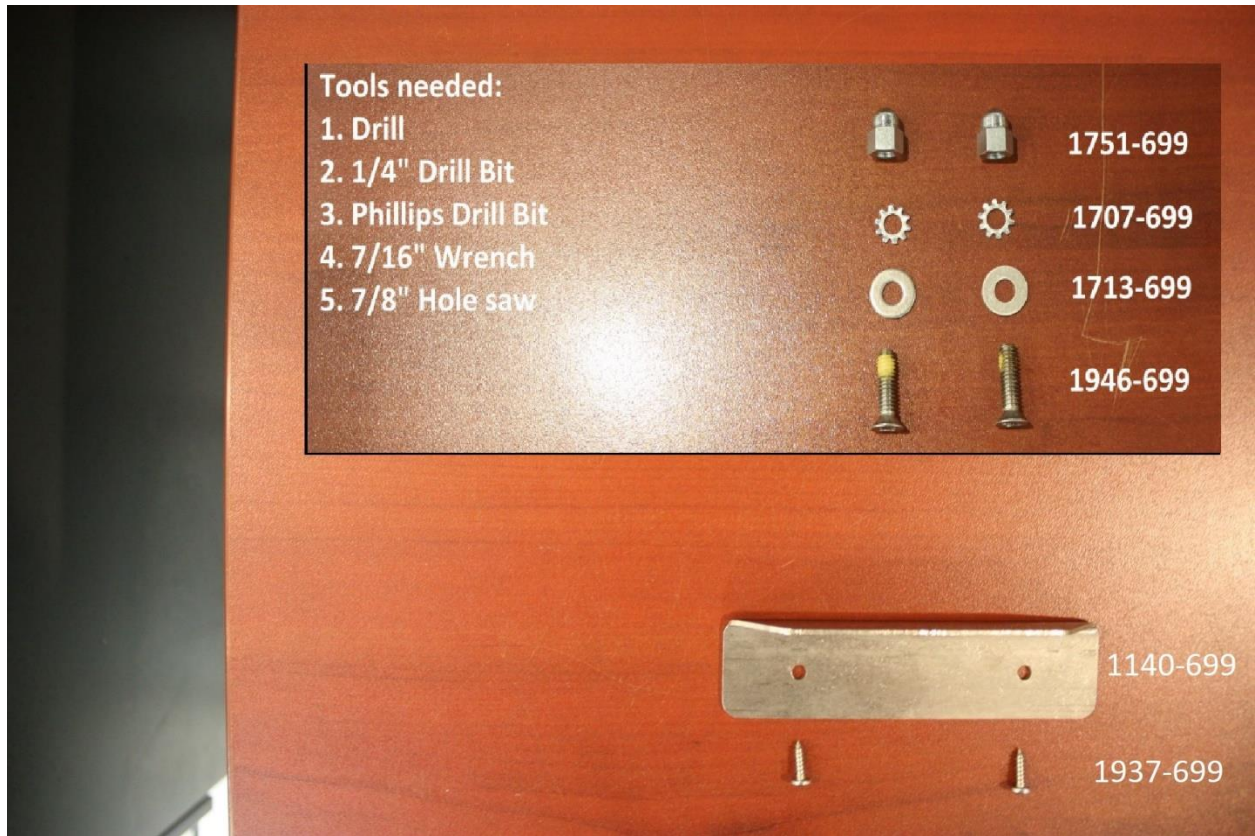


Step 1



Step 2



Step 3

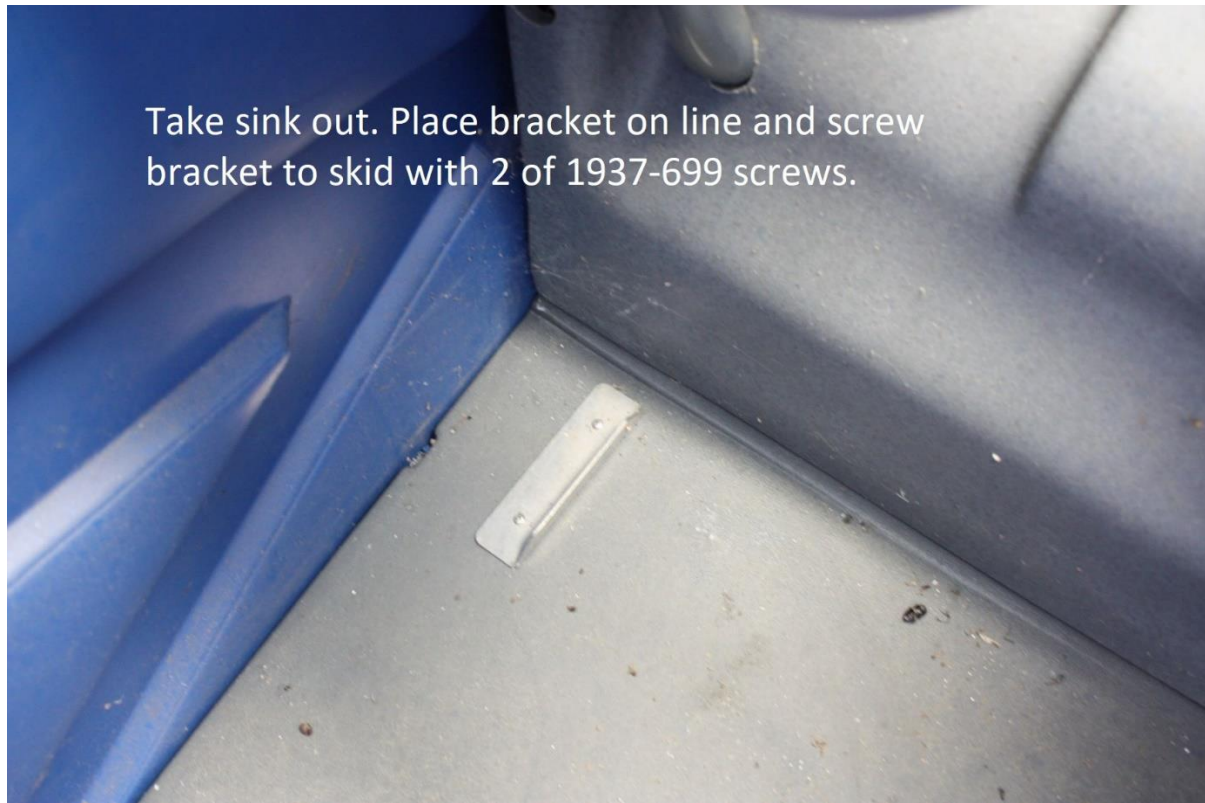

Step 4



Step 5



Step 6



Step 7

Lean sink forward. Take drain hose on back of sink and insert into hole in front of tank.




Step 8



Step 9



Step 10

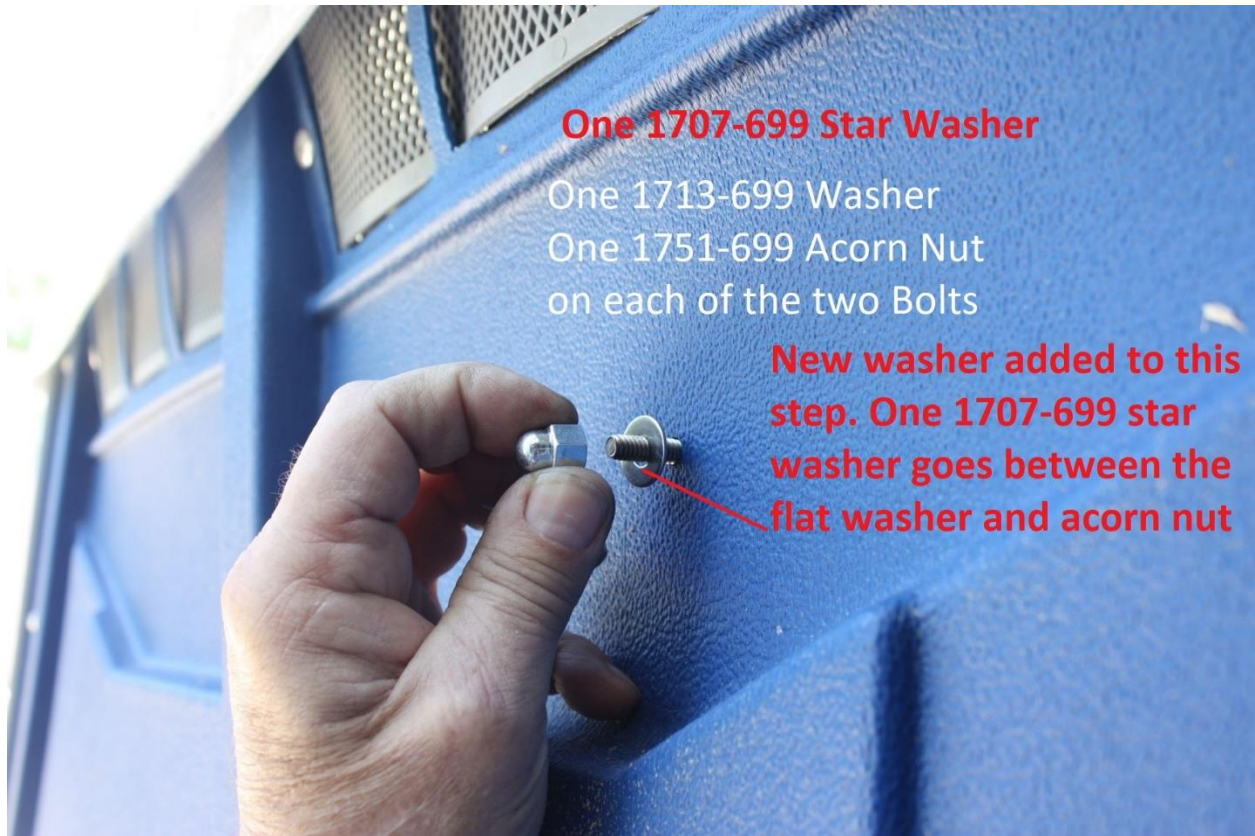

One 1707-699 Star Washer

One 1713-699 Washer

One 1751-699 Acorn Nut

on each of the two Bolts

New washer added to this step. One 1707-699 star washer goes between the flat washer and acorn nut