


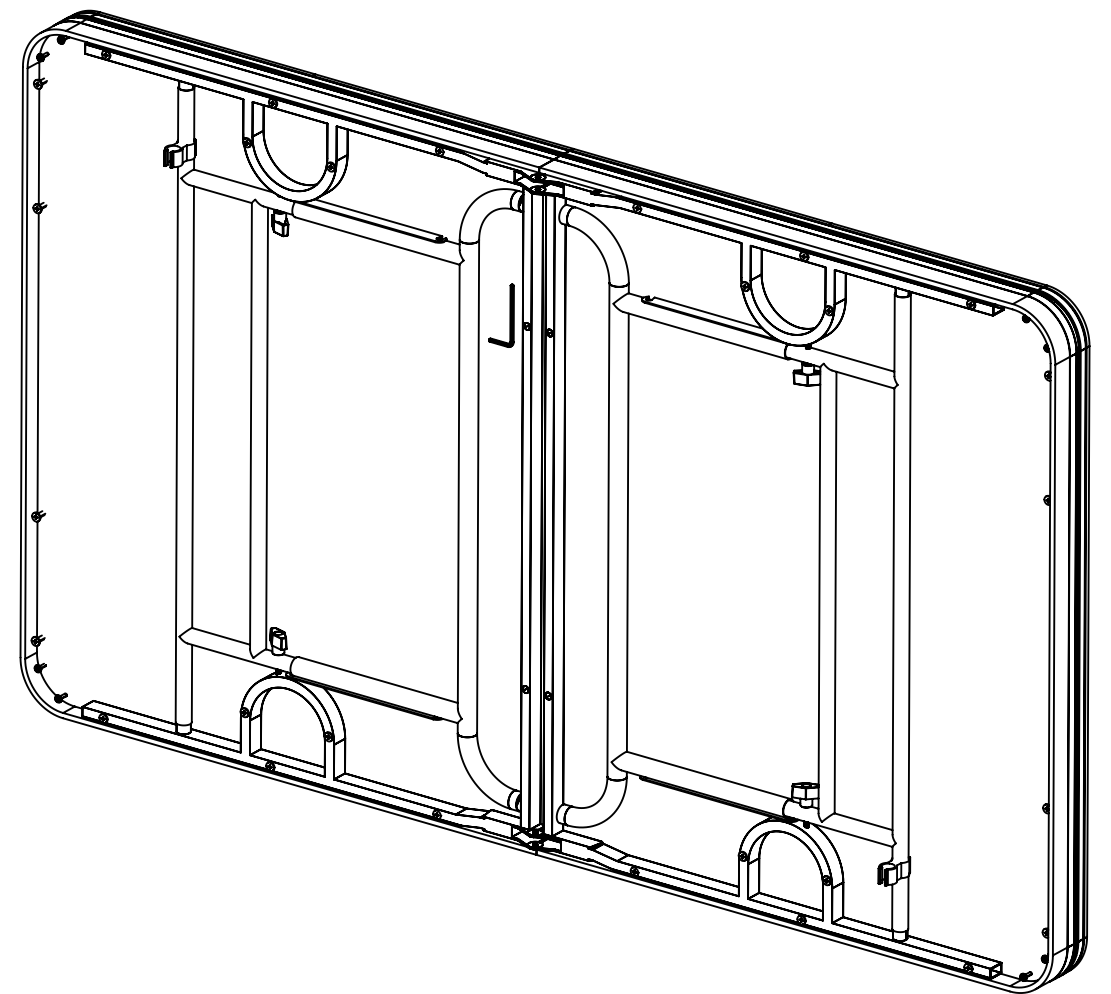
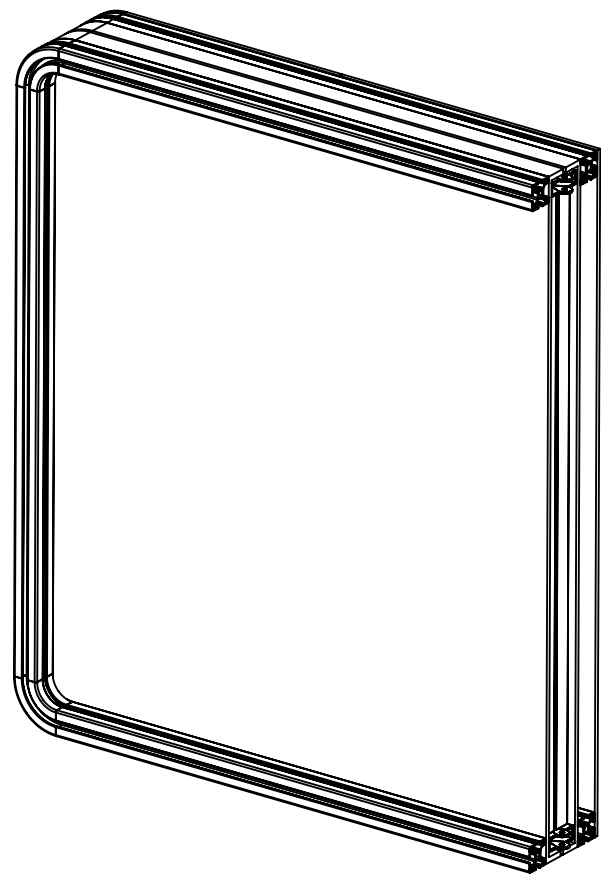


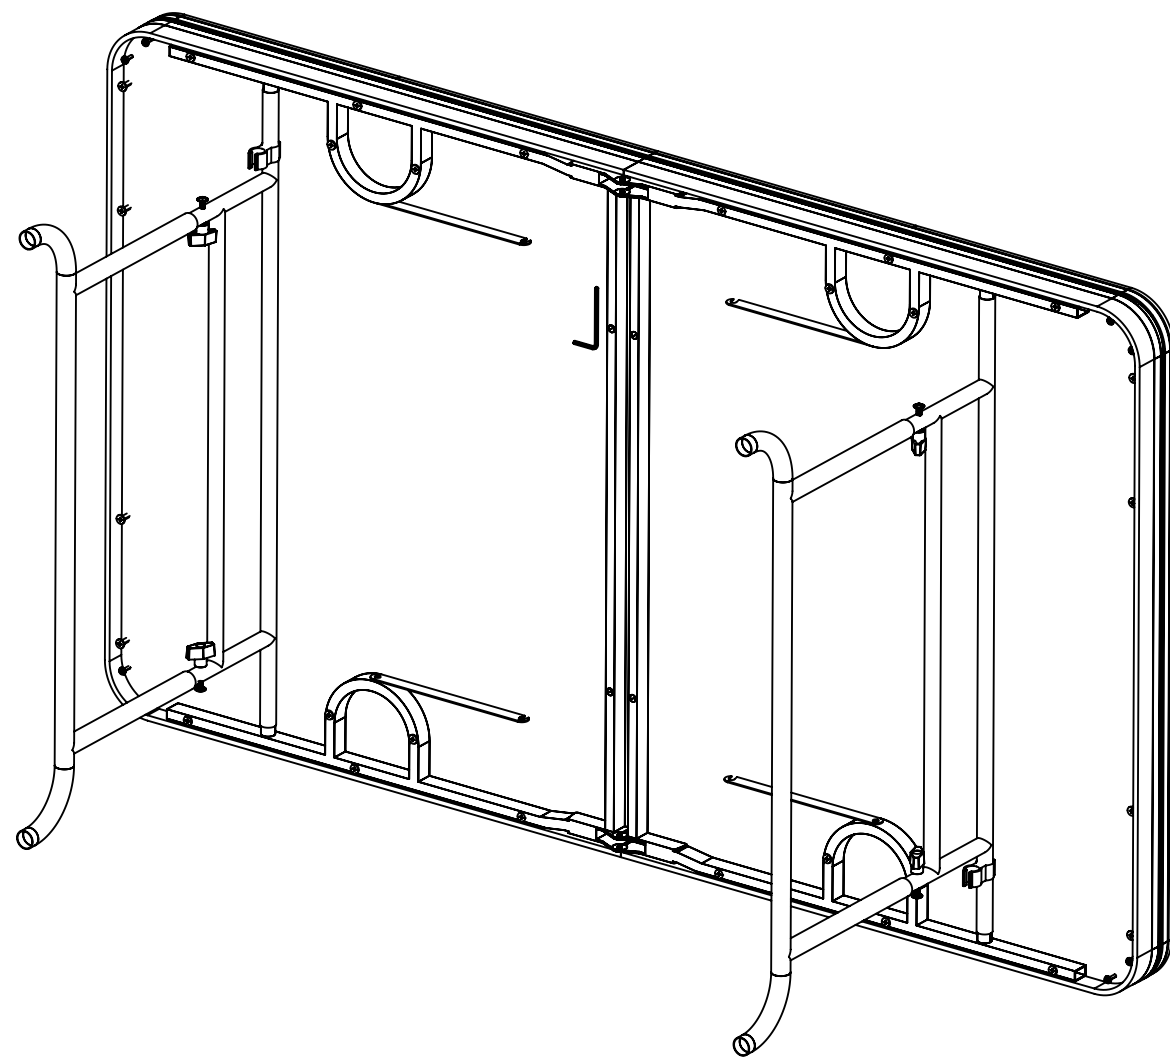


UNFOLD TABLE TOPS

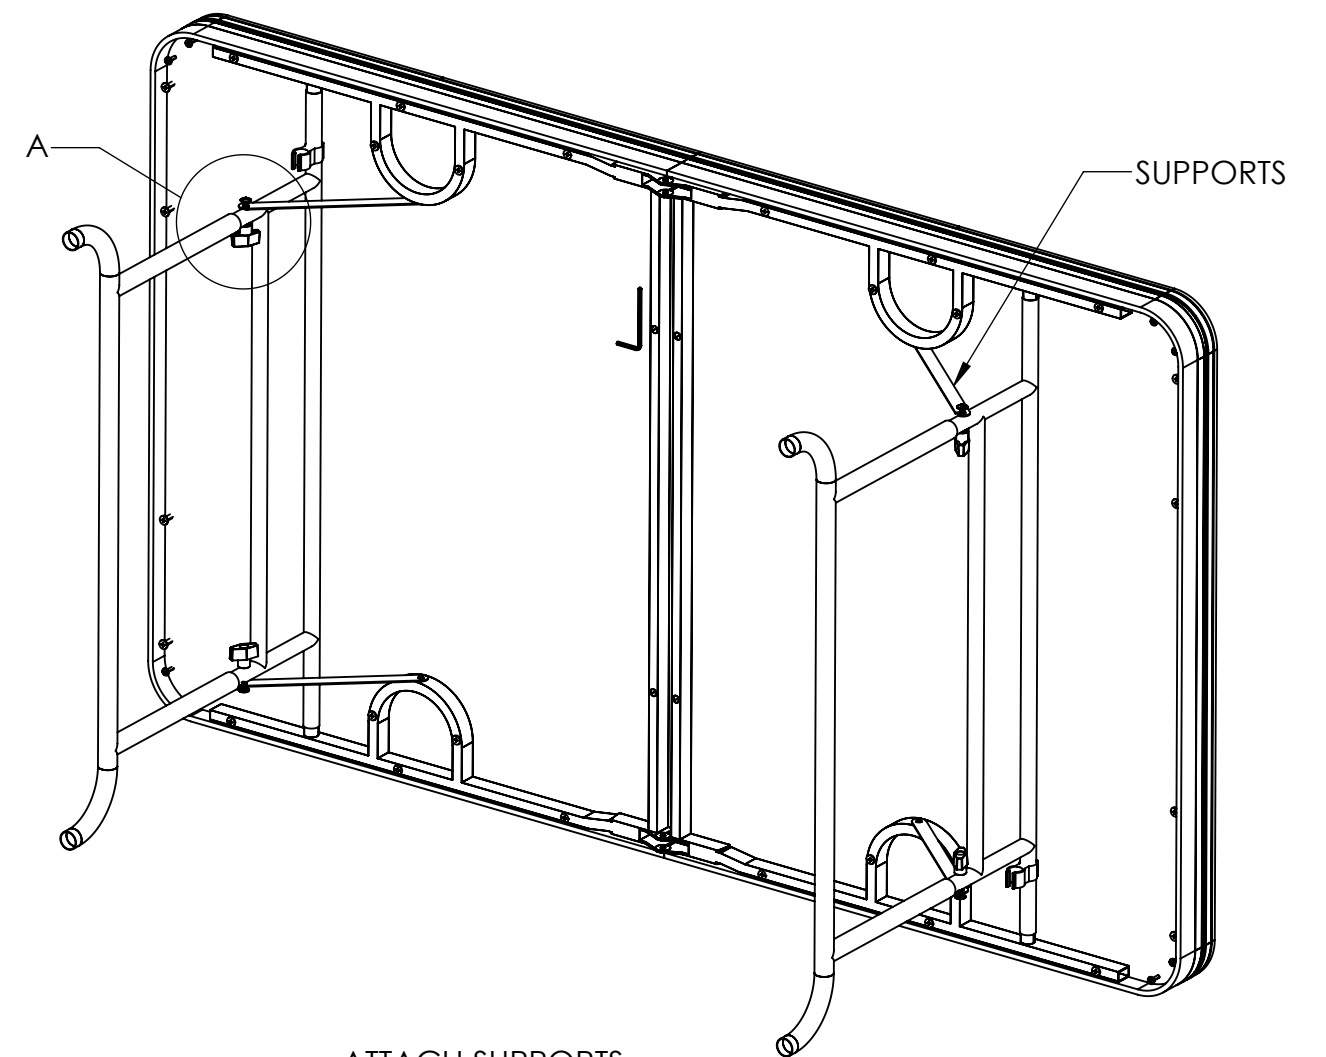


SWING OUT LEGS

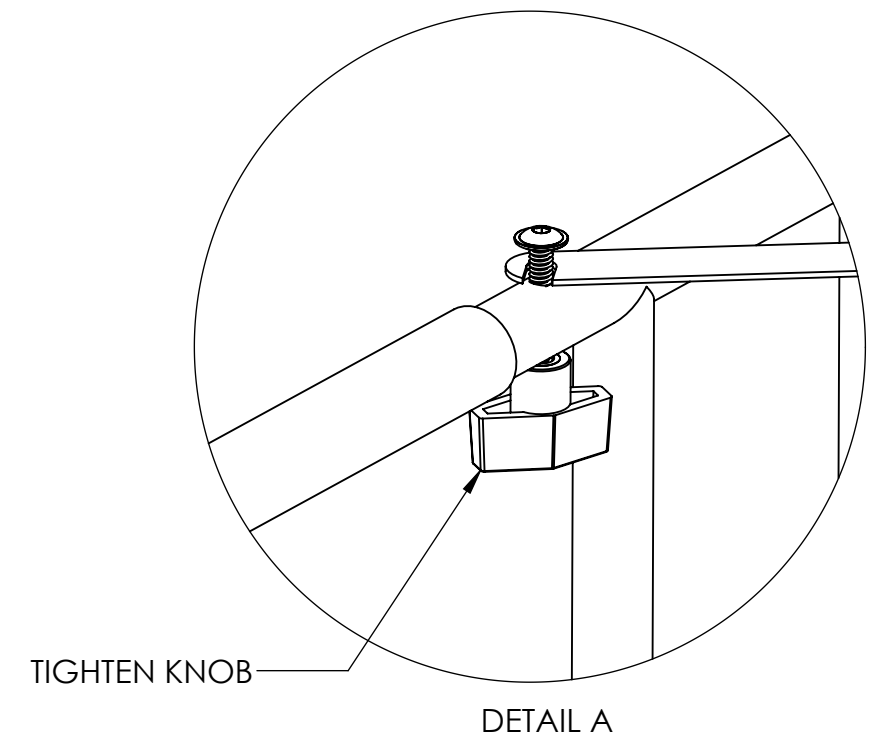


ATTACH SUPPORTS

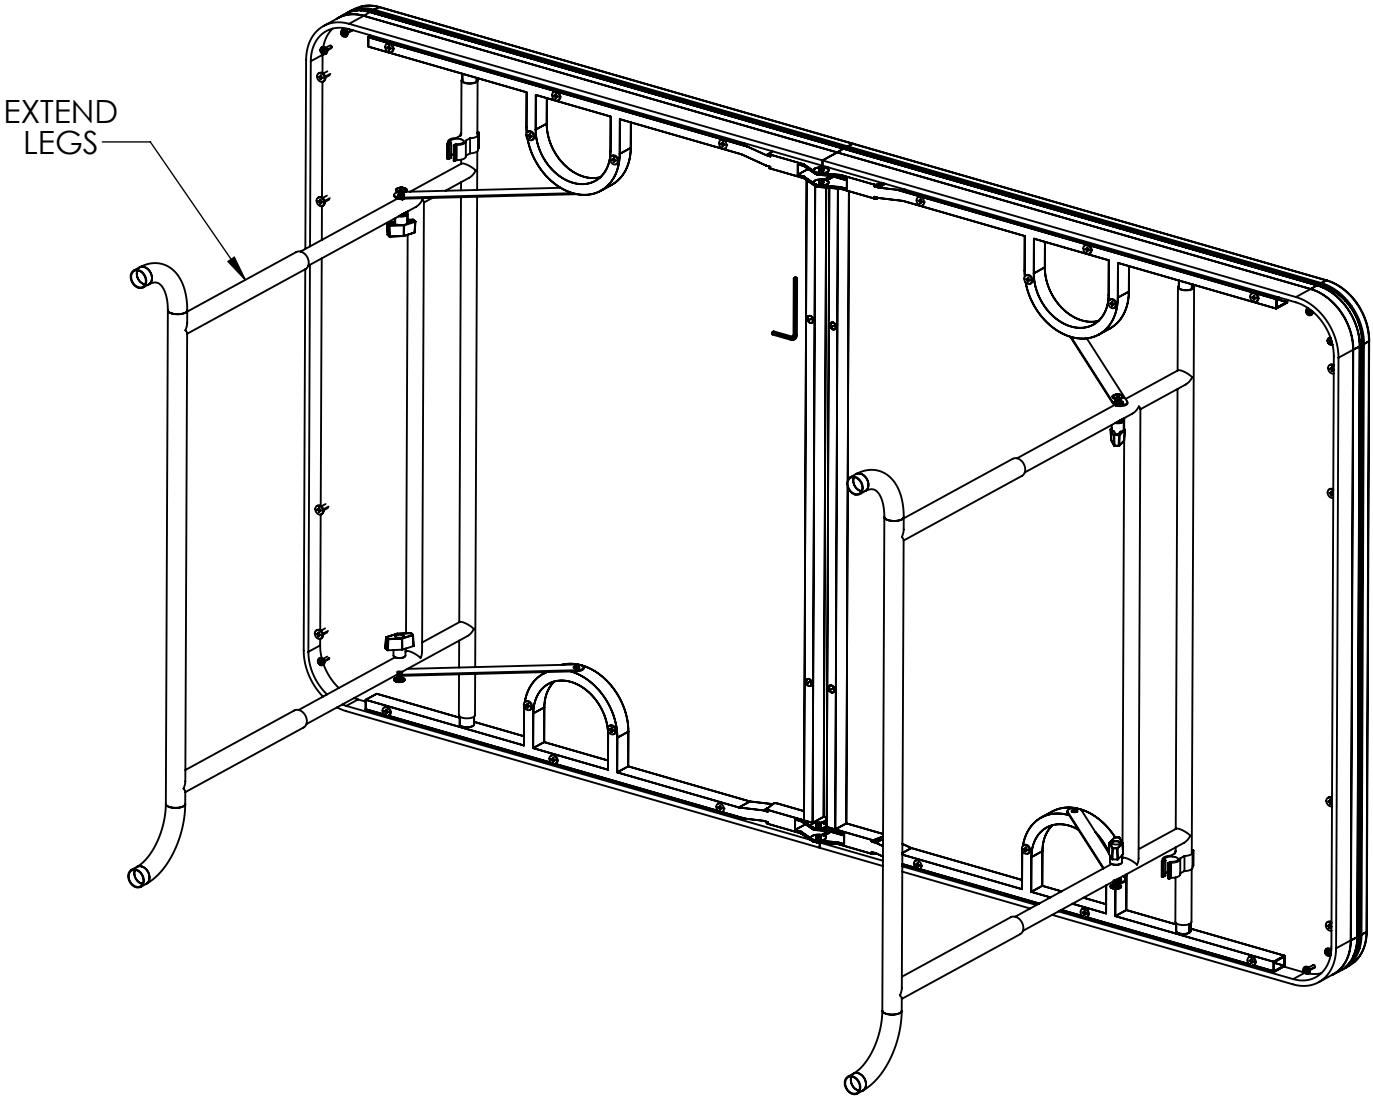

EXTEND LEGS


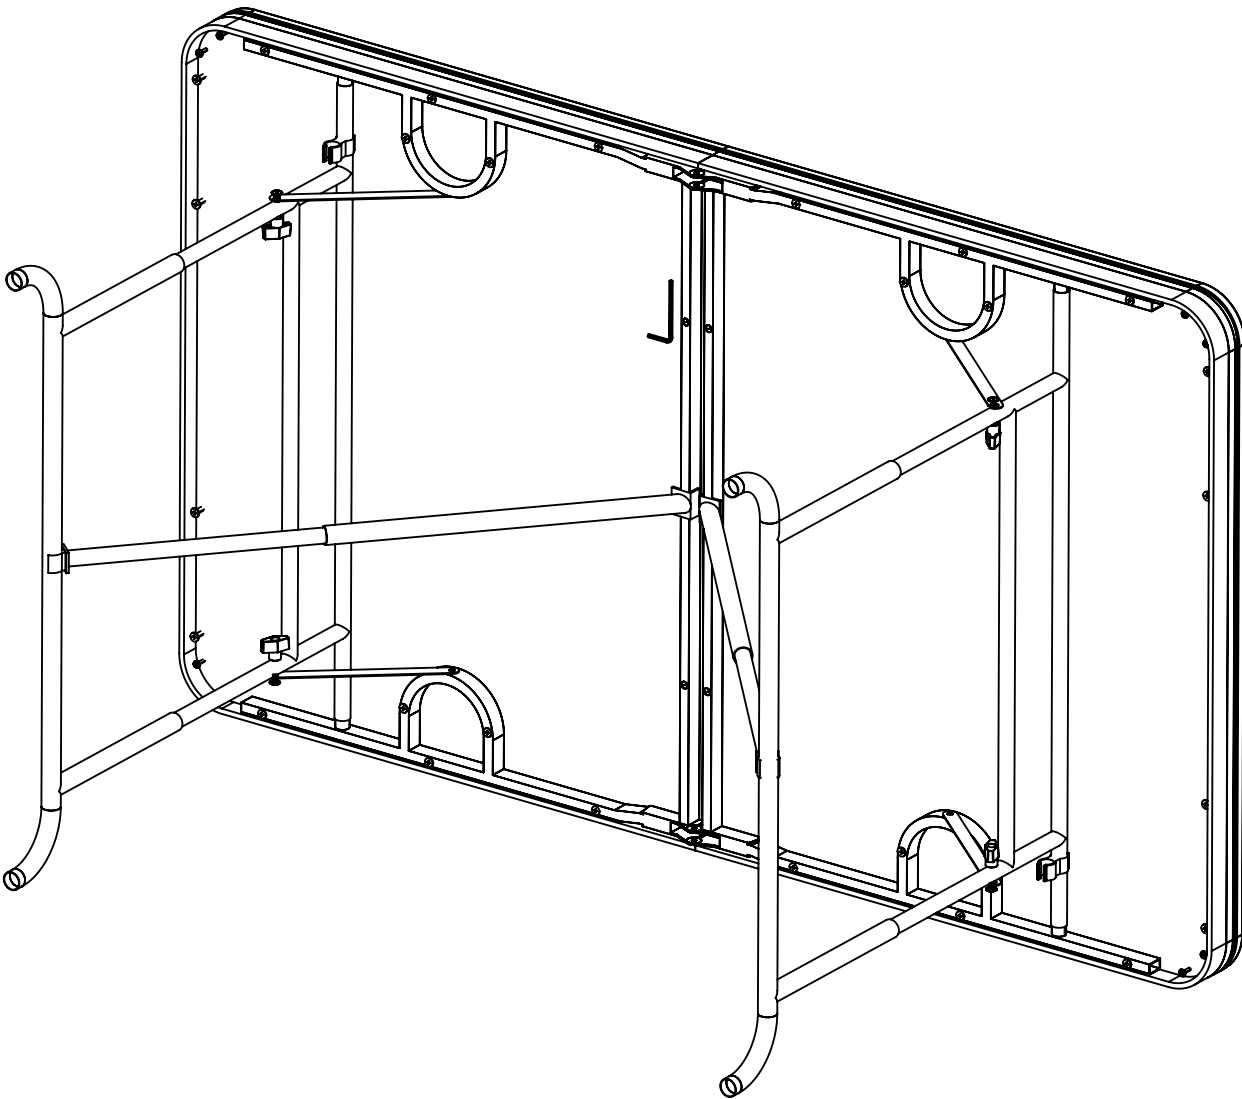


ATTACH BRACER BARS

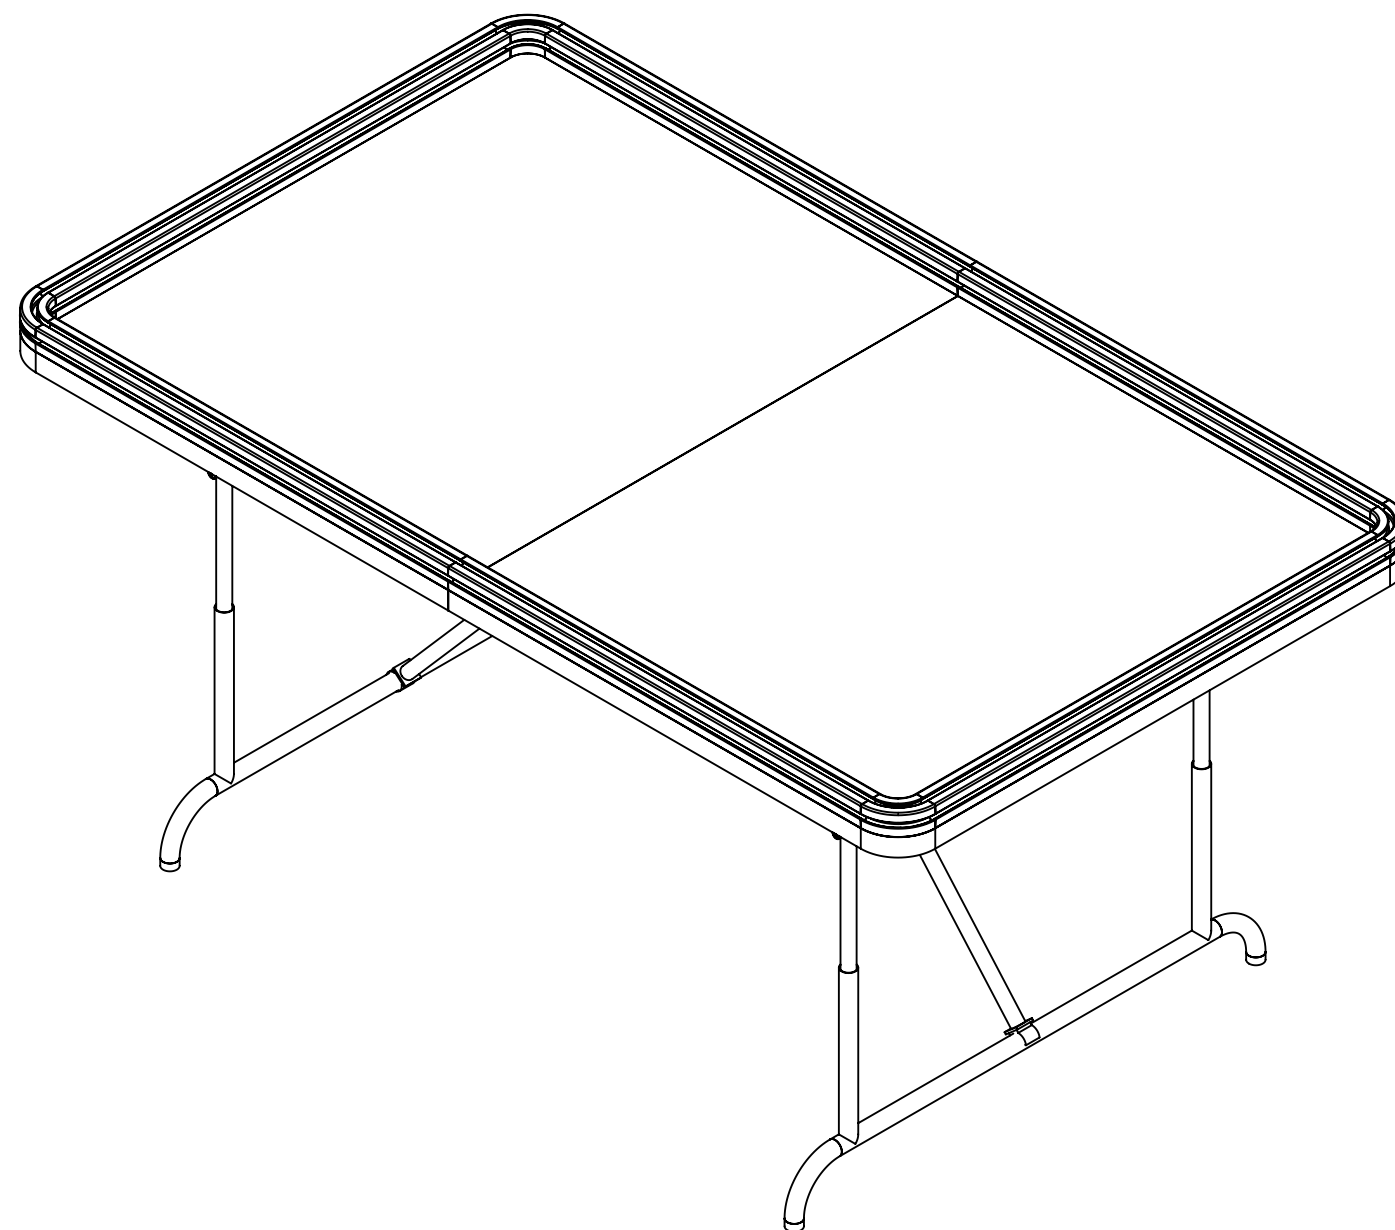



FLIP TABLE ONTO LEGS

COMBINING TWO TABLES TOGETHER

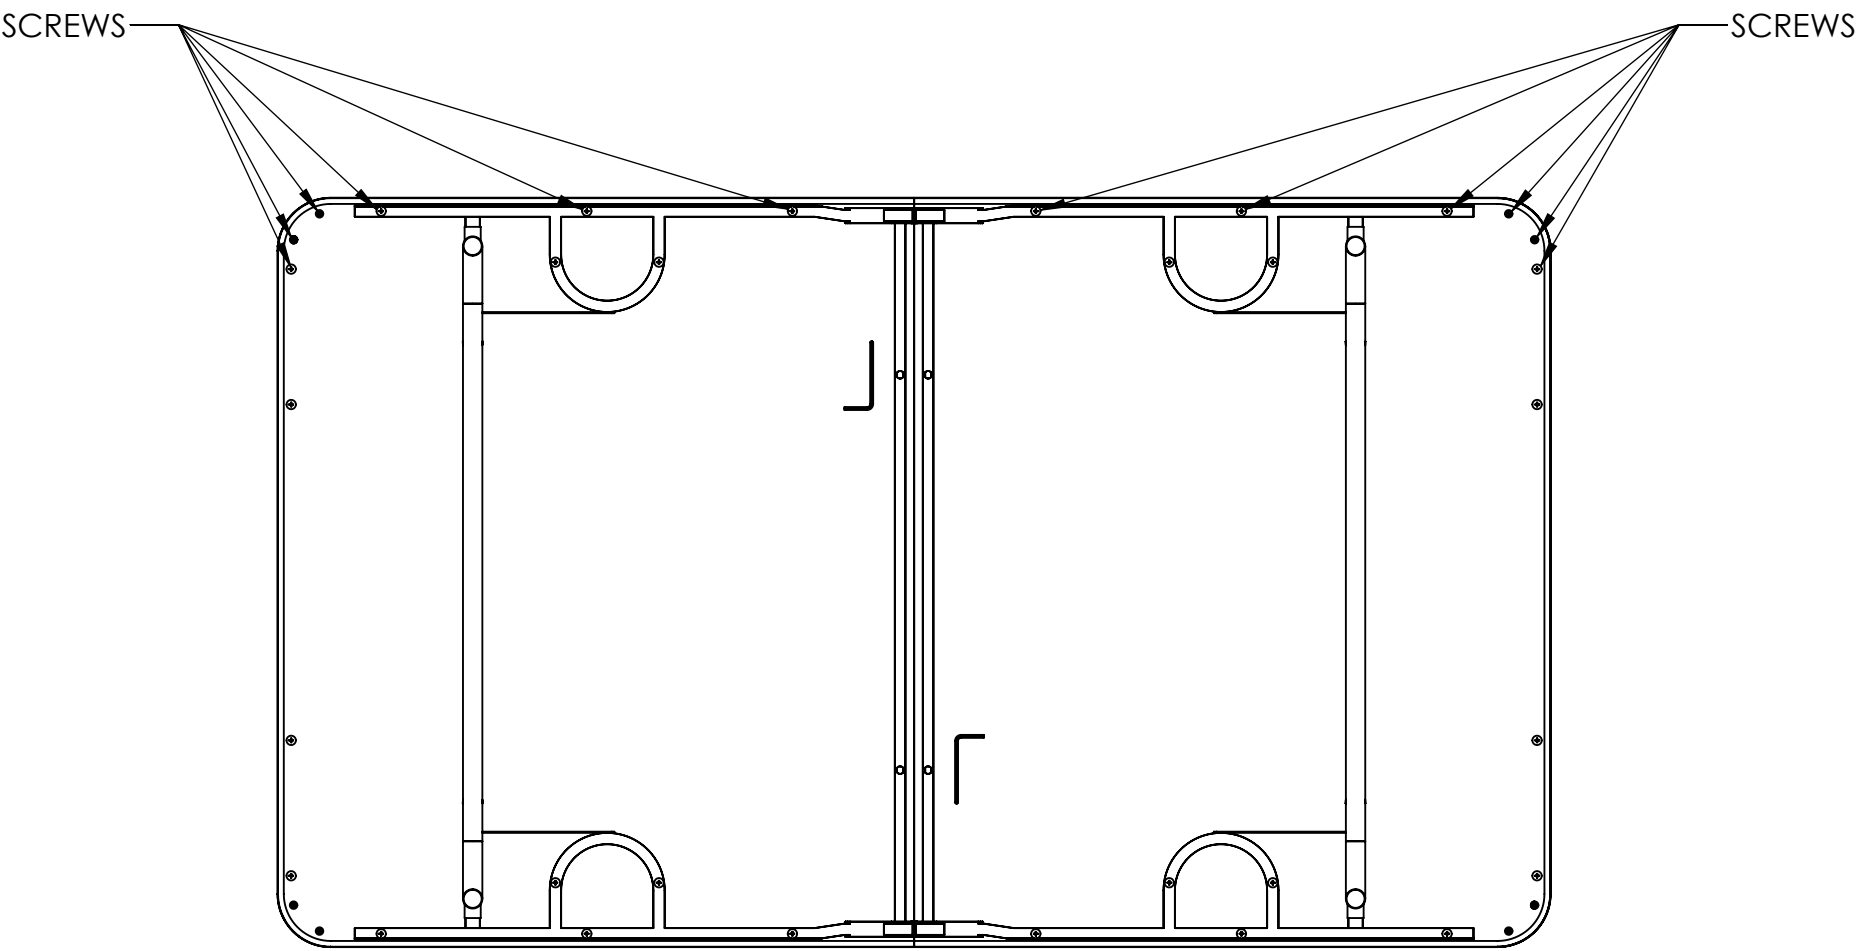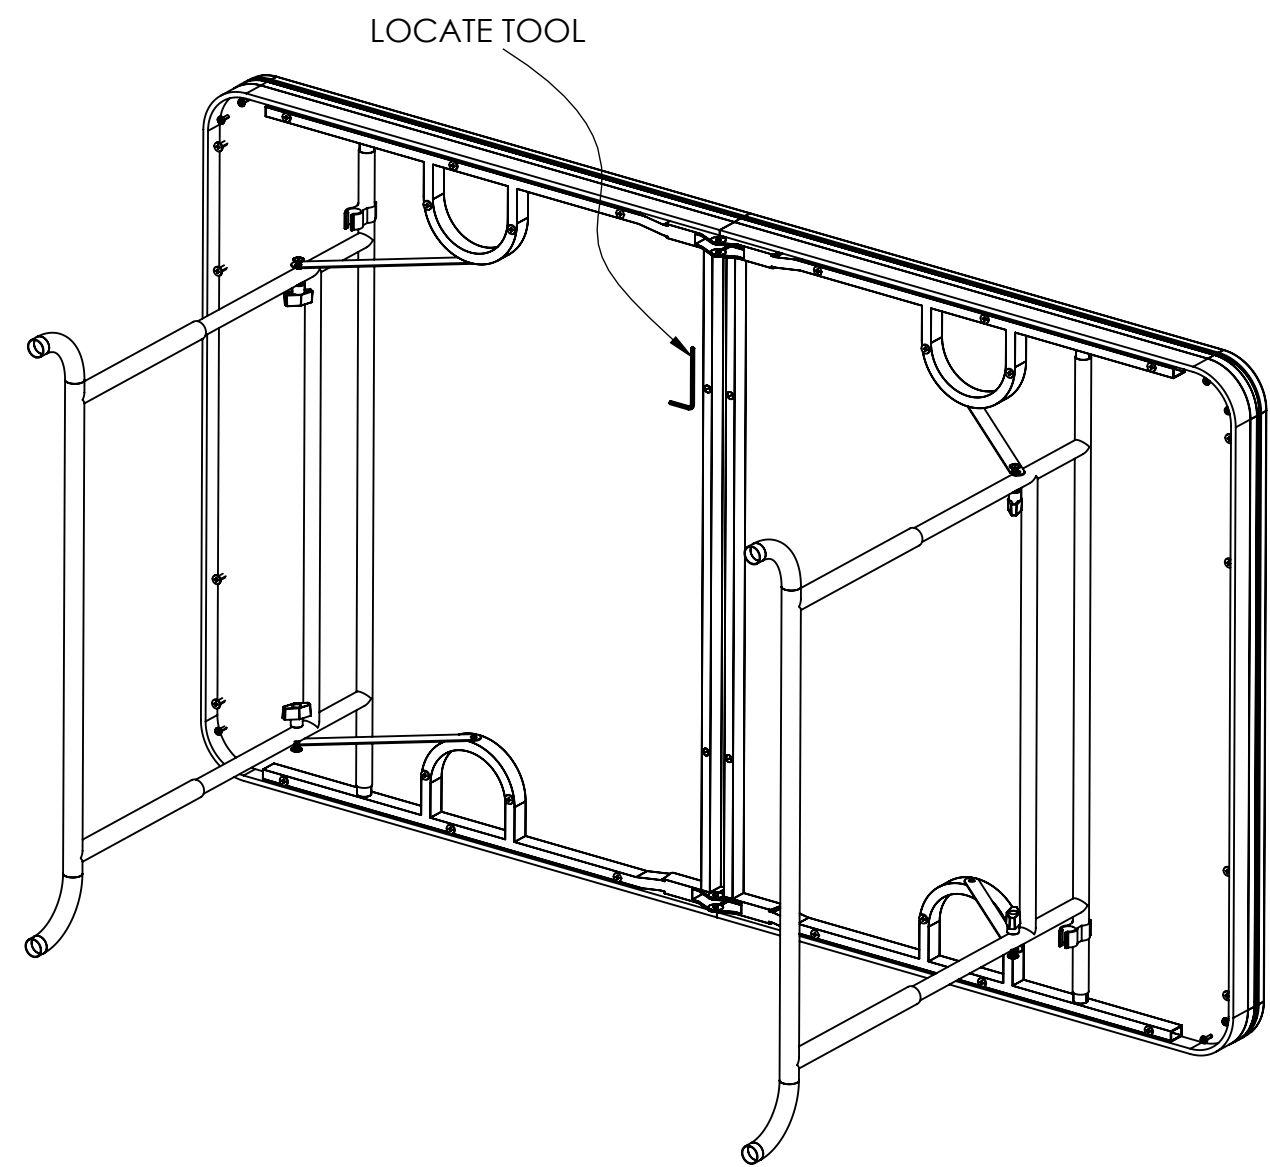


REMOVE 12 SCREWS FROM EACH TABLE, SET ASIDE
REMOVE REAIL
REPLACE SCREWS IN HOLES

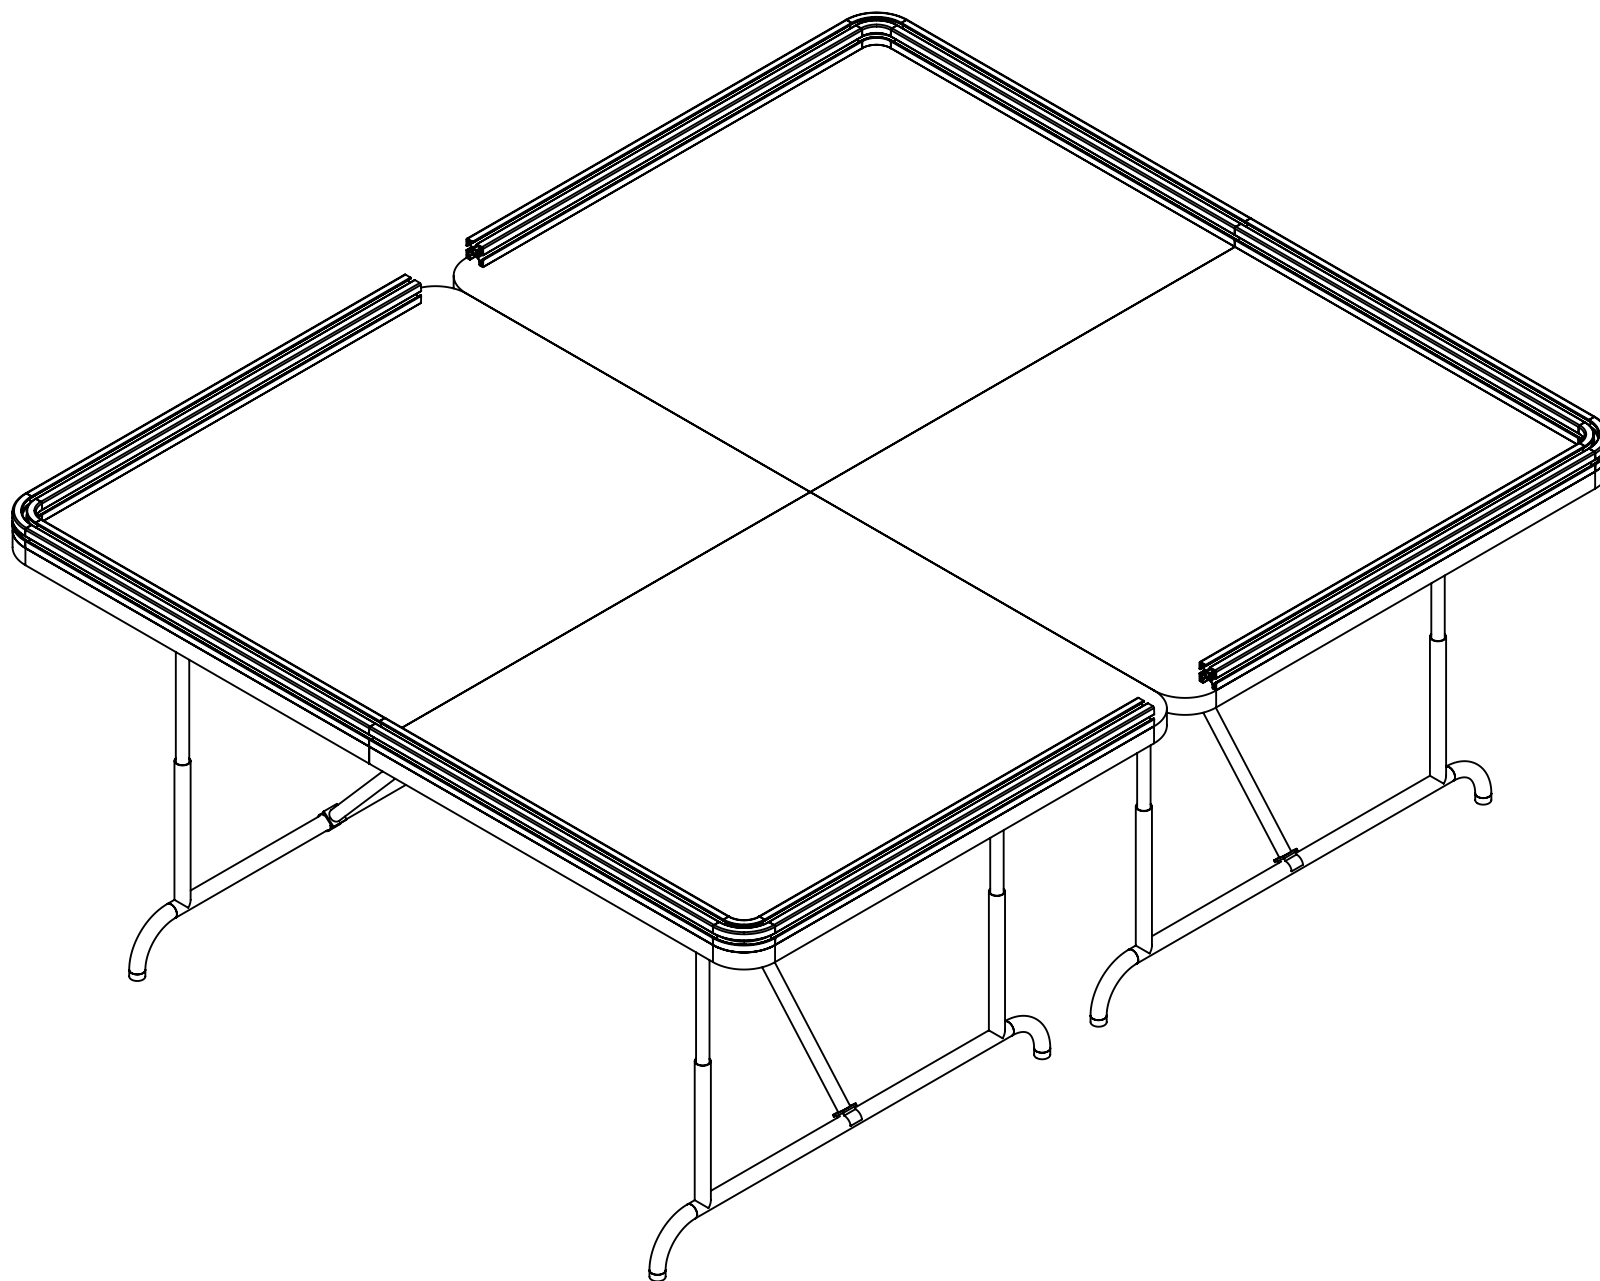


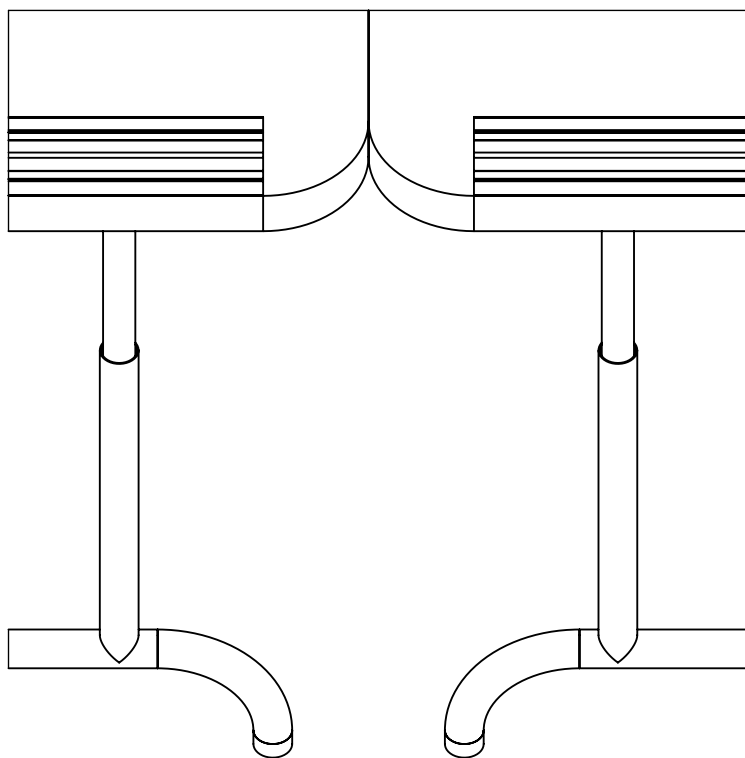


PUSH TABLES TOGETHER

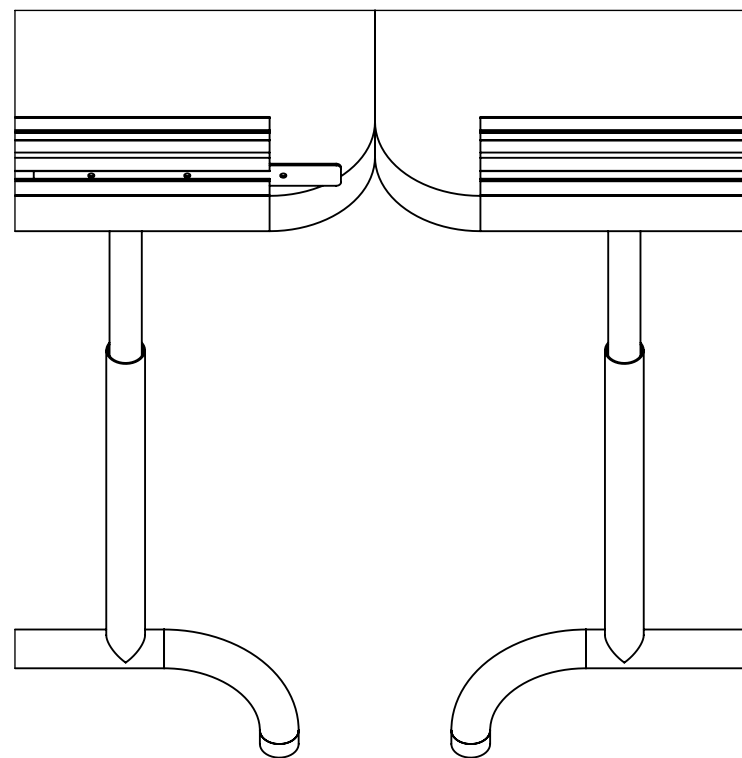


SLIDE MOUNTING PLATE INTO ONE SIDE

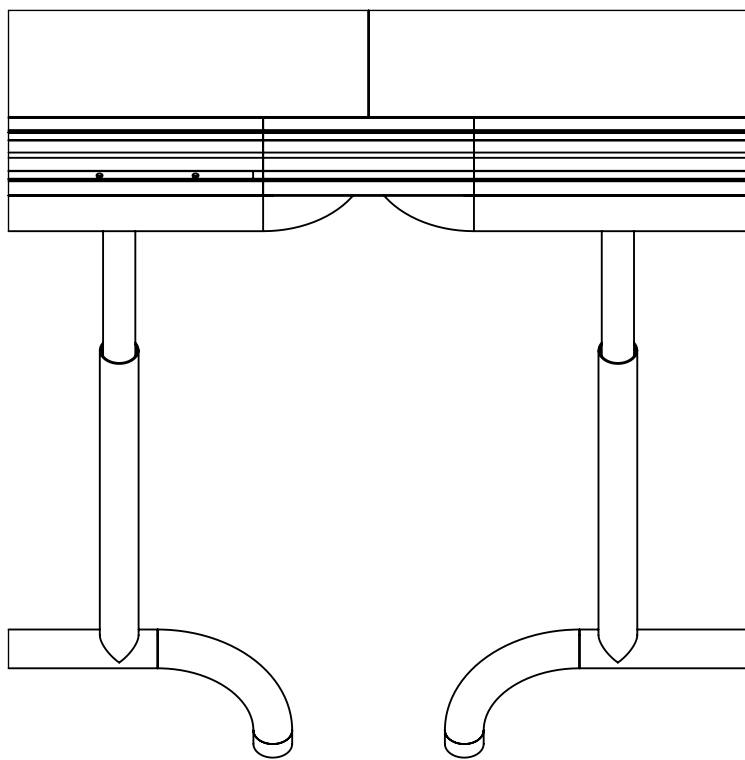


INSERT RAIL SEGMENT

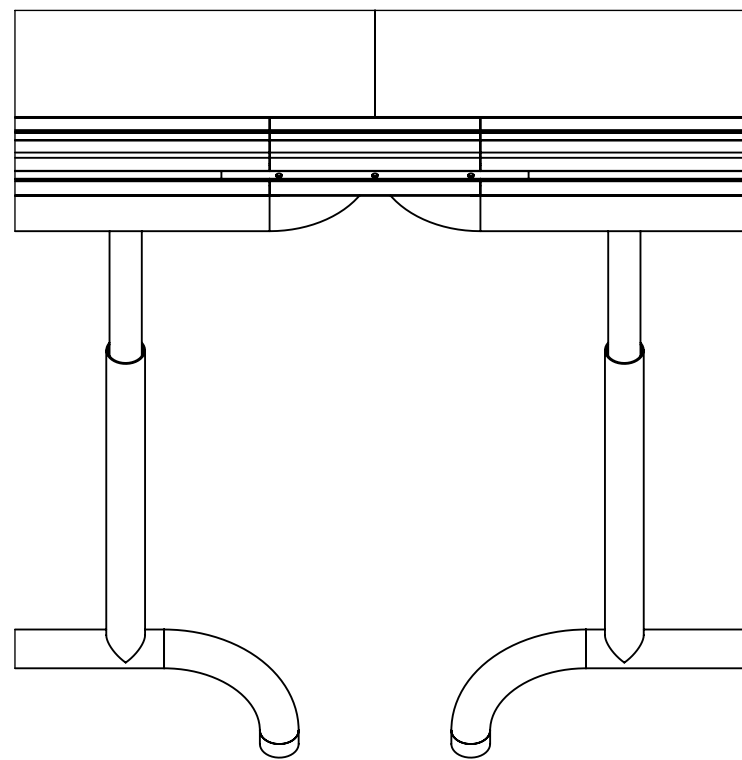


CENTER MOUNTING PLATE IN RAIL SEGMENT

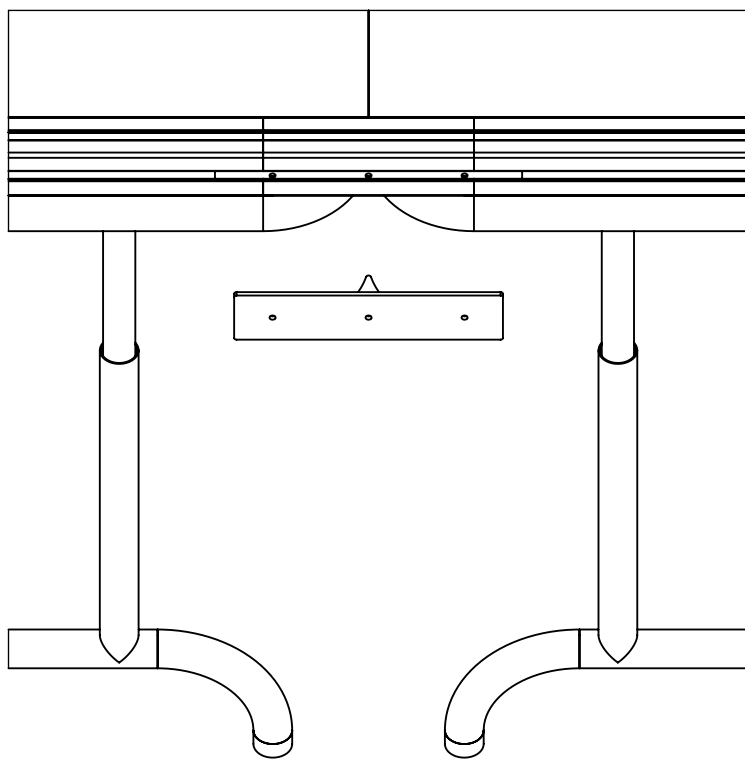


ADD JOINING PLATE BETWEEN TABLES

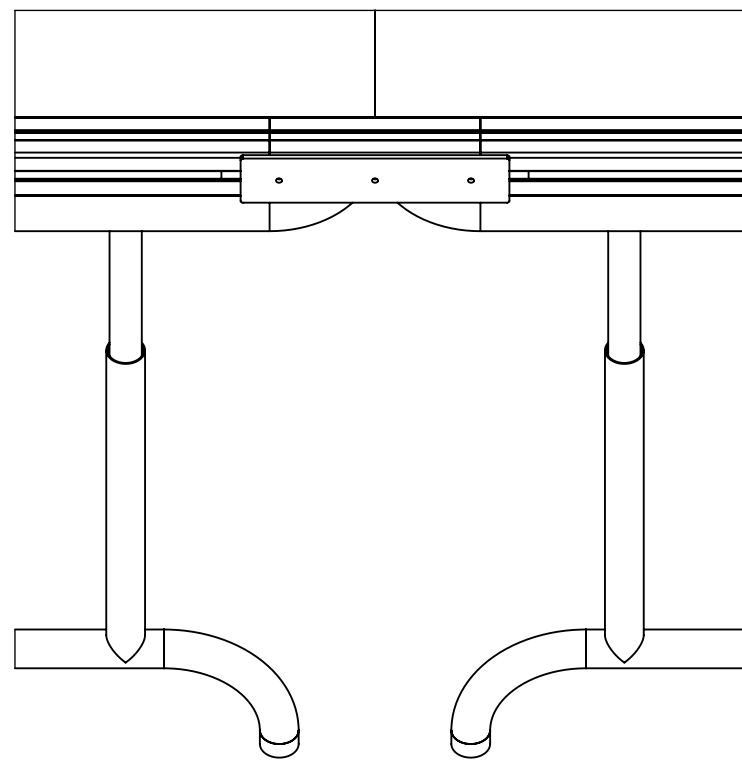




ALIGN JOINING PLATE HOLES WITH MOUNTING PLATE HOLES

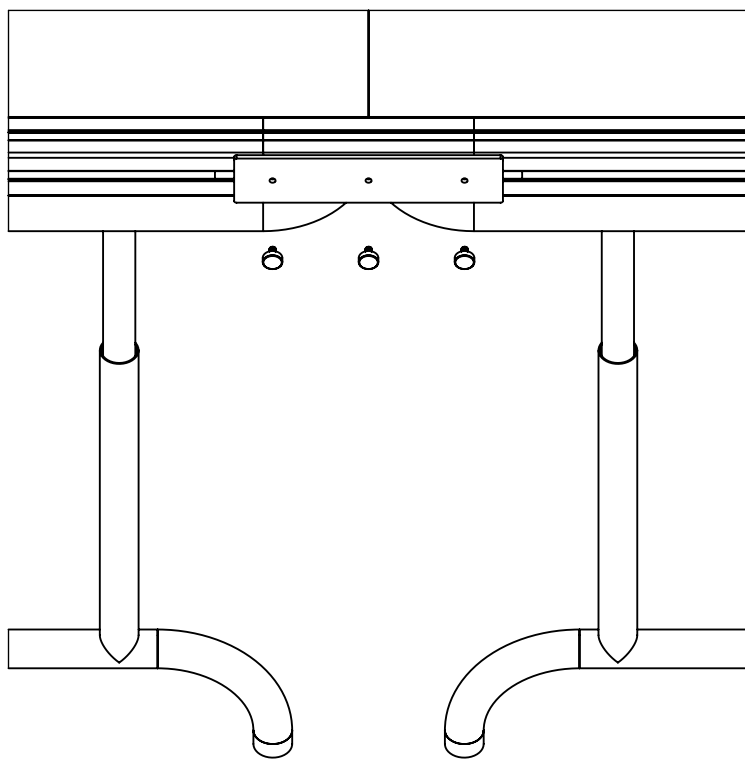


ADD THUMB SCREWS

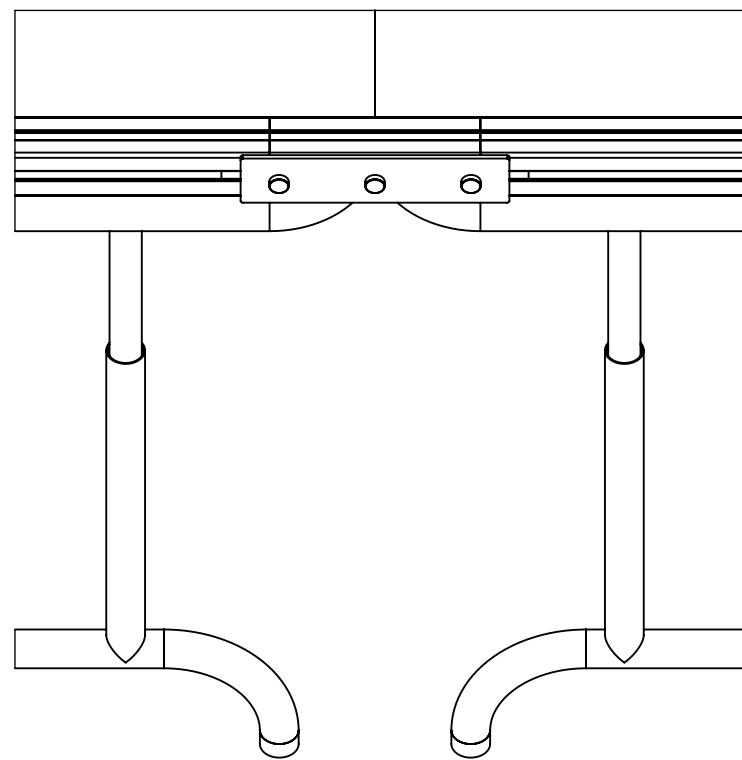


FINGER TIGHTEN THUMB SCREWS

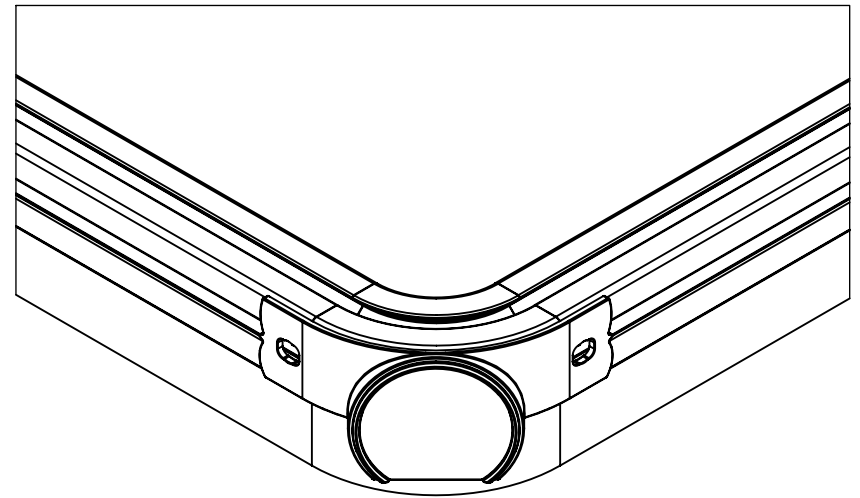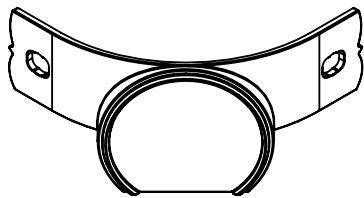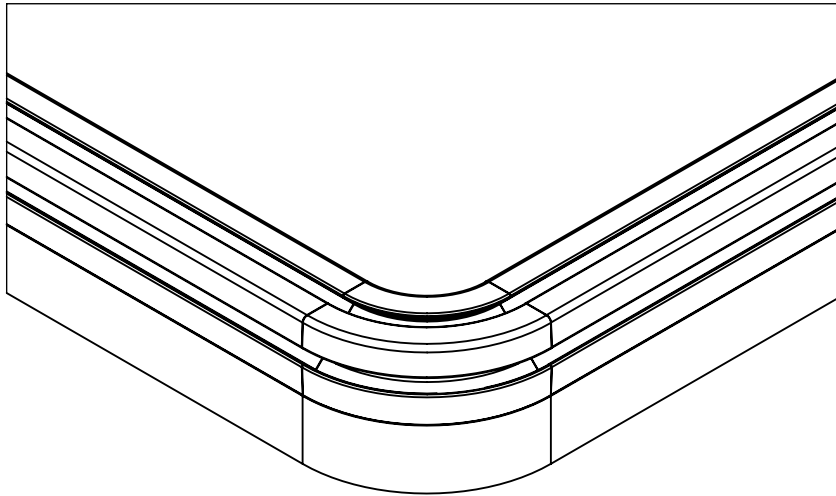


PLACE CORNER DECOR ON TABLE CORNER

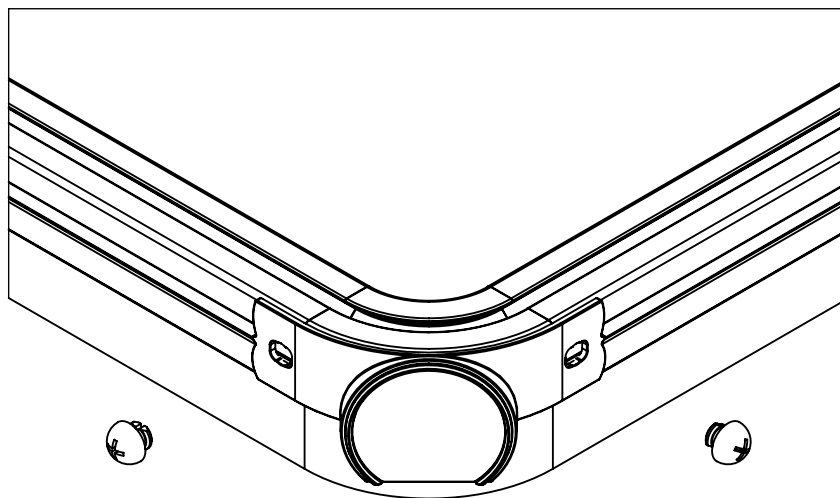

INSERT INCLUDED SCREWS THROUGH
CORNER DECOR AND INTO THE RAILS


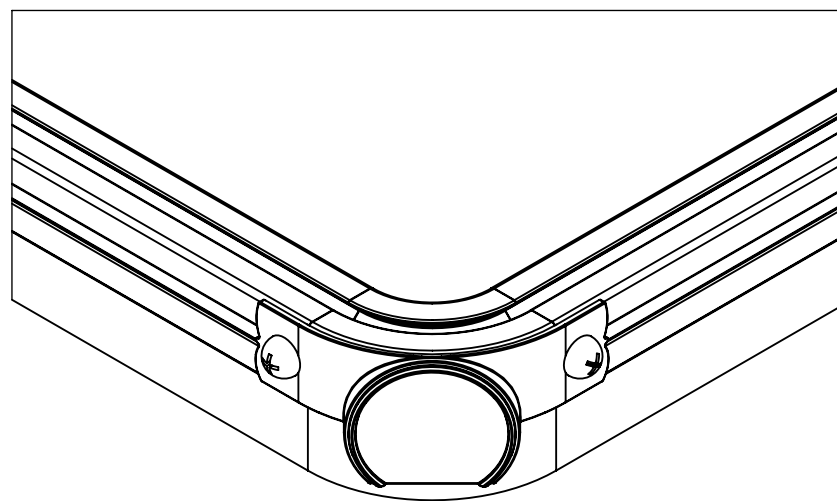


TURN SCREWS 1/4 TURN TO SECURE CORNER DECOR

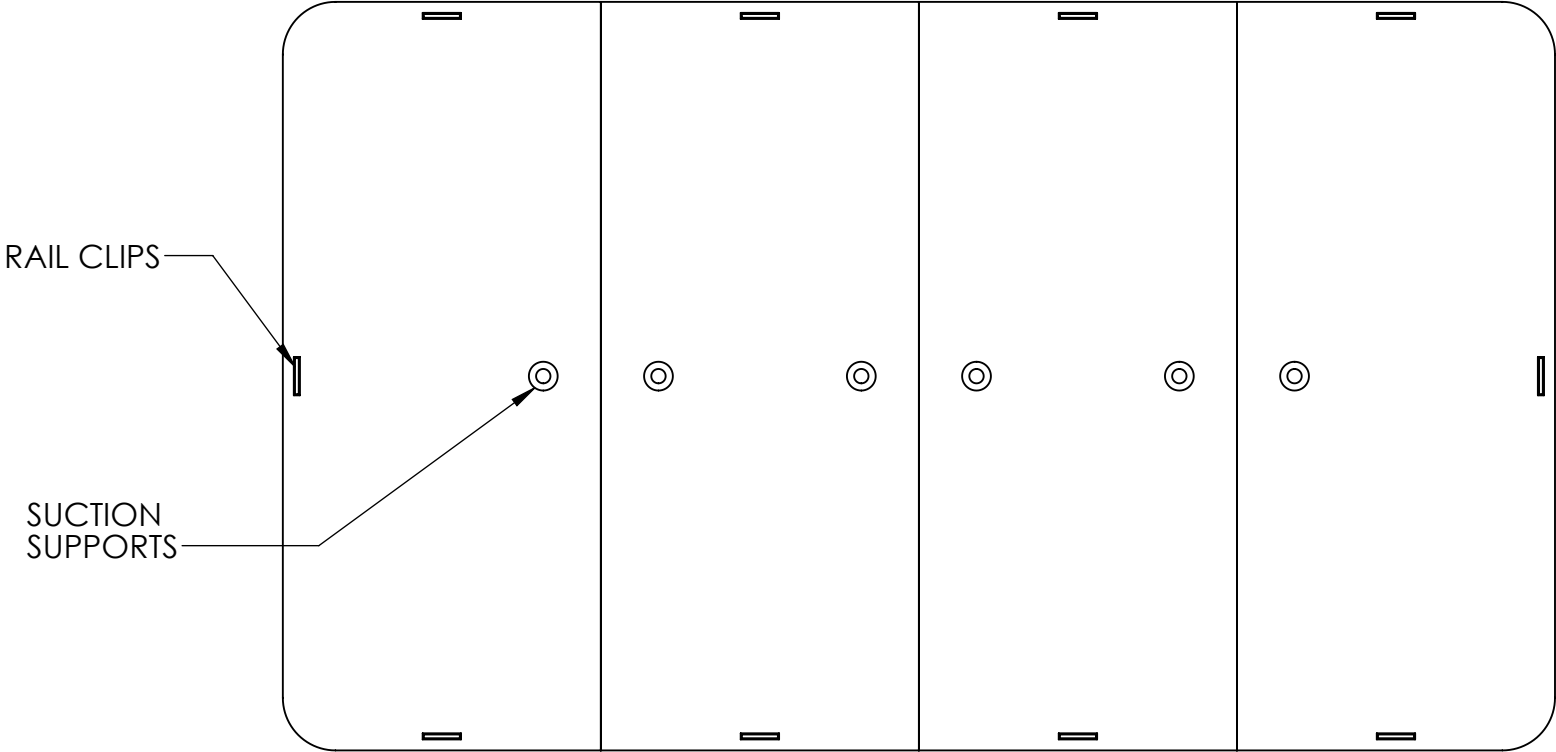

VIEW OF UNDERSIDE OF TABLE TOPPERS

MATCH SEAMS TOGETHER
THEN LAY FLAT

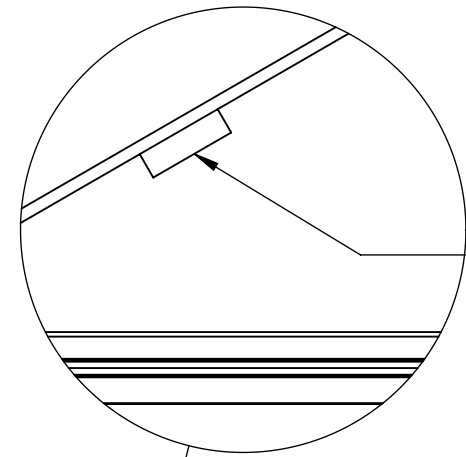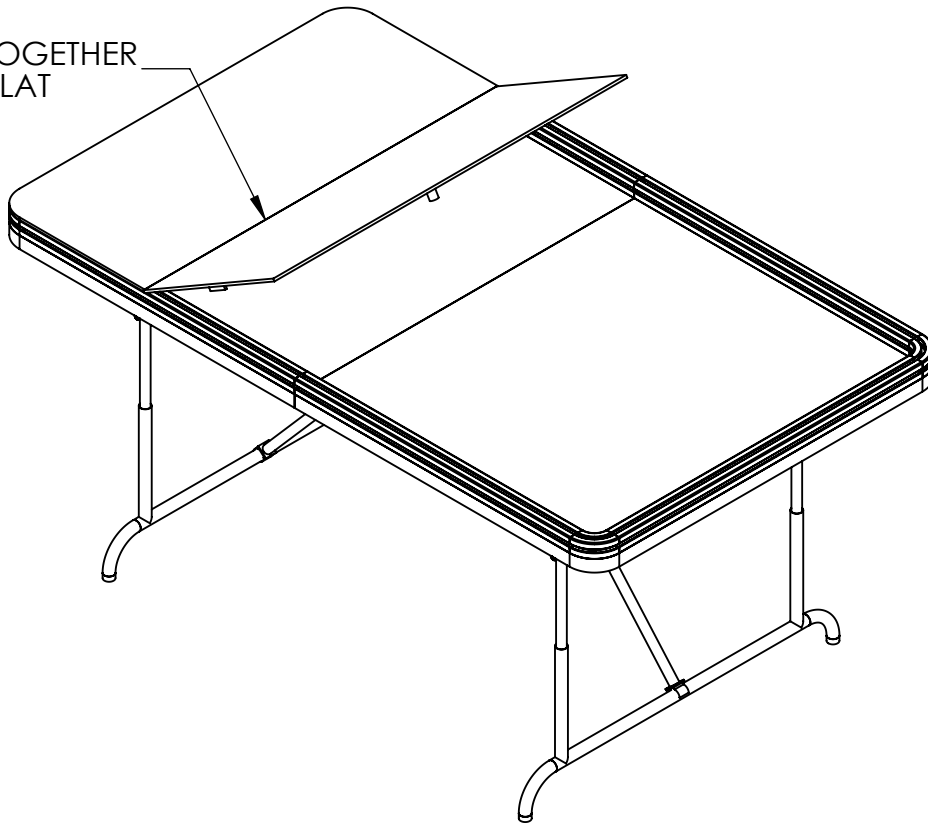

PRESS BOTH CLIPS
INTO RAIL

