

NCASE

T1 Sandwich Kit Version 2.5


Flatpack Assembly Manual

Flatpack Assembly Manual

Screw-6

M3 Countersunk Screw

This screw only works for countersunk holes.
This screw allows for a slightly stronger lock.

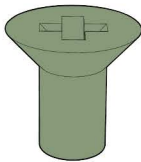


OR

Screw-5

M3 Flat Sunk Screw

This screw works for most of the steps in this manual.
One screw type makes for an easier build experience.

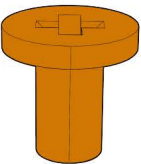


Standoff-5

M3 Standoff Screw-5



Standoff-6

M3 Standoff Screw-6



Standoff-10

M3 Standoff Screw-10



Standoff-20

M3 Standoff Screw-20



Standoff-30

M3 Standoff Screw-30




Standoff-40

M3 Standoff Screw-40



ThumbScrew-10


M3 ThumbScrew

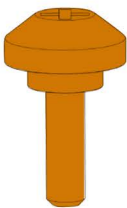

Flatpack Assembly Manual

Extra Accessory


- 14 Fan + Radiator Strut
- 15 Fan + Radiator Bracket
- 16 Glass Window Panel

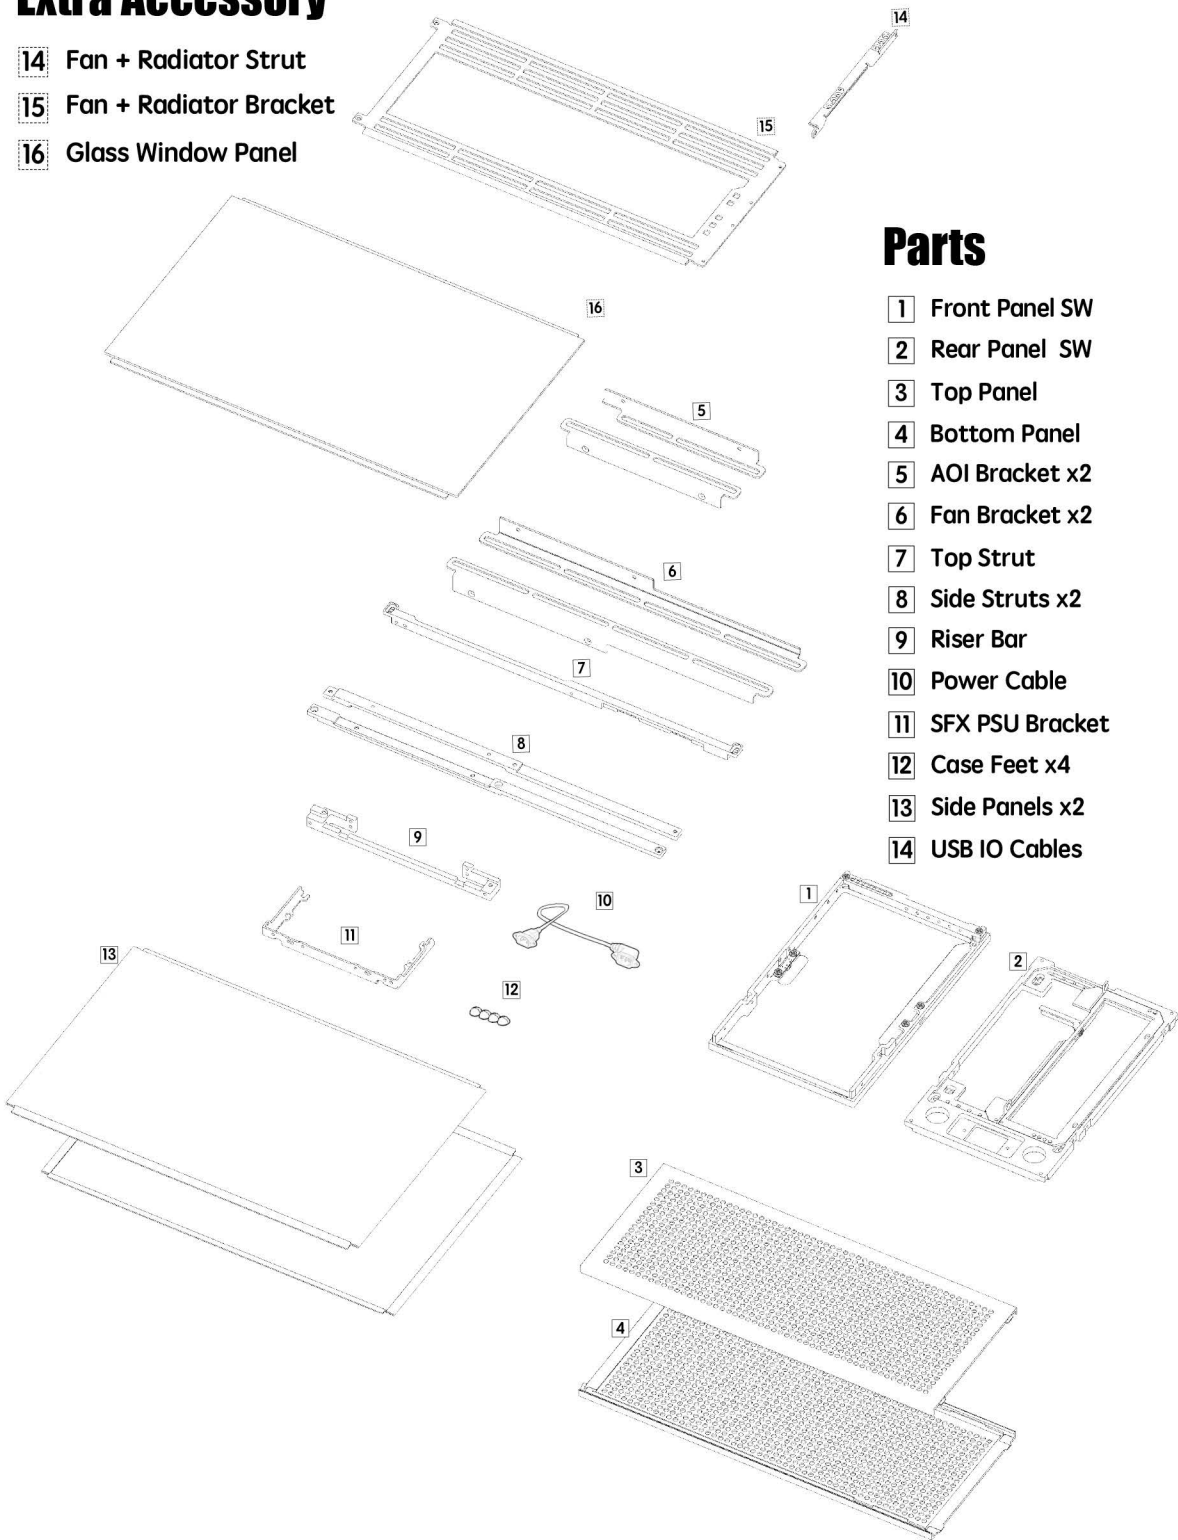

Parts


- 1 Front Panel SW
- 2 Rear Panel SW
- 3 Top Panel
- 4 Bottom Panel
- 5 AOI Bracket x2
- 6 Fan Bracket x2
- 7 Top Strut
- 8 Side Struts x2
- 9 Riser Bar
- 10 Power Cable
- 11 SFX PSU Bracket
- 12 Case Feet x4
- 13 Side Panels x2
- 14 USB IO Cables

Flatpack Assembly Manual

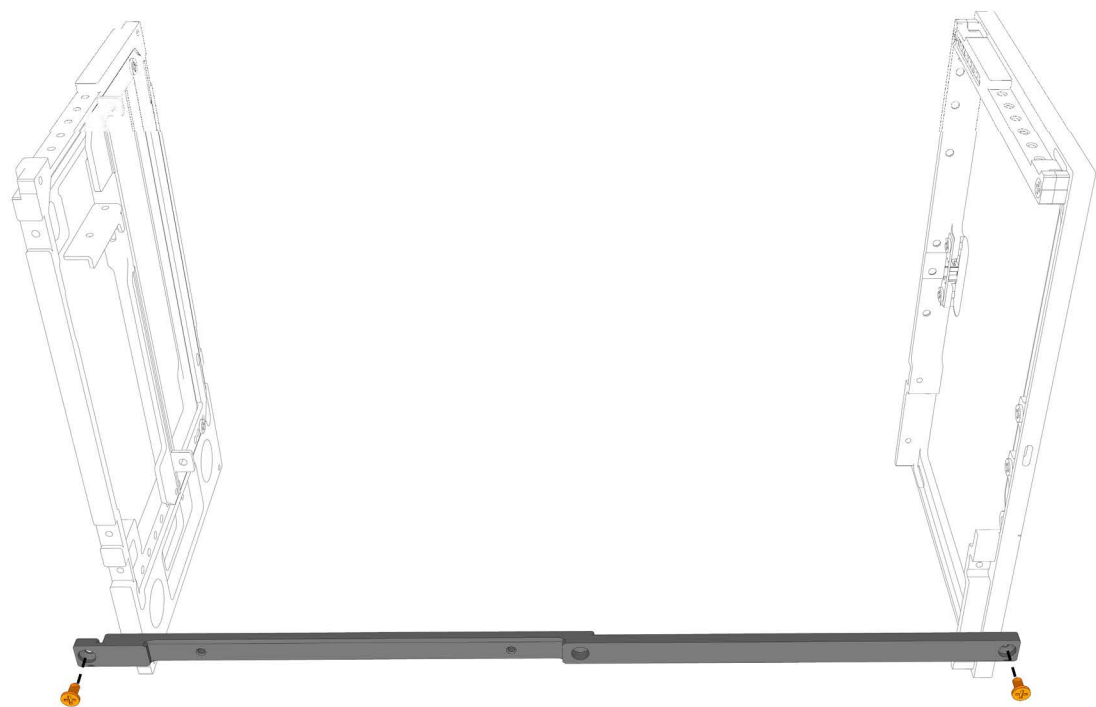

 **X2** or  **X2**
M3-FS-5 M3-CS-6


Flatpack Assembly Manual

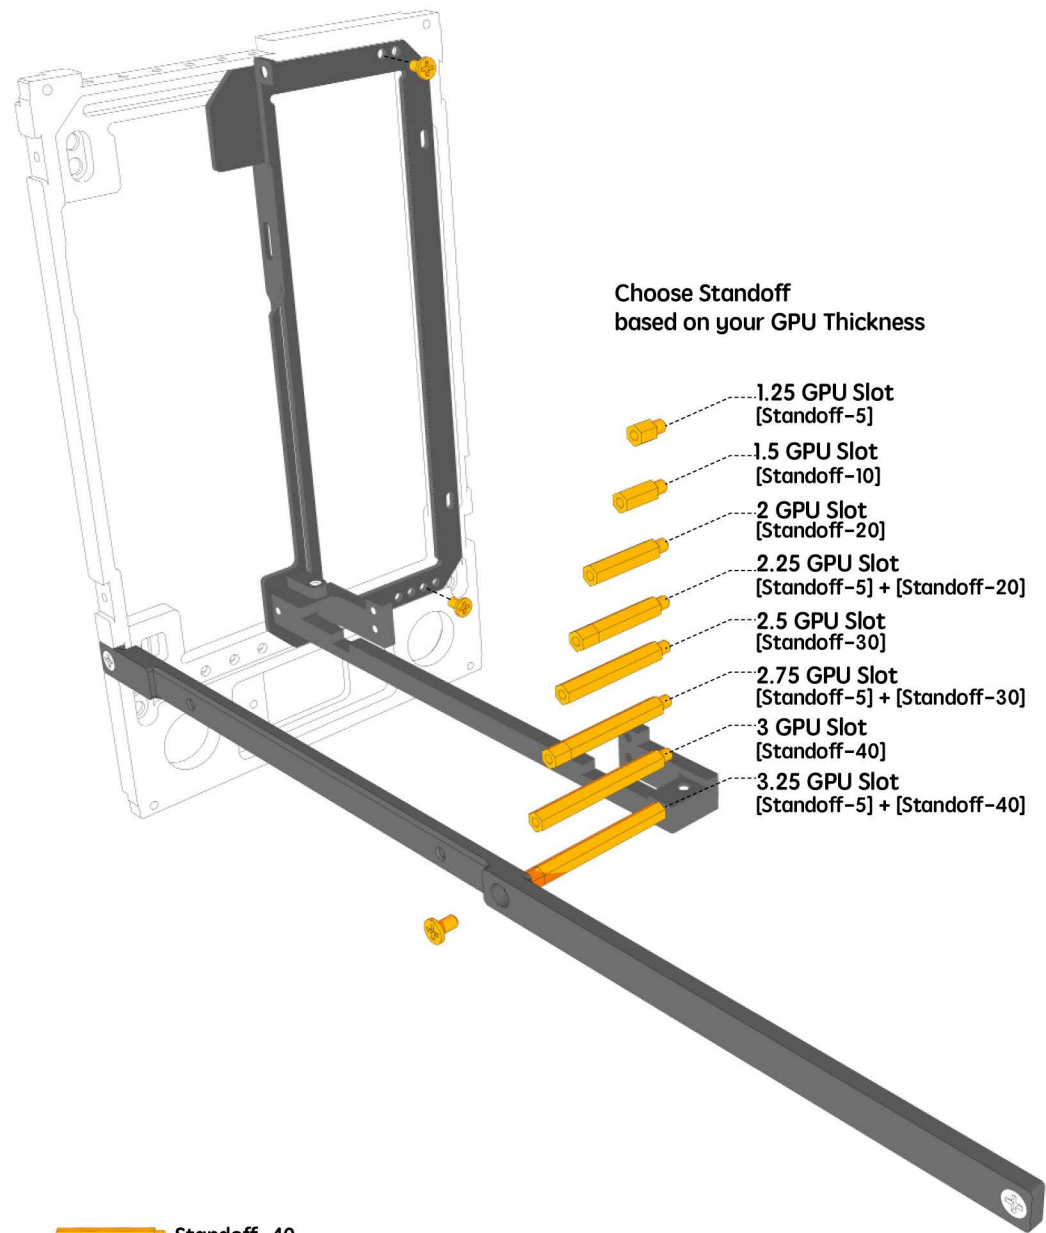

 Standoff-40
 Standoff-30
 Standoff-20
 Standoff-10
 Standoff-5


 **X3**
M3-FS-5

Flatpack Assembly Manual

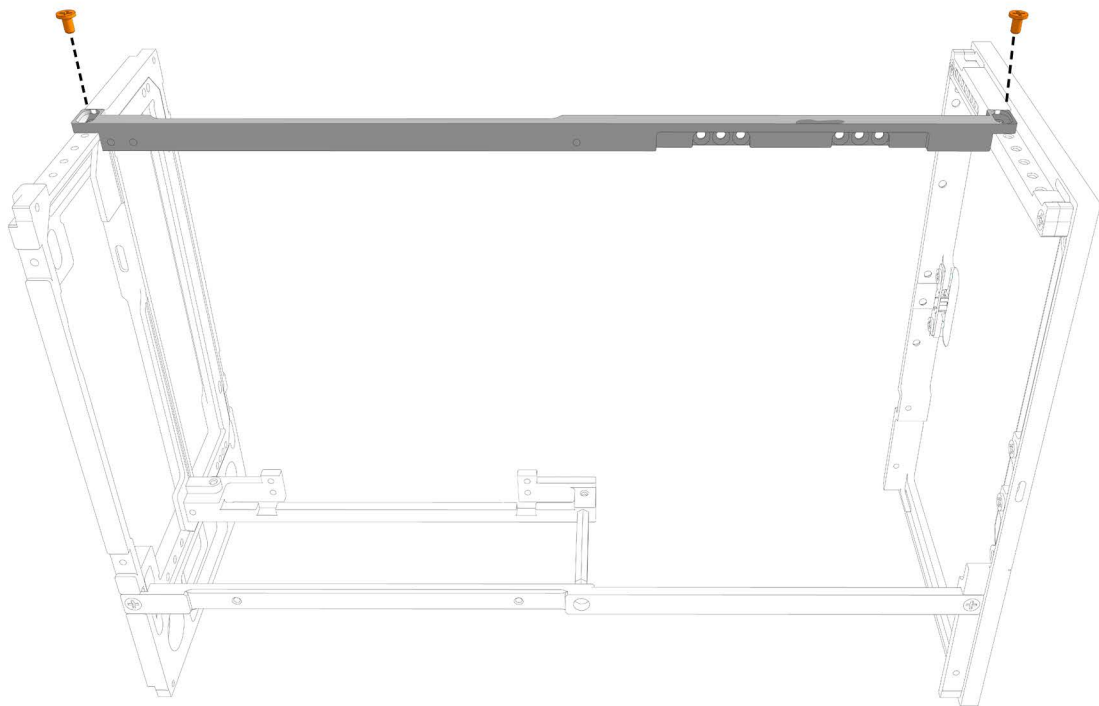


 **X2** or  **X2**
M3-FS-5 M3-CS-6

Flatpack Assembly Manual

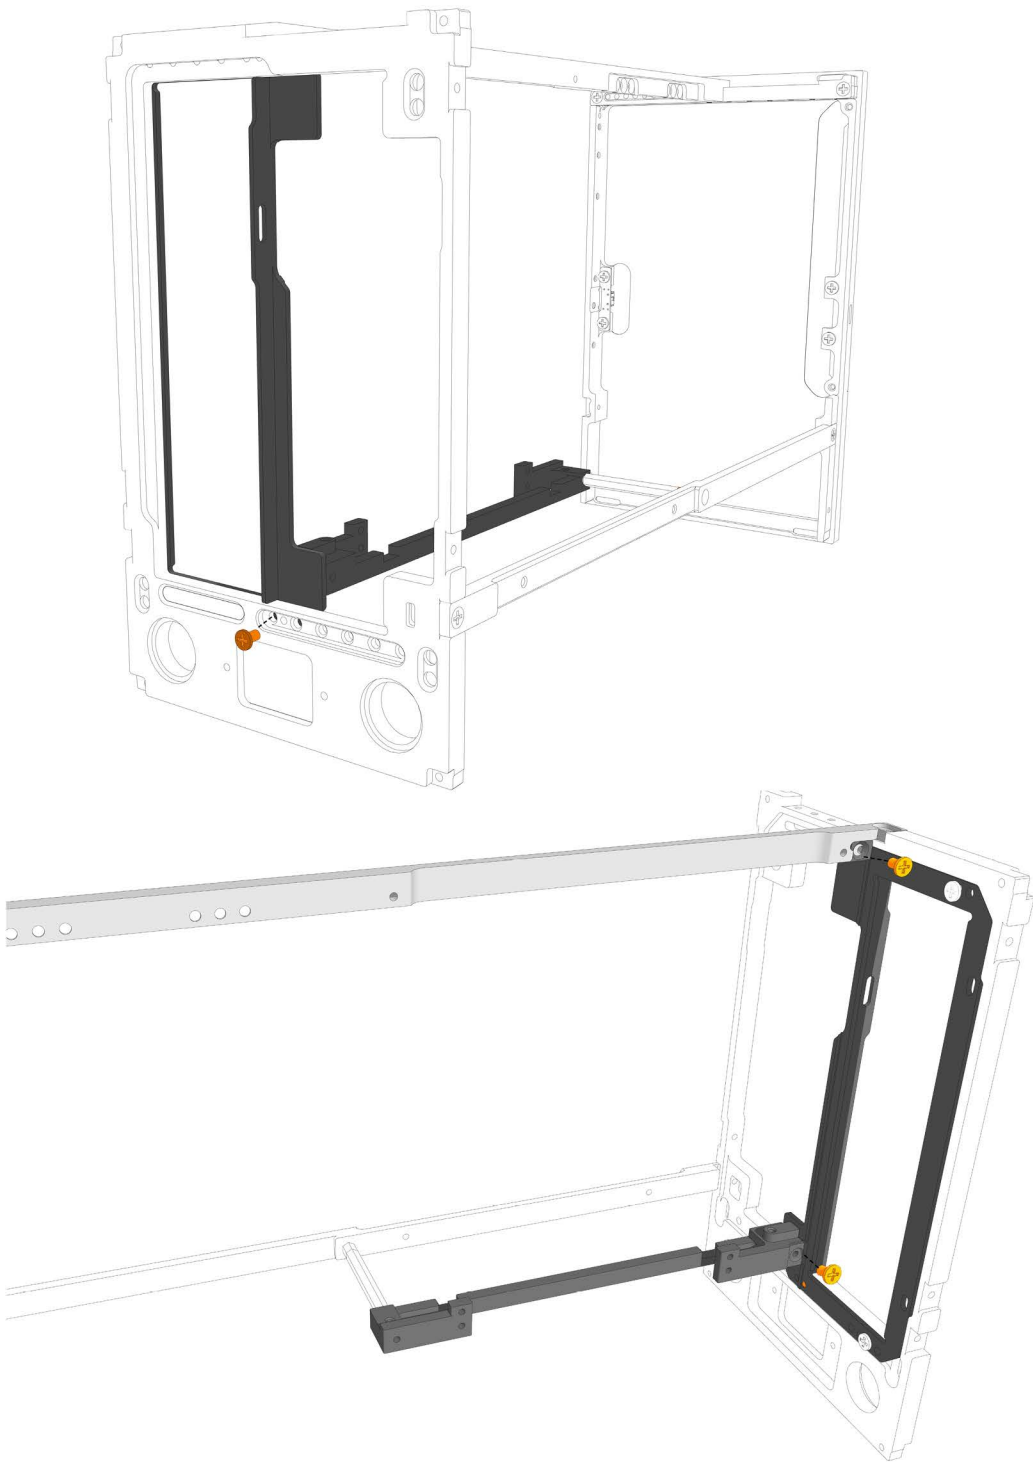

 **X3** or  **X3**
M3-FS-5 M3-CS-6

Flatpack Assembly Manual

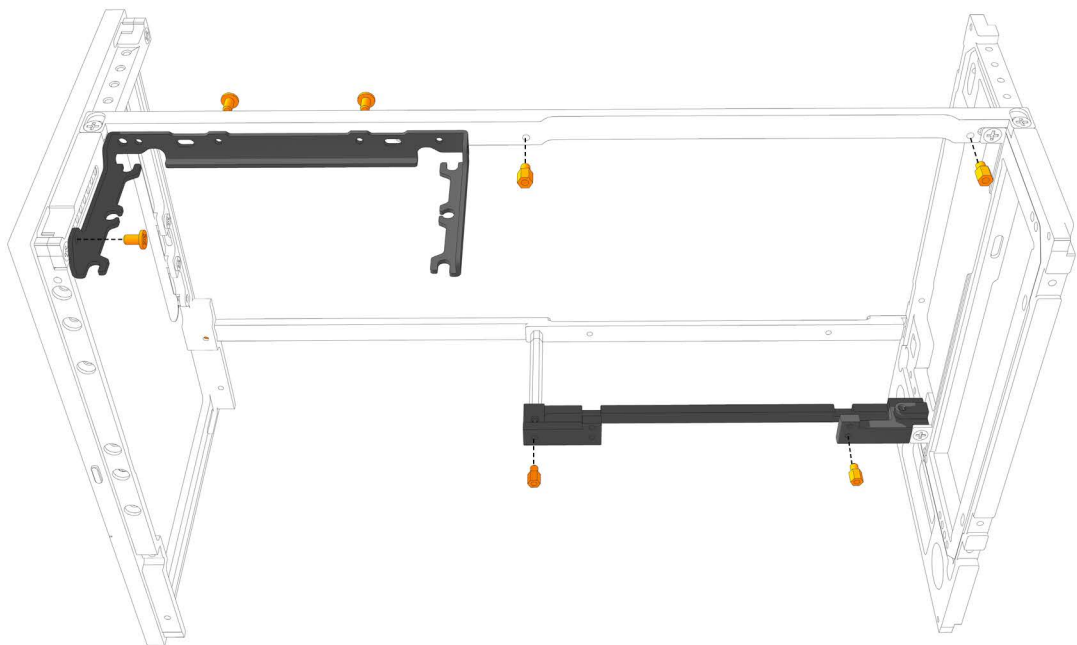

X4


M3-S-6



X3

M3-FS-5

Flatpack Assembly Manual

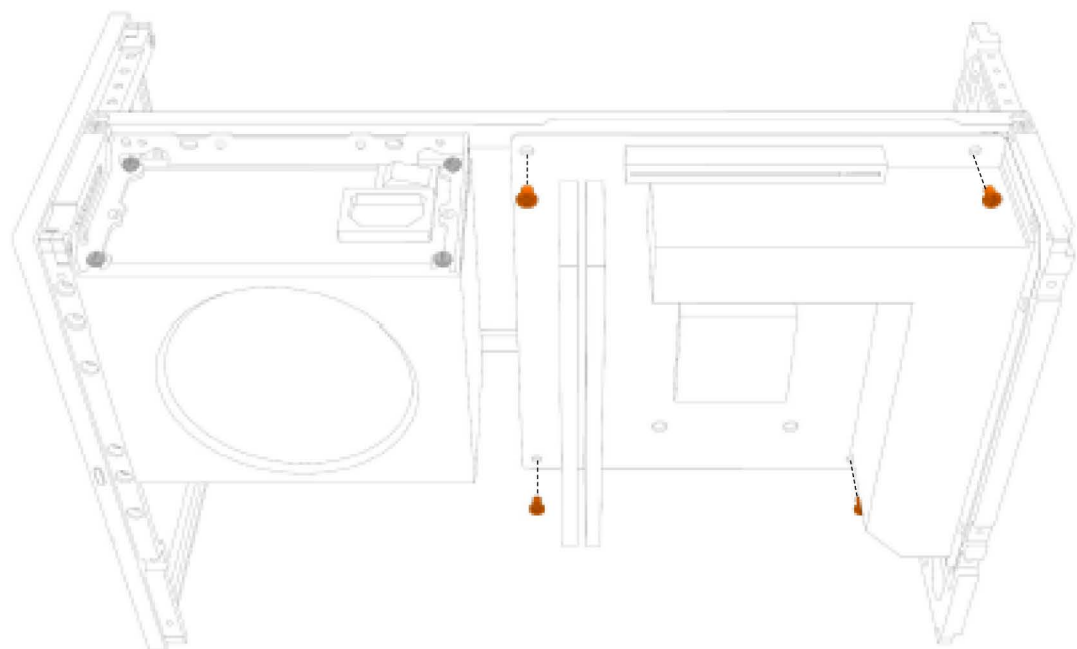


X4

M3-FS-5





#6-32 screw for
the power supply
installation is not
included.

Flatpack Assembly Manual

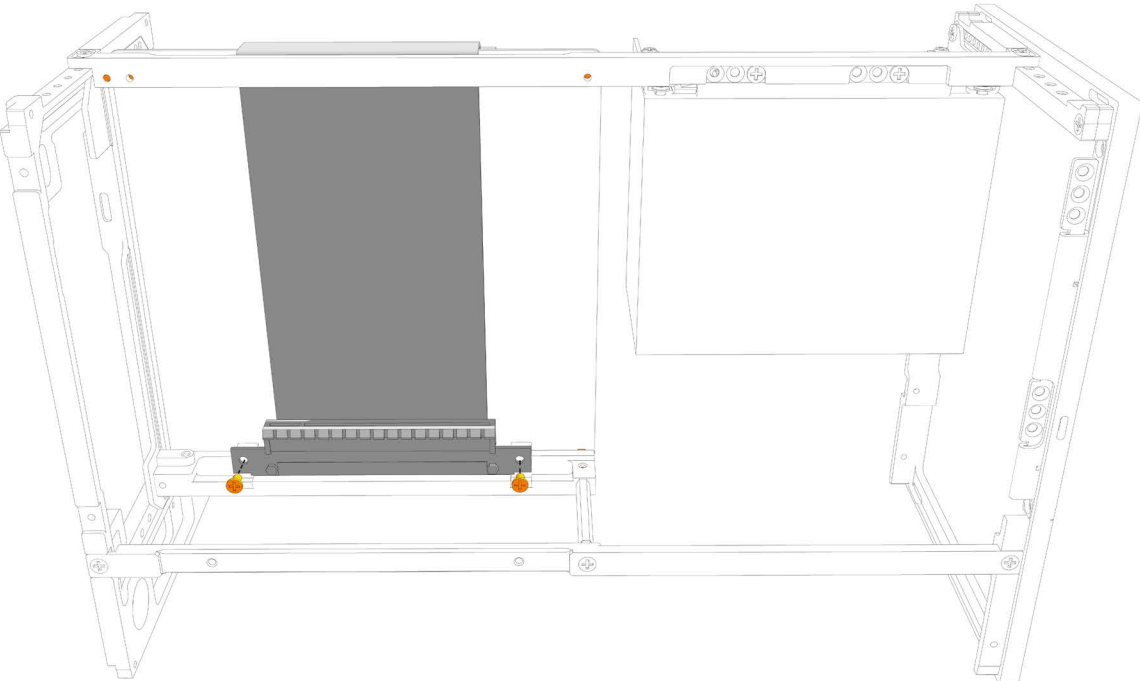


 **X2**
M3-FS-5

Flatpack Assembly Manual

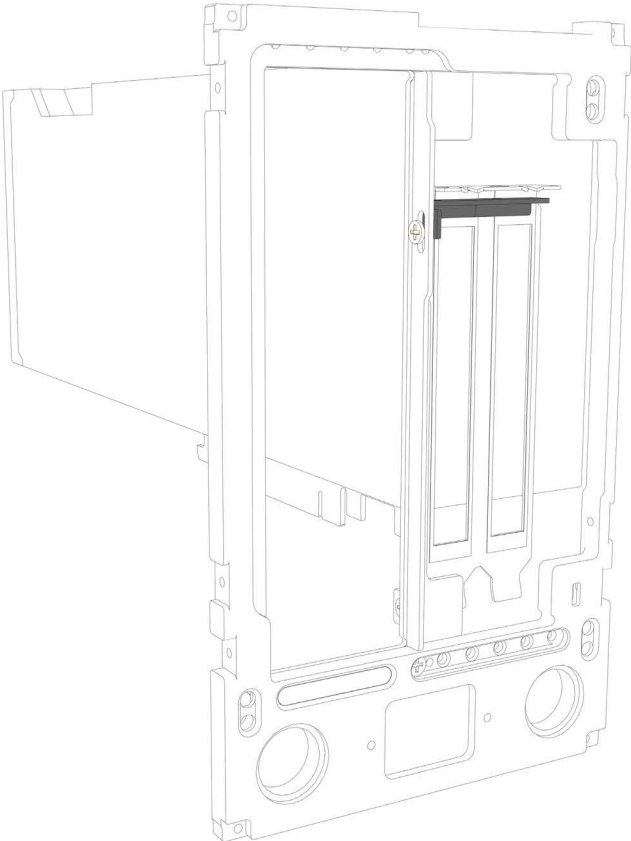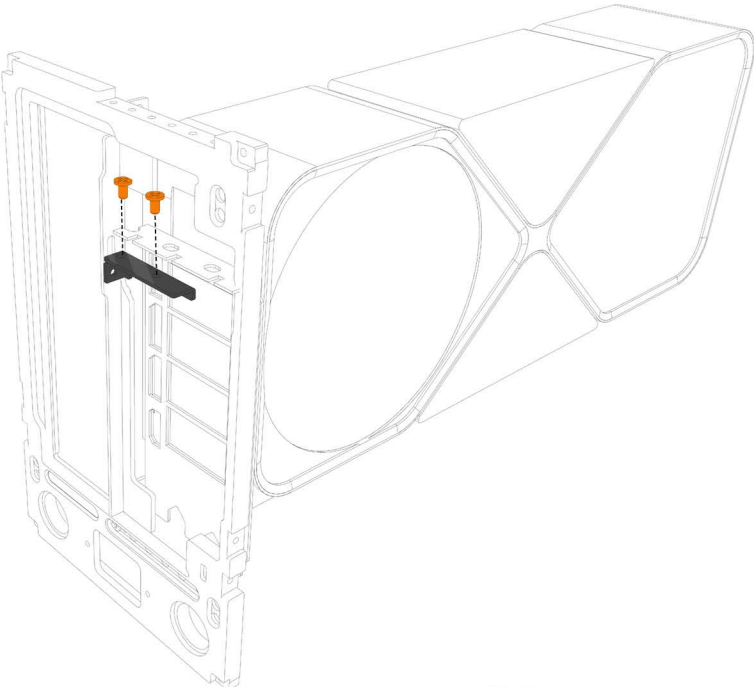


 **X2**
M3-FS-5

Flatpack Assembly Manual

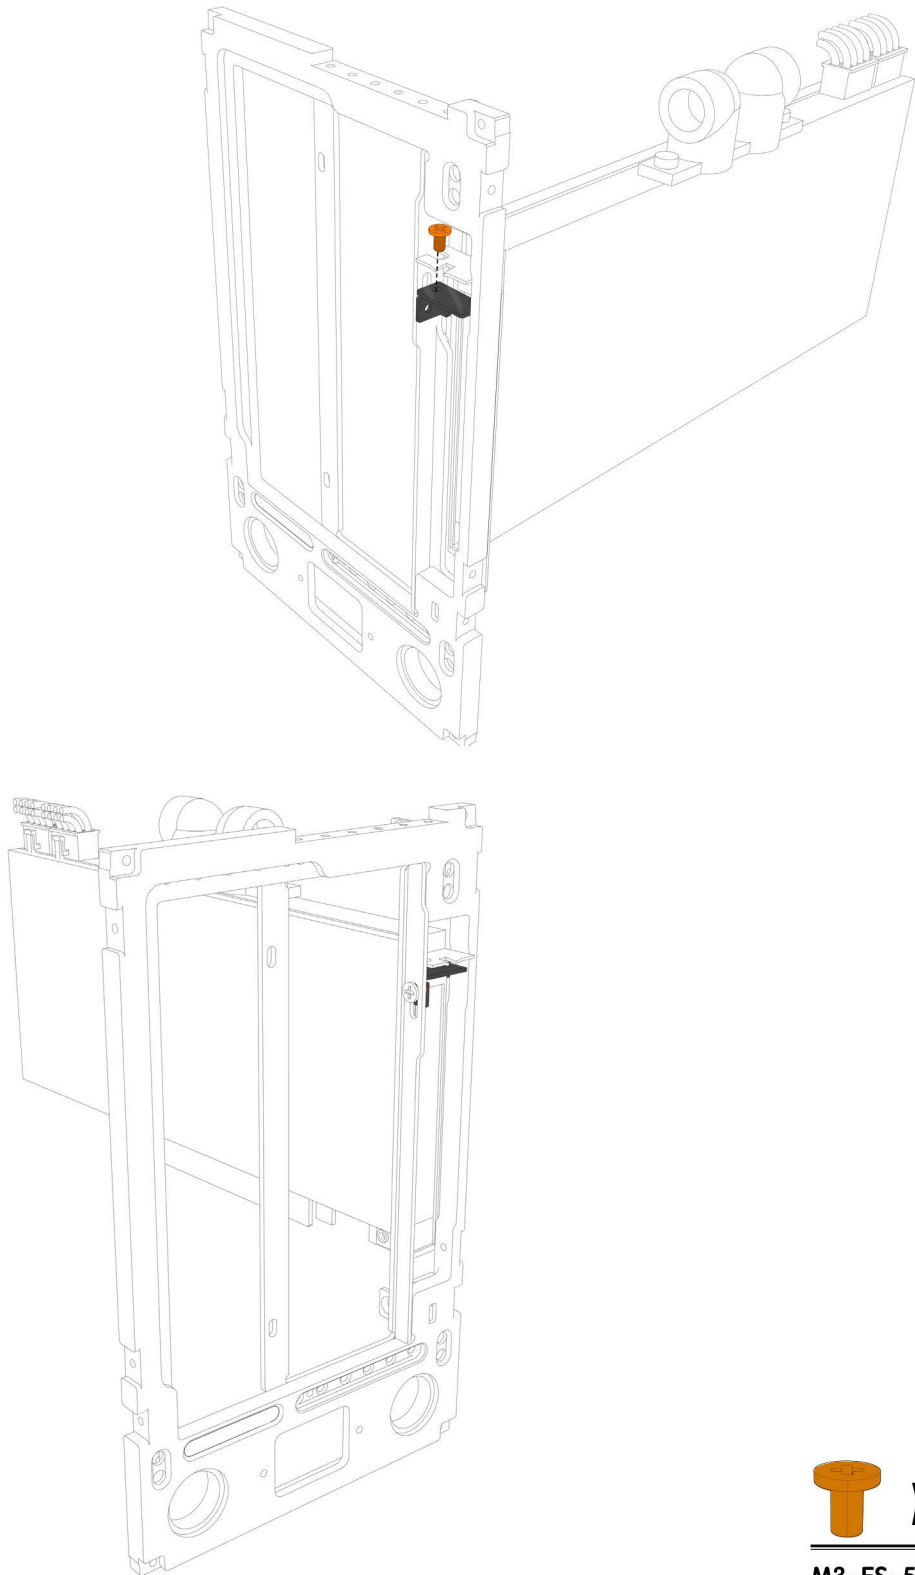


 **X1**
M3-FS-5

Flatpack Assembly Manual

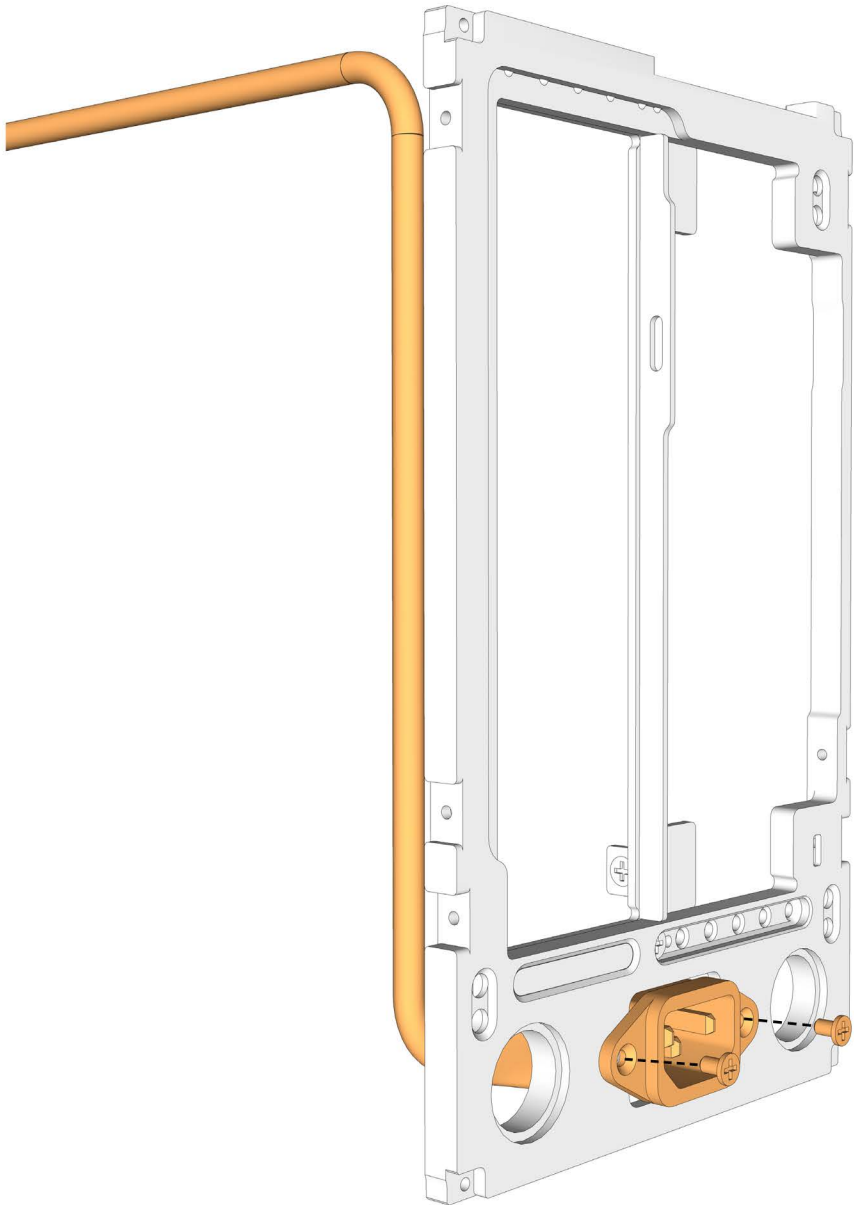


 **X2** or  **X2**
M3-FS-5 M3-CS-6

Flatpack Assembly Manual

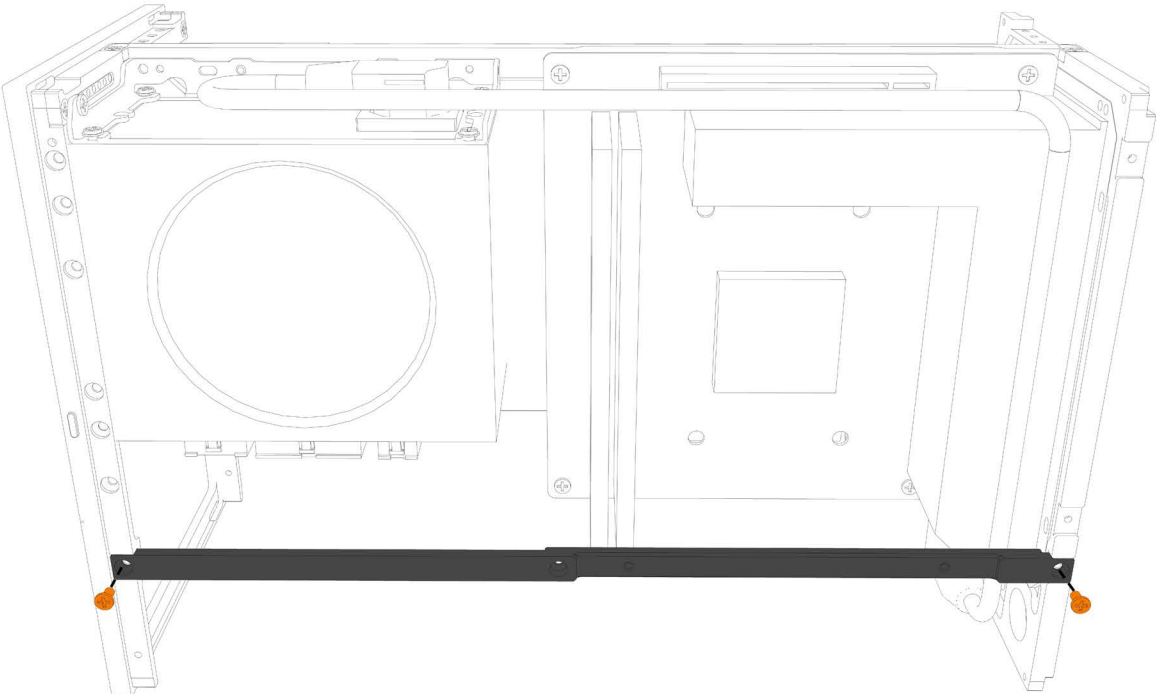

 **X2** or  **X2**
M3-FS-5 M3-CS-6


Flatpack Assembly Manual

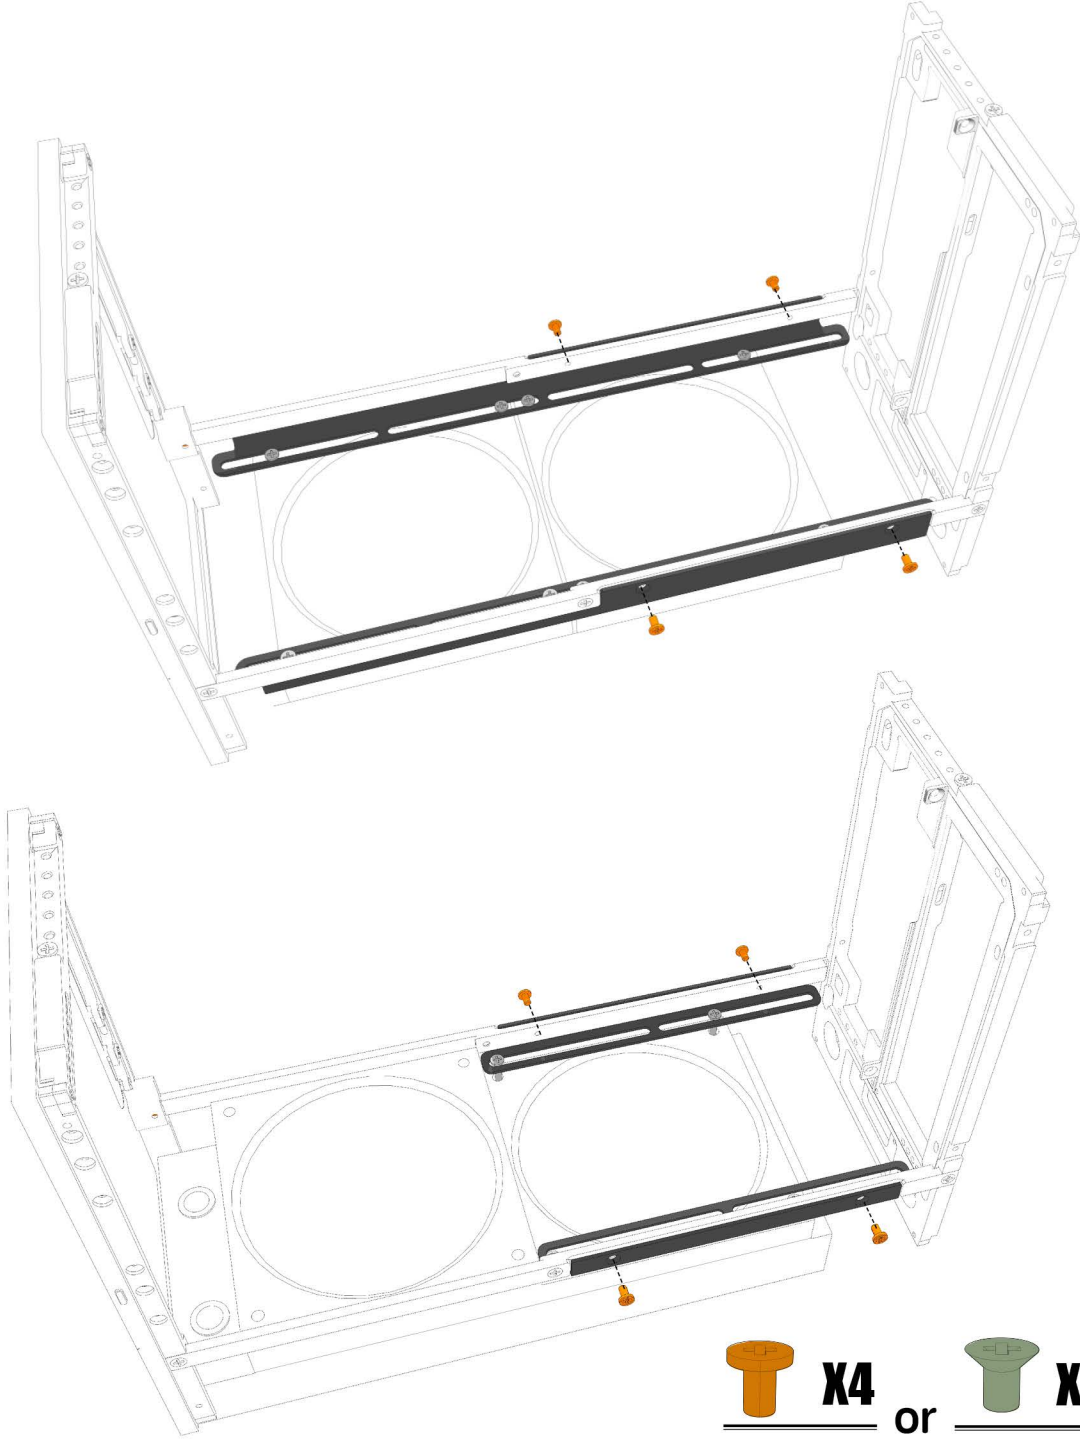


 **X4** or  **X4**
M3-FS-5 M3-CS-6

M5 x 8 screw for
the fan instalation
is not included.


Flatpack Assembly Manual

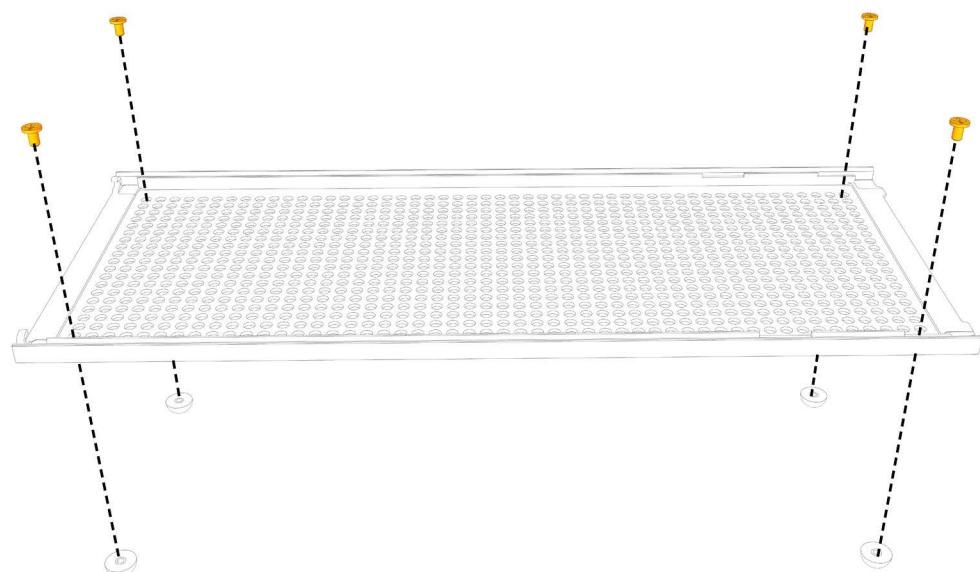




 **X2**
M3-FS-5

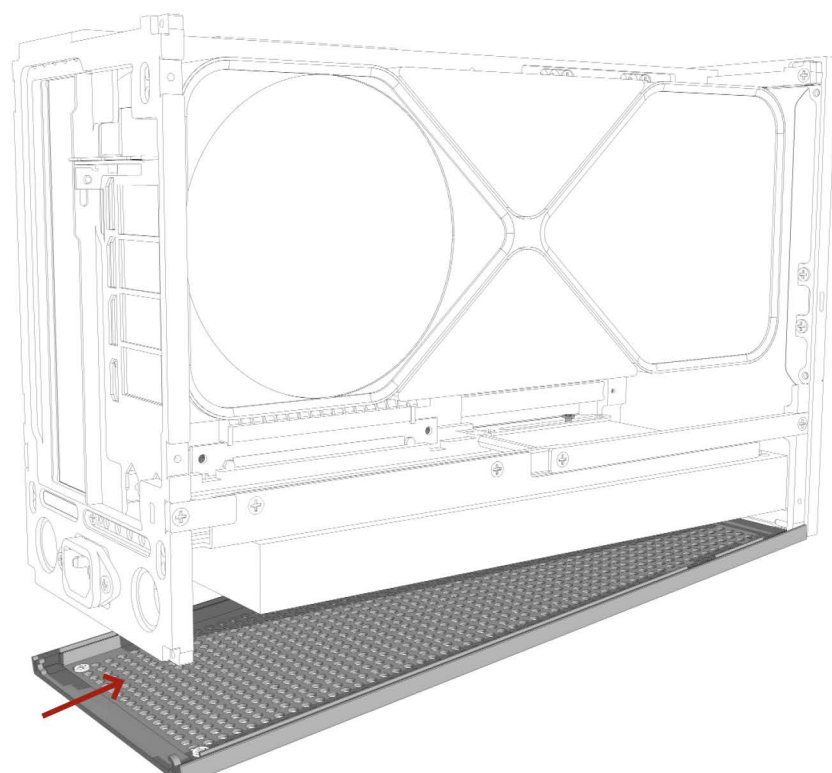

Flatpack Assembly Manual

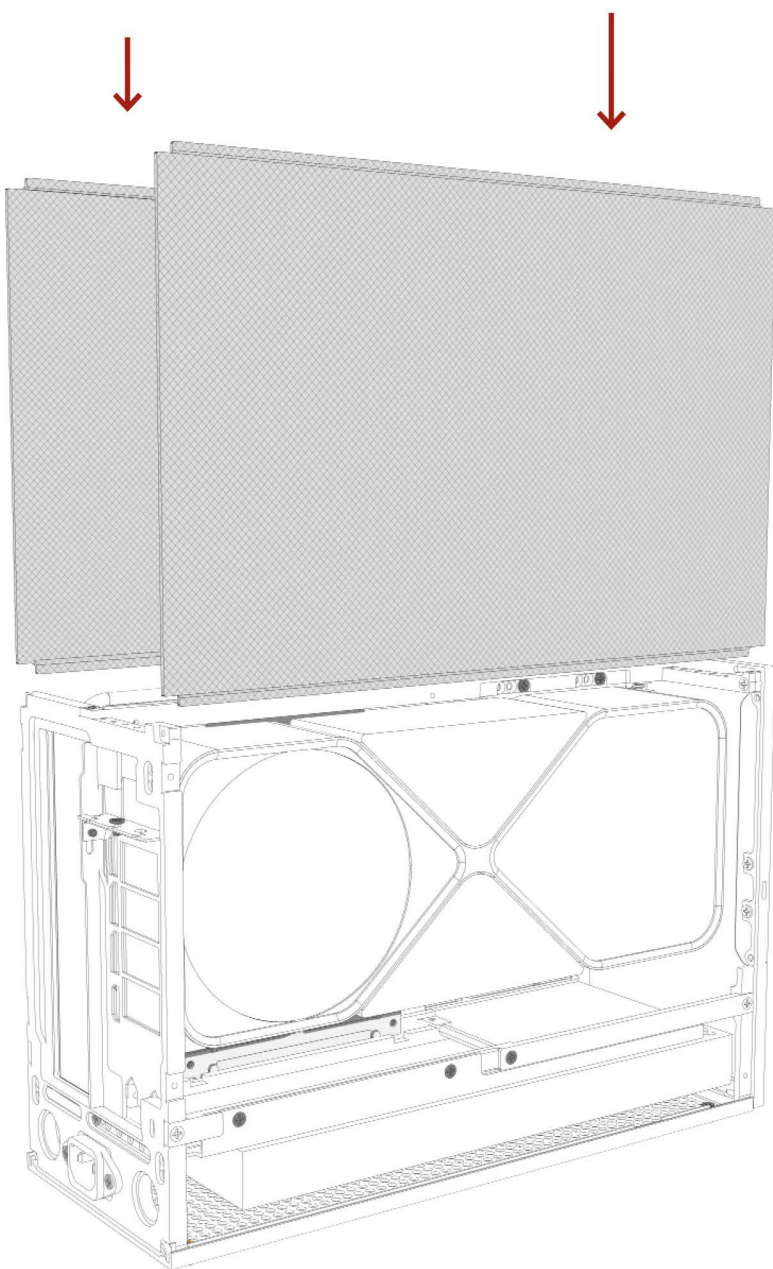

Flatpack Assembly Manual

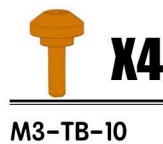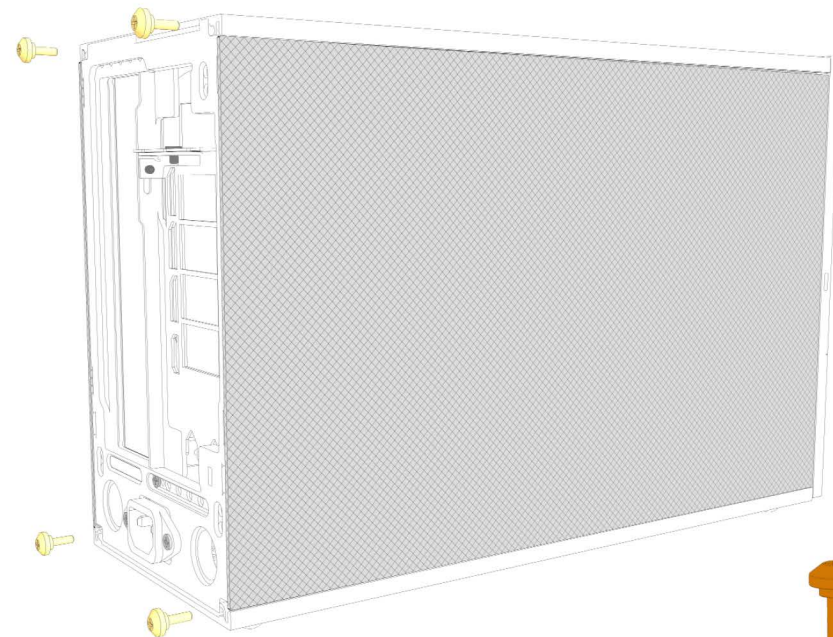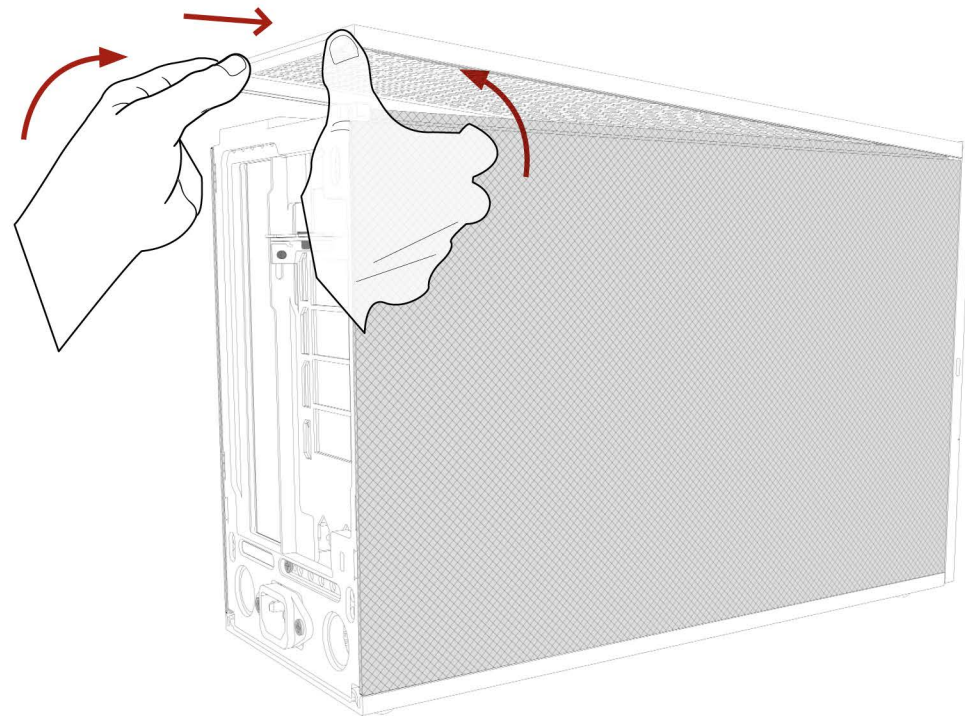

NCASE

**T1 Sandwich Kit
Version 2.5**