

# Ripstop<sup>®</sup> ByTheRoll

## Frontcountry Quilt Kit

Materials list:

- 3 Yards Inner material
- 3 Yards Outer material
- 2x Side Release Buckles
- 10' 3/4" Mil-Spec webbing




Set 1: Cut your material and insulation to size.



Recommended size: 60"x80"



Step 2: Cut 3/4" webbing and attach to each end of the side release buckles.

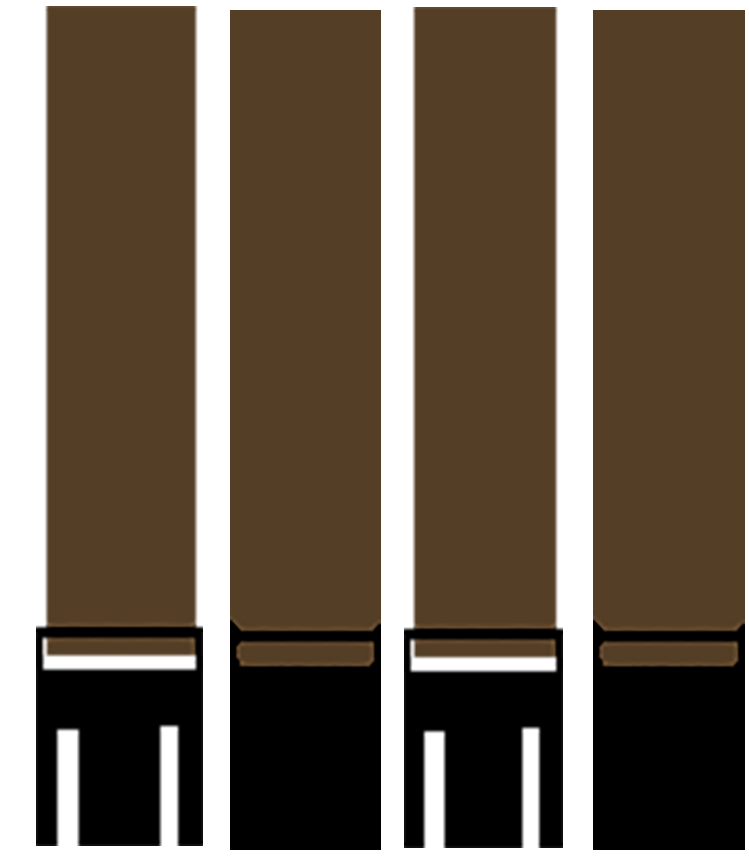


Step 3: Lay down your first piece of fabric (with the correct side up)  
Lay the Grosgrain/Side release buckles down as shown.

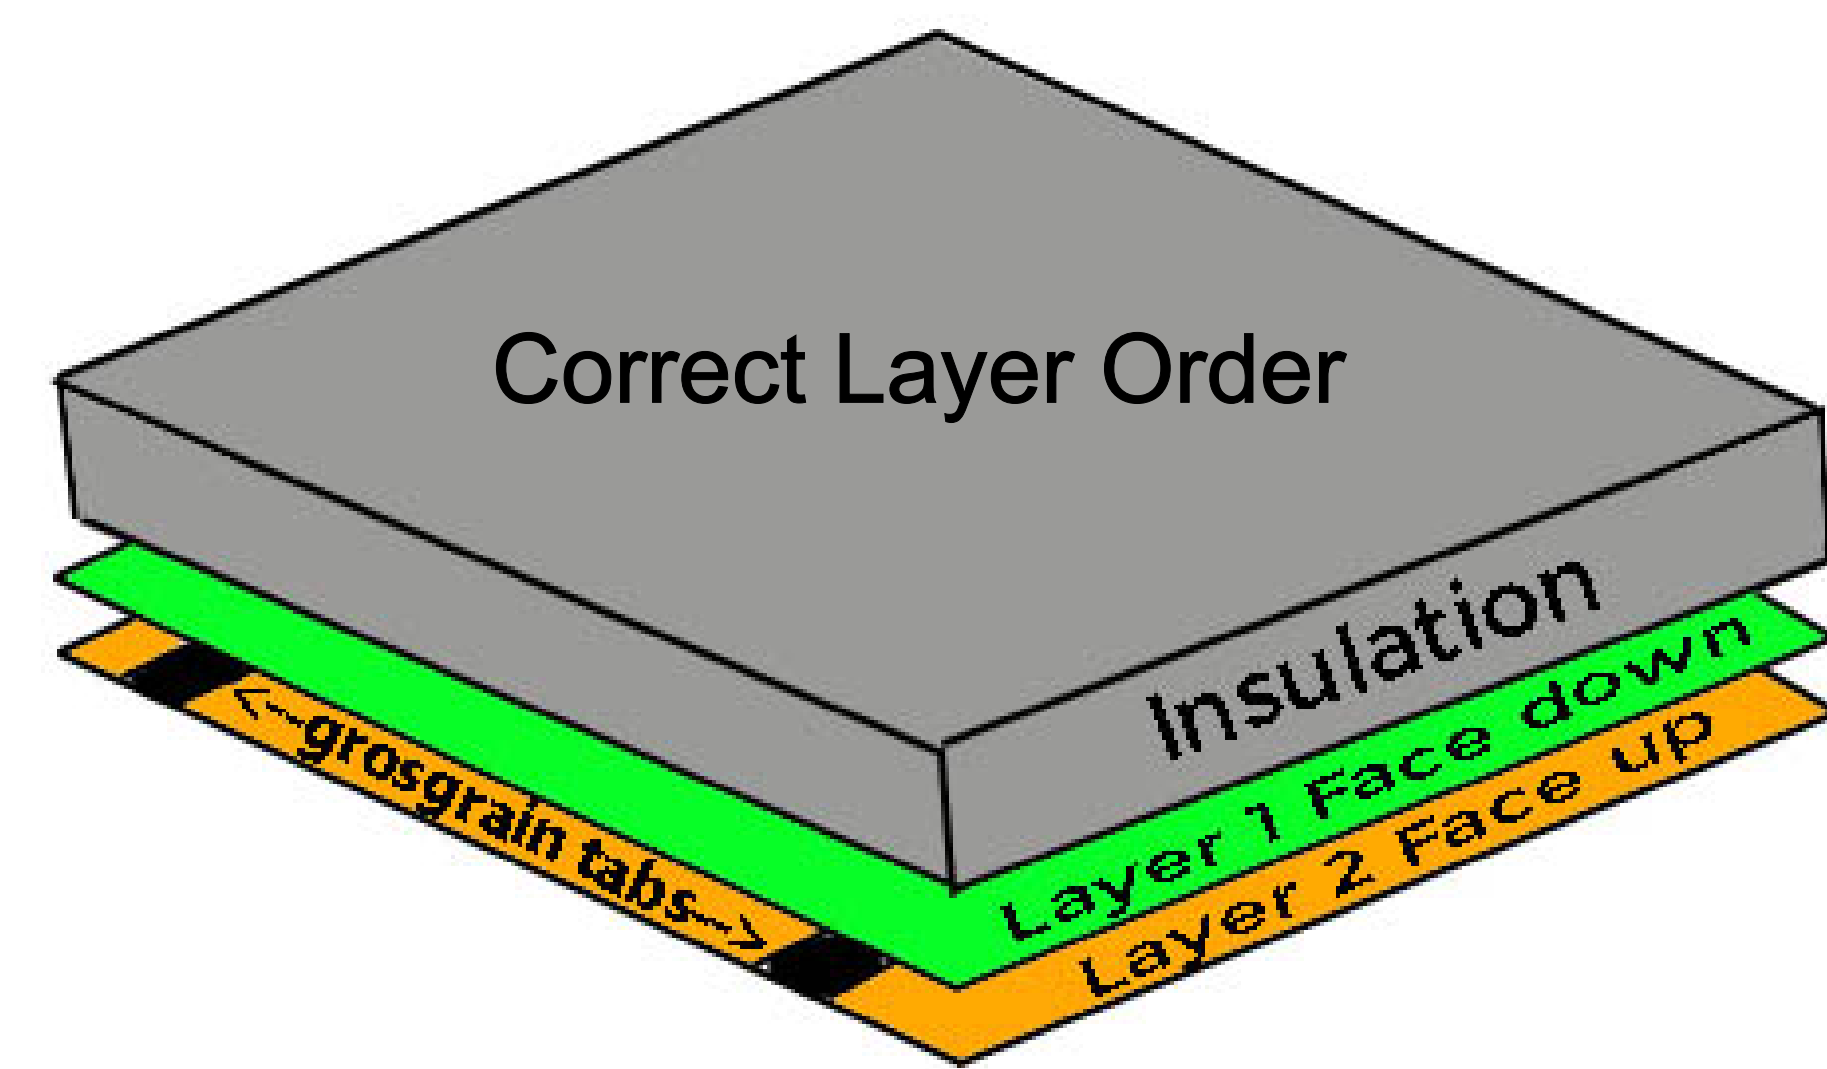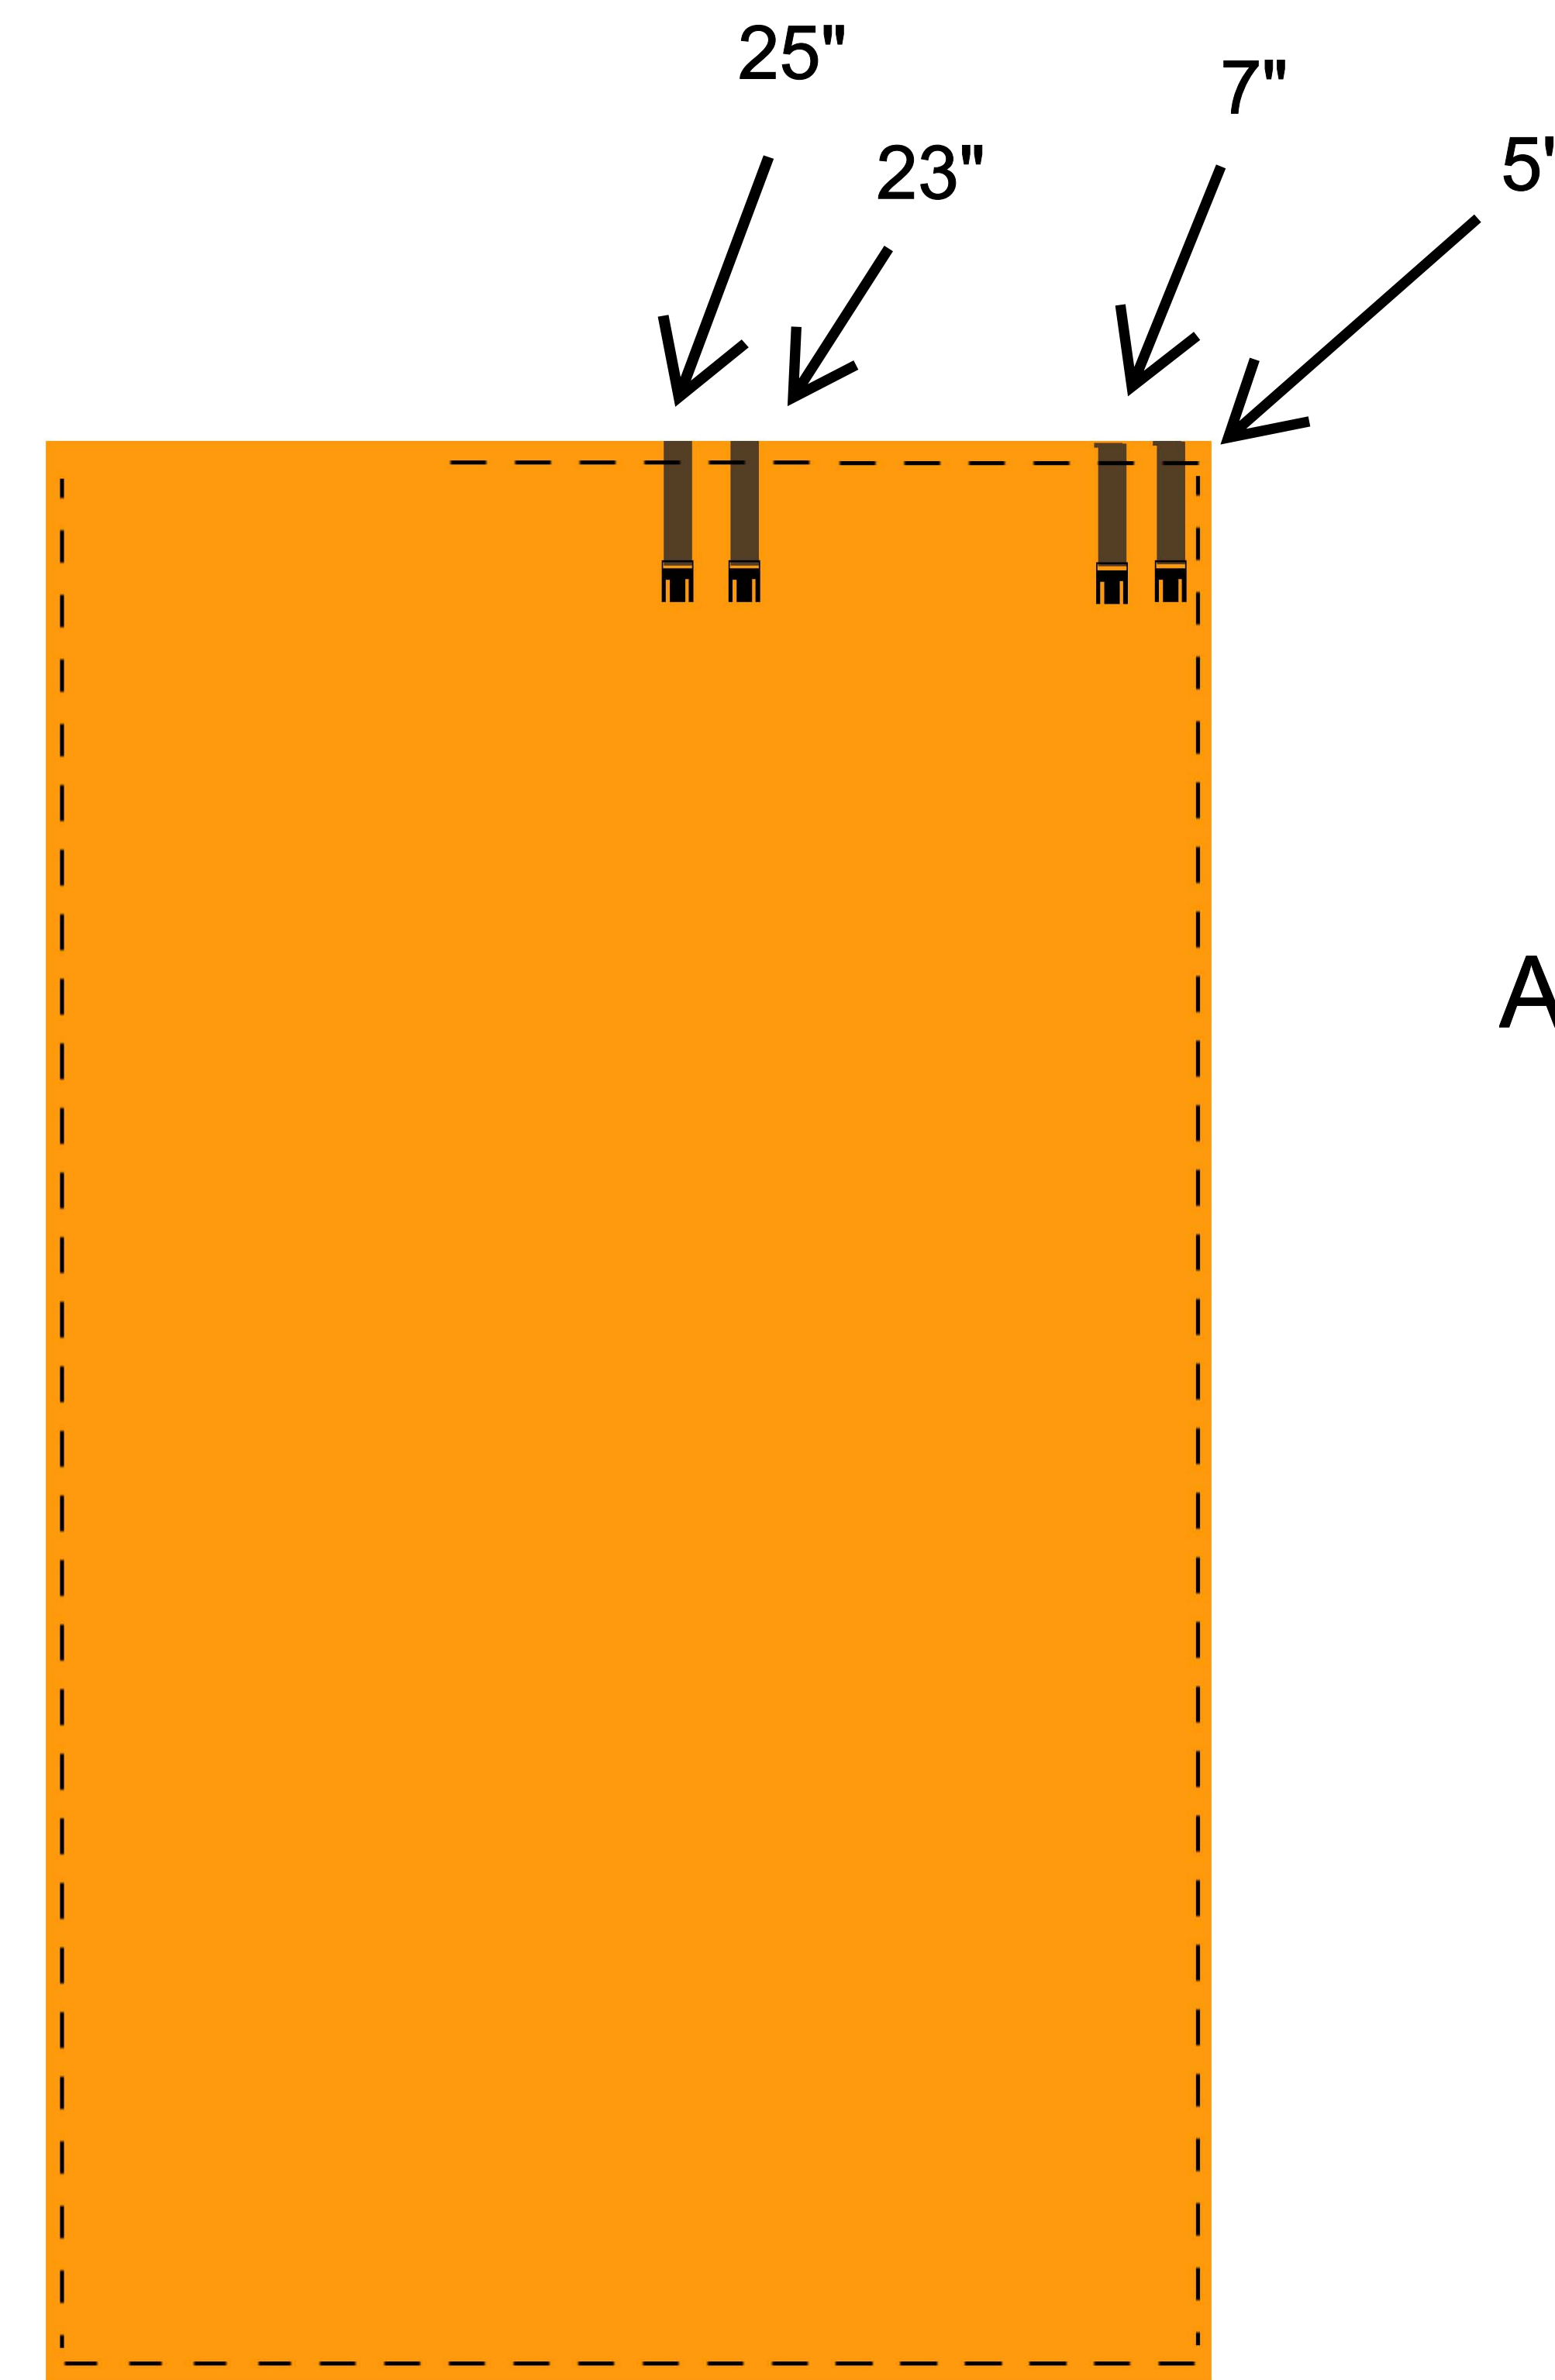





Step 4: Lay 2nd layer of fabric (wrong side up) on top of the first. Pin all 4 sides.

Make sure to pin the webbing in place. Otherwise it will move during sewing.

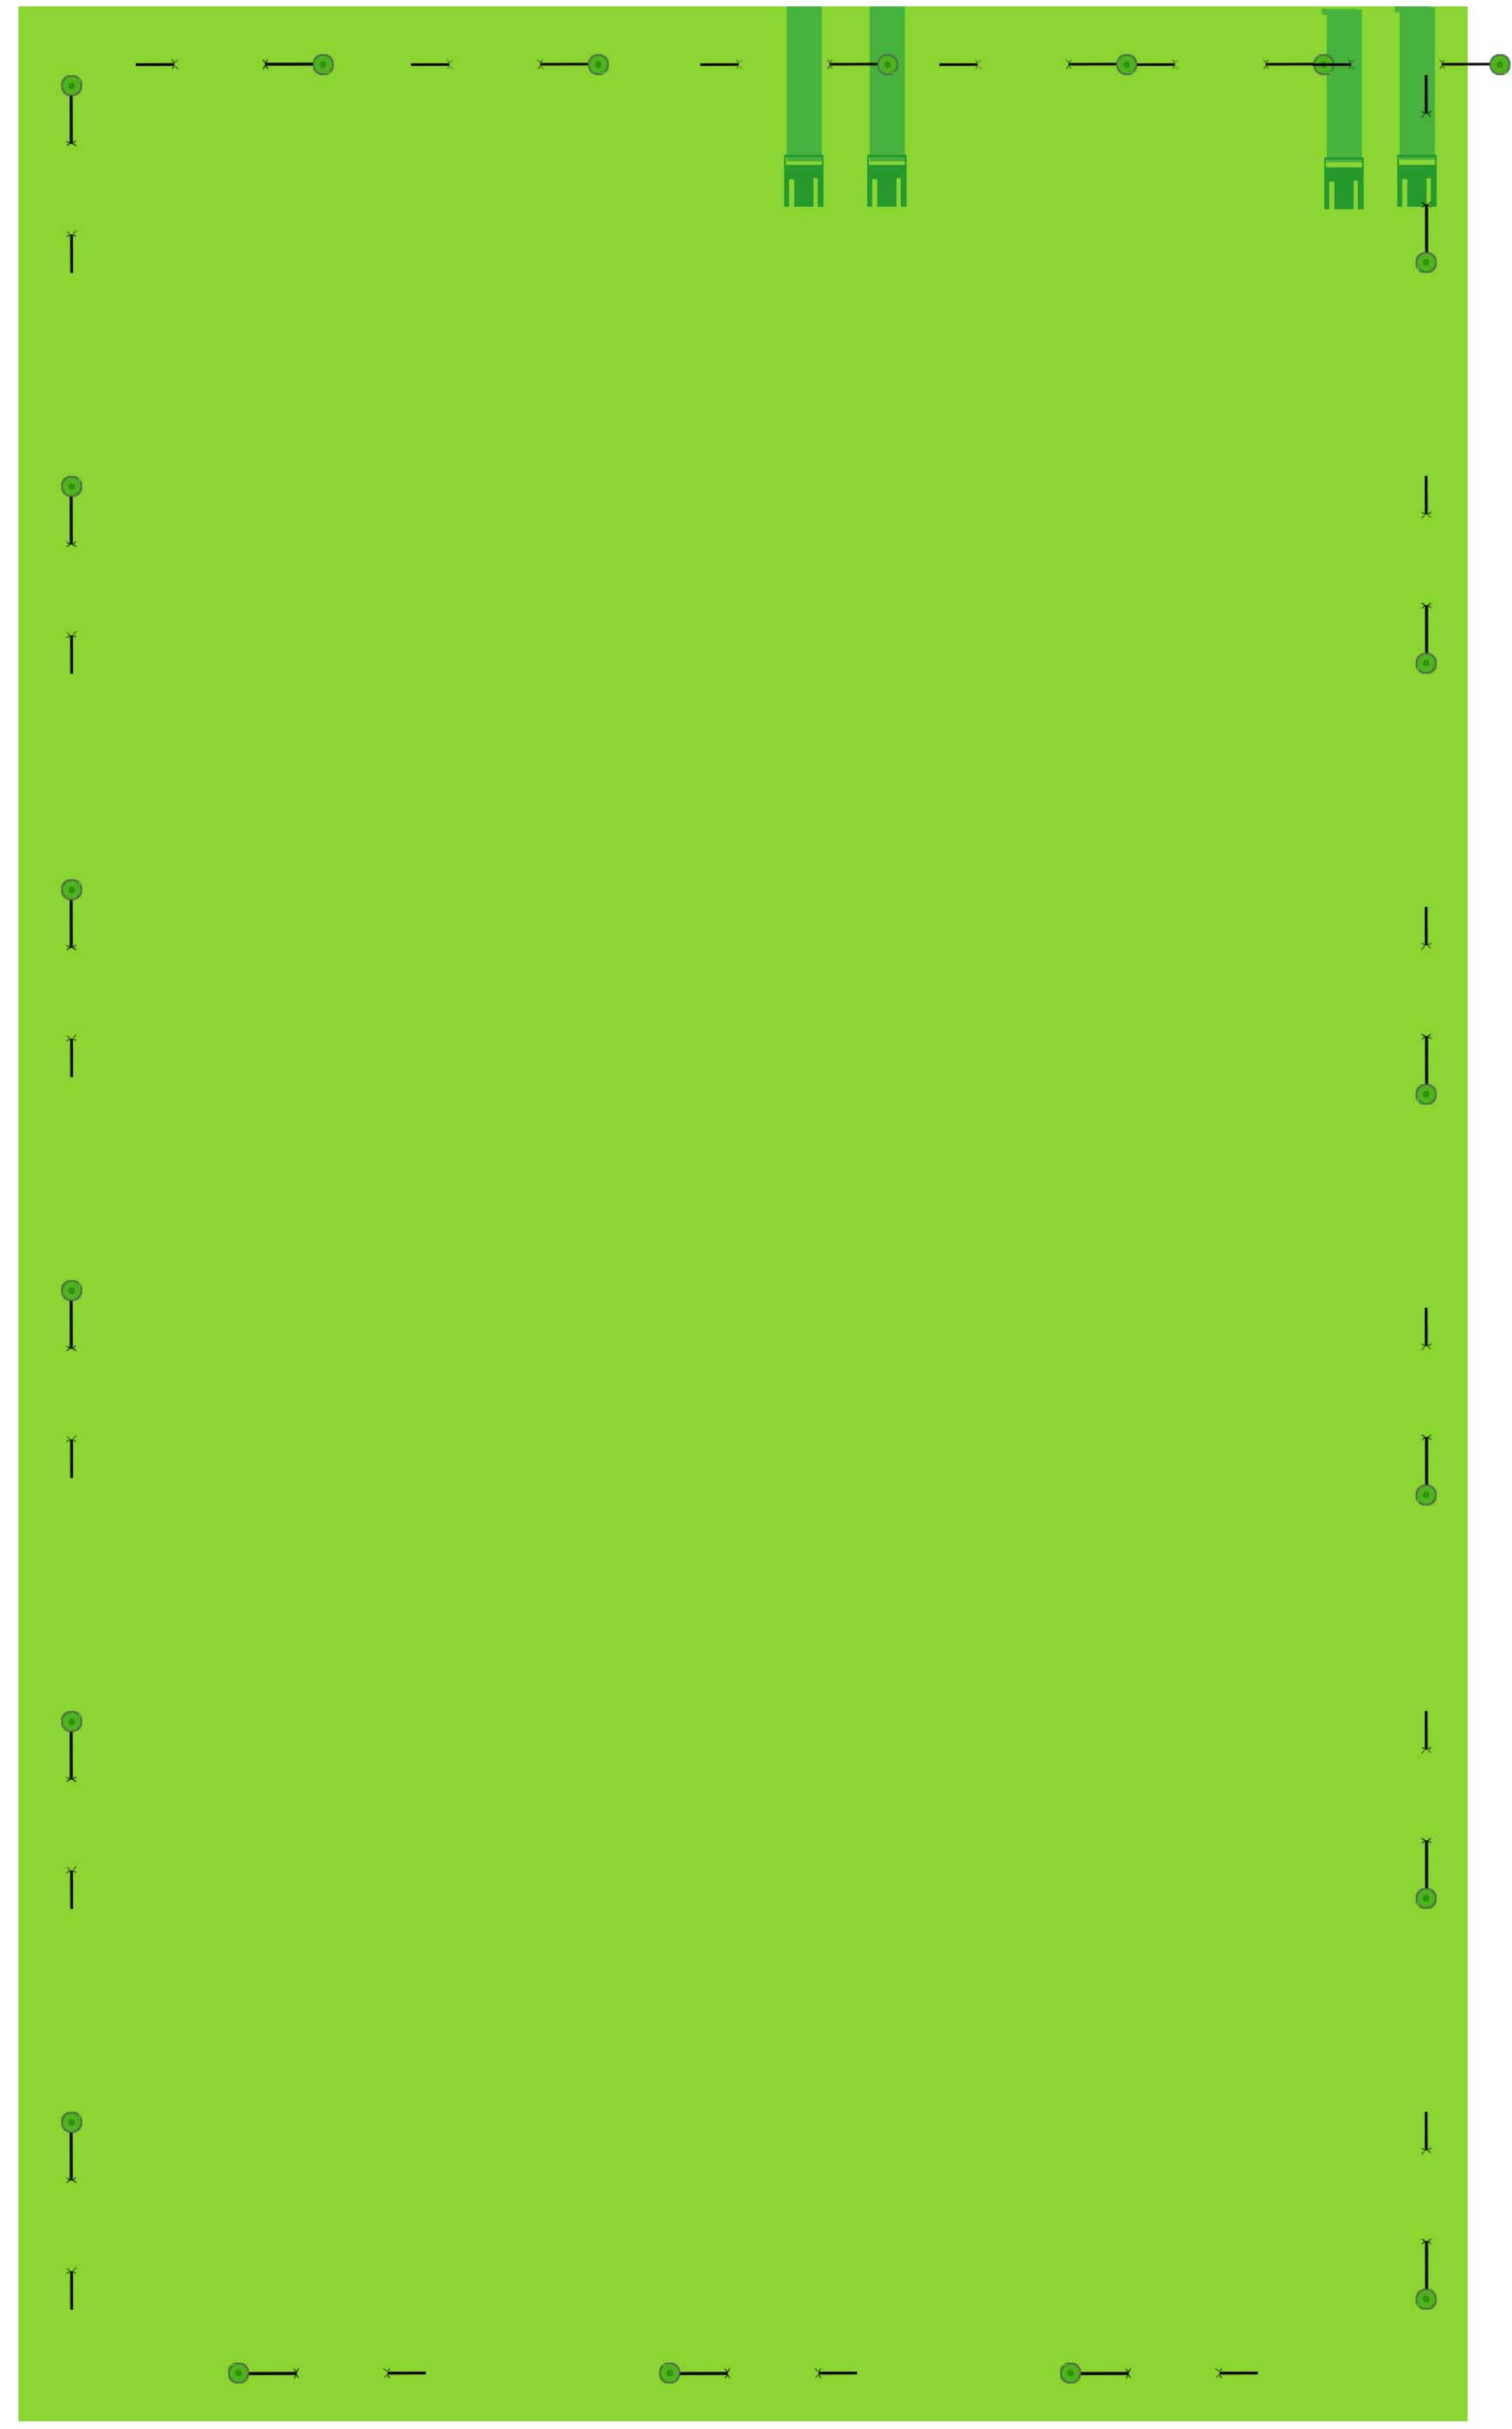



Step 5: Sew all 4 sides leaving a 10" gap on the side opposite the Grosgrain.

10" space left unsewn

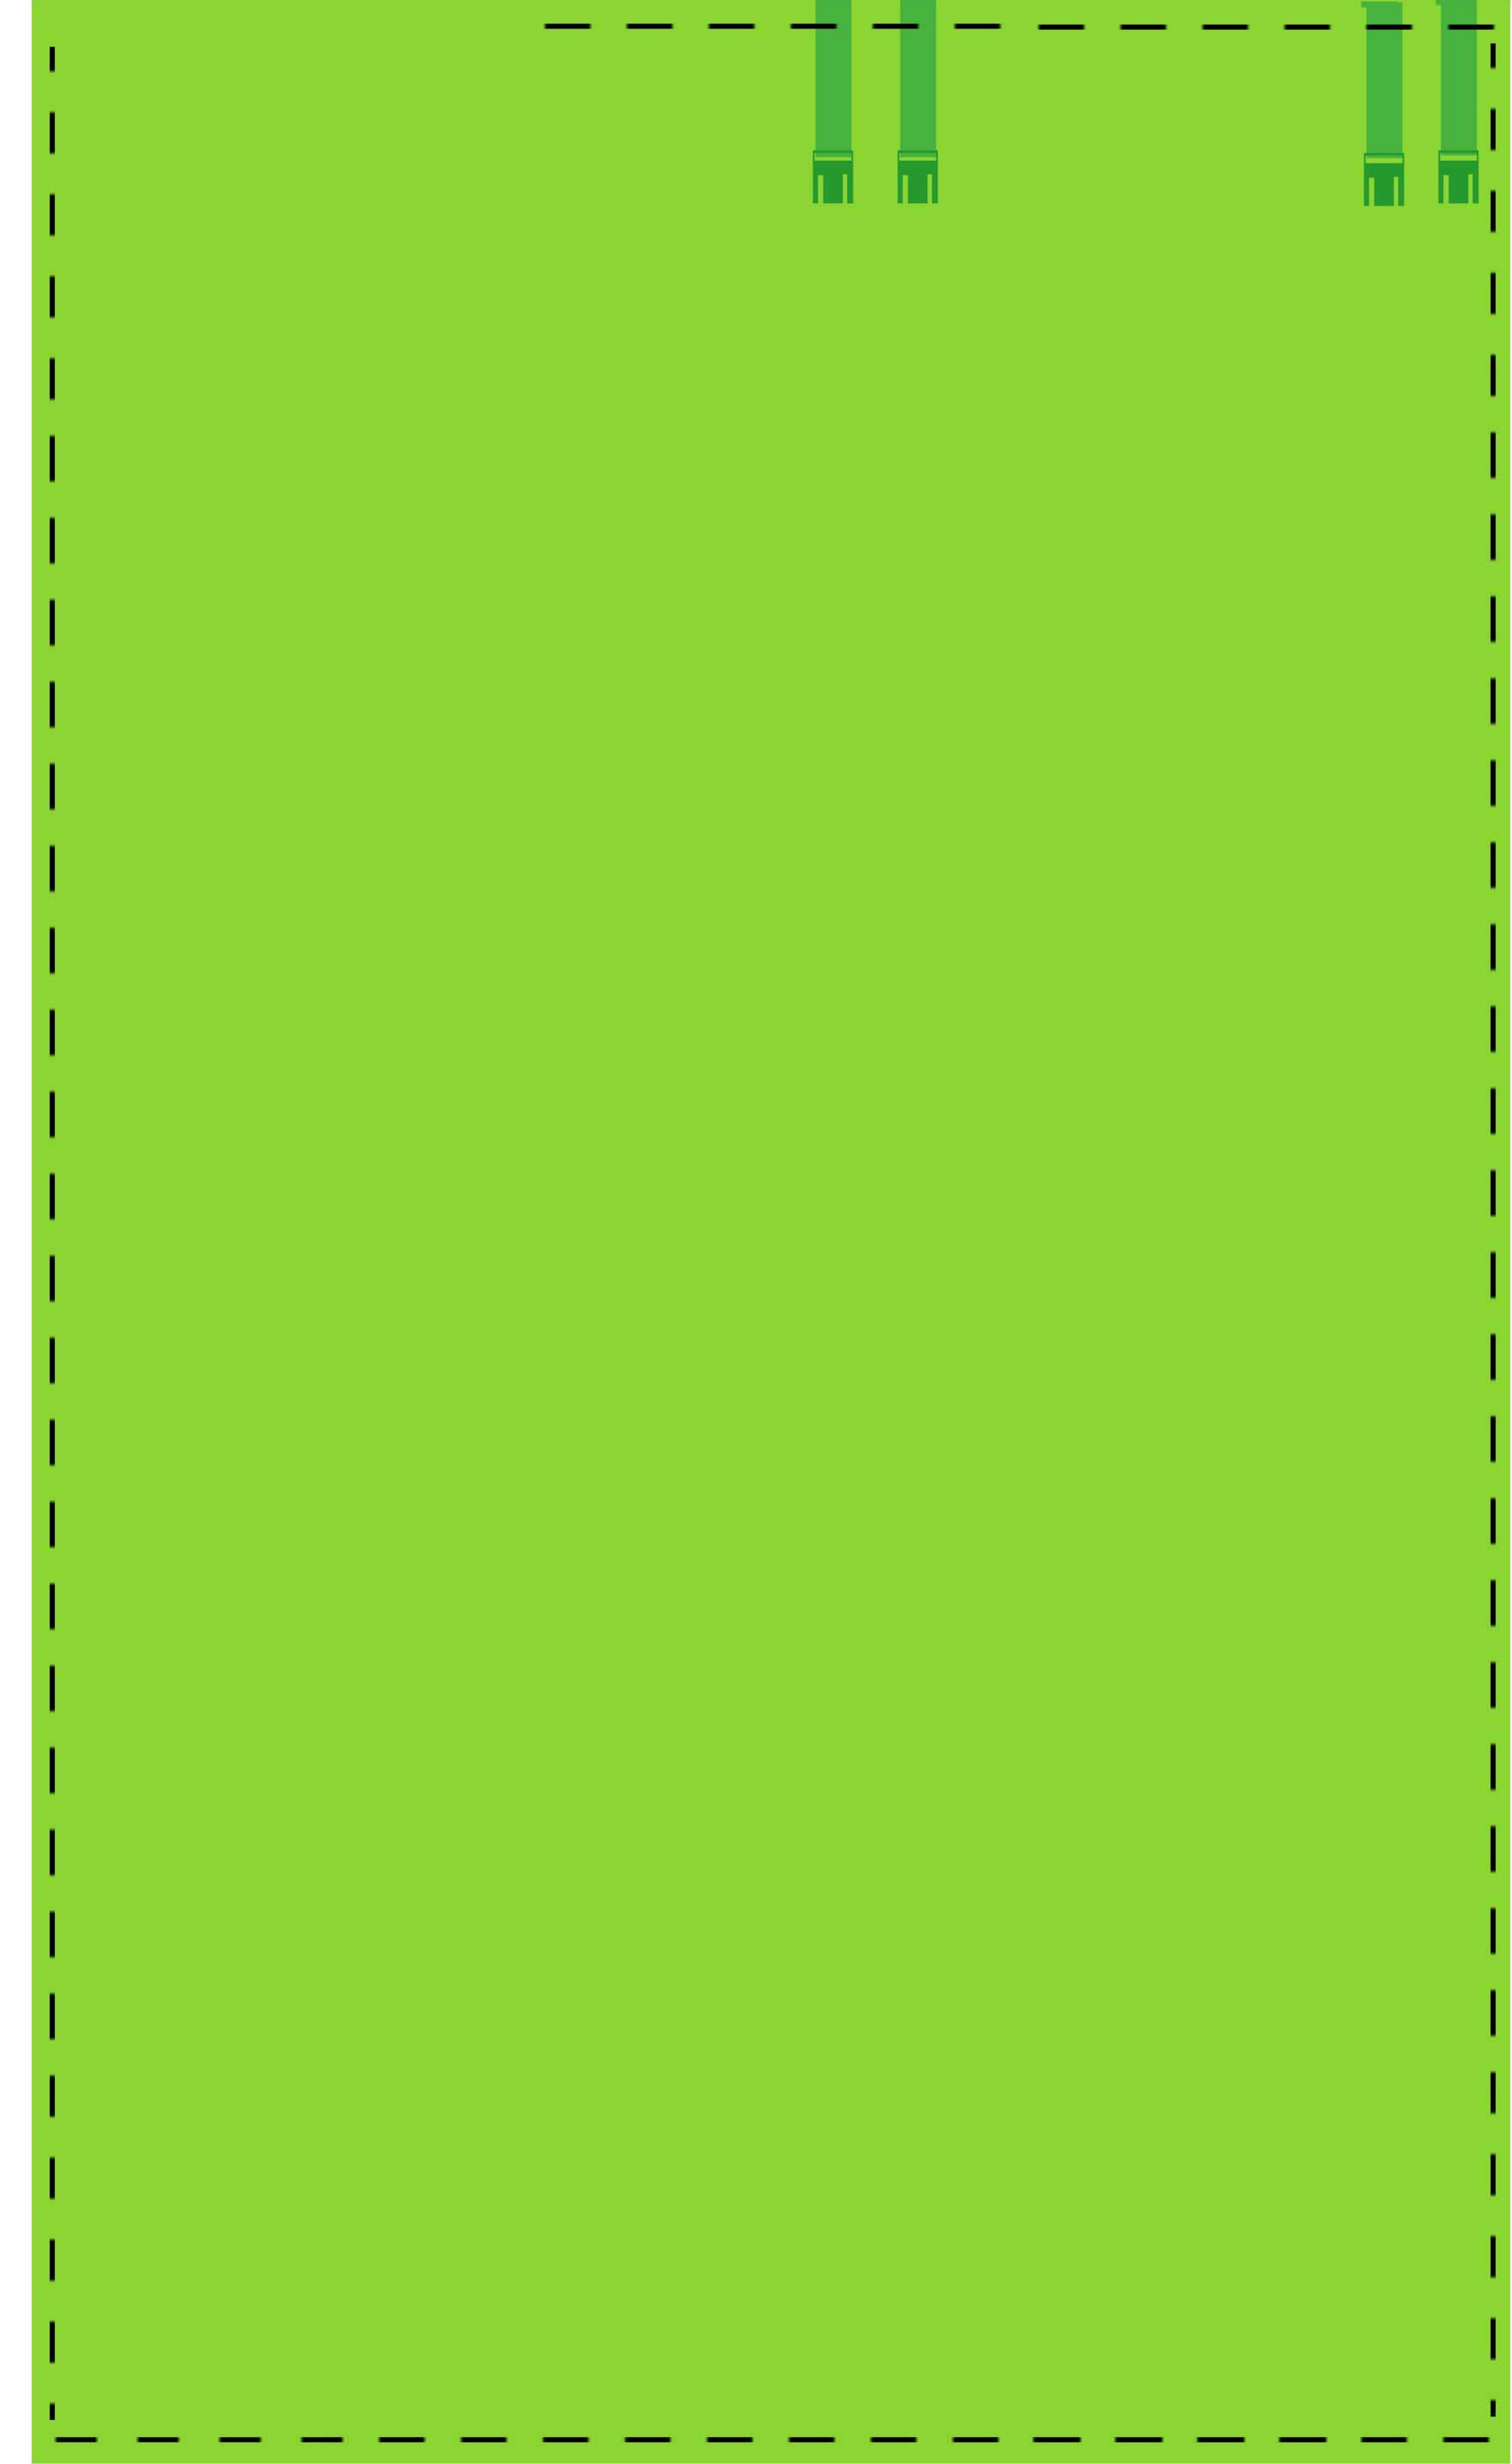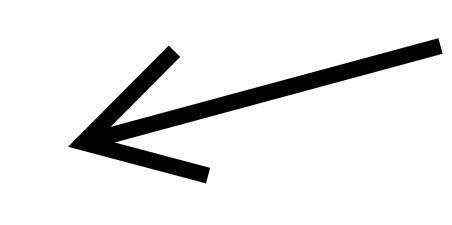

Step 6: Lay insulation on top of shell fabrics. Sew, leaving same 10" gap.

10" space left unsewn

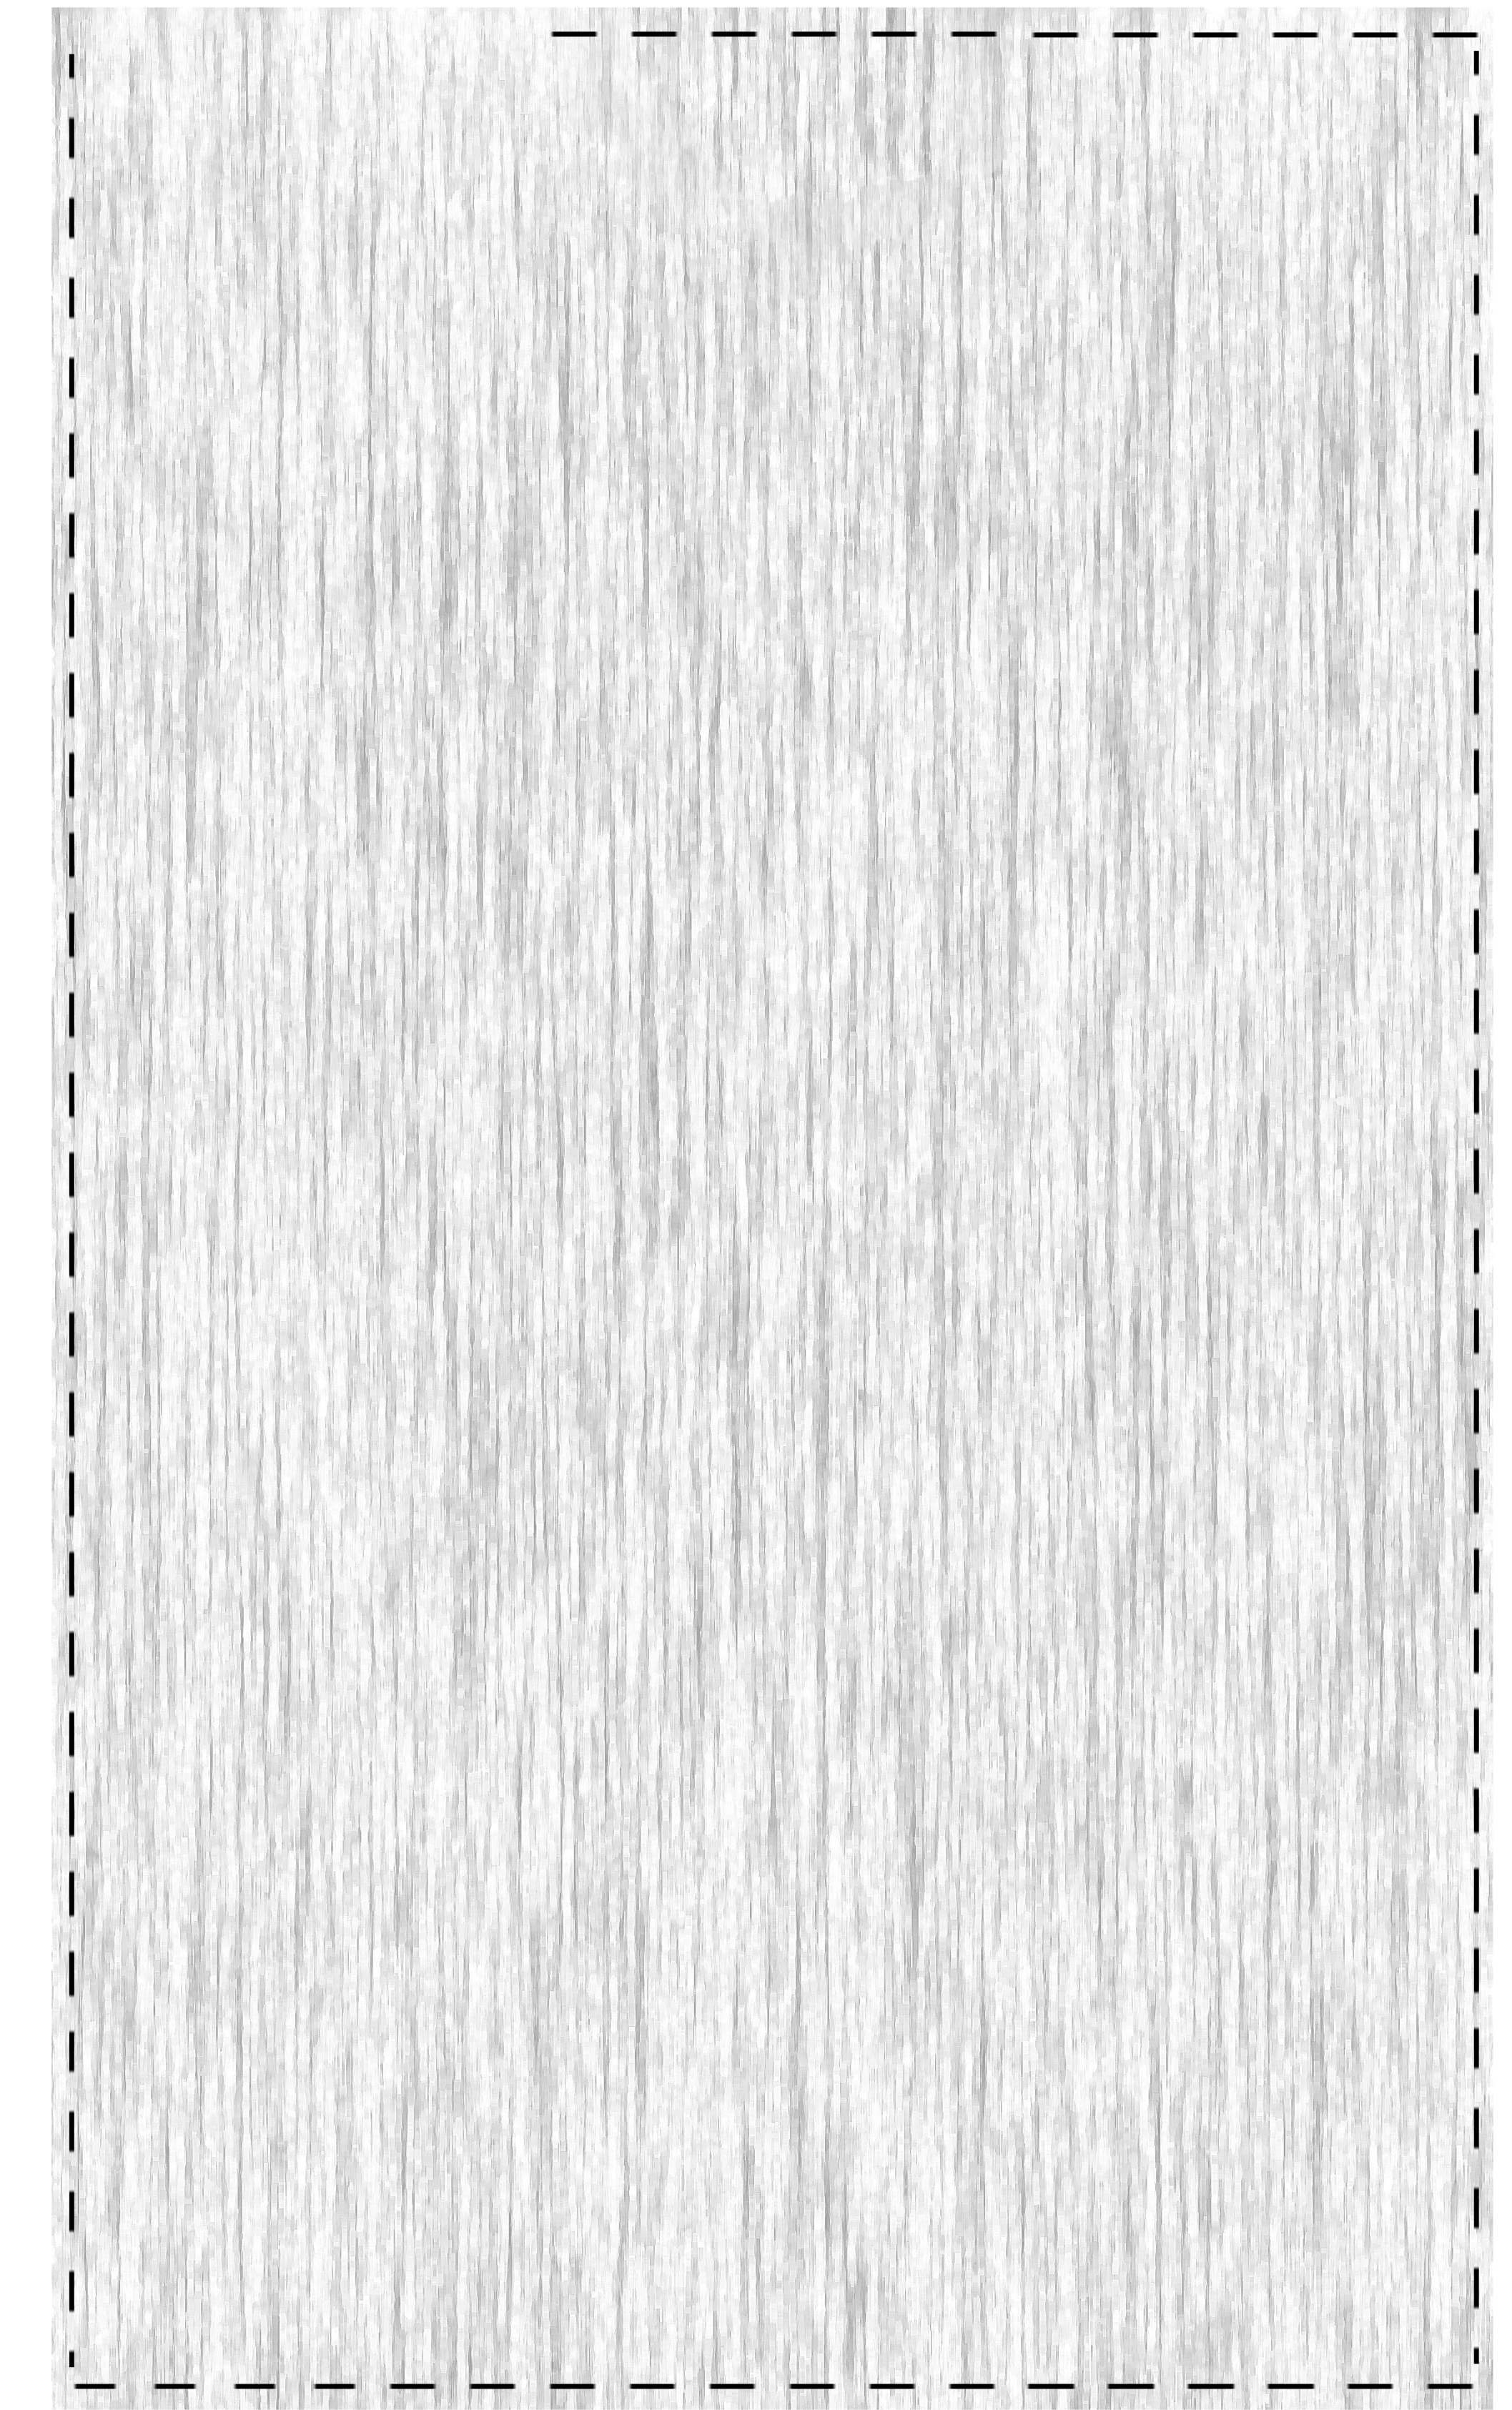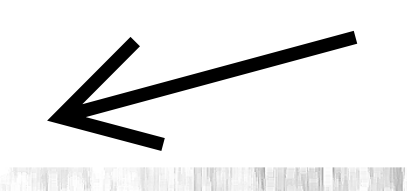



Step 7: Reach in between the layers of fabric grabbing the far corners and turn the quilt right side out. Sew the gap closed.

