

# How To: Make a Down Quilt



## 1. 2. 3. 4. 5. Steps

### 1. Panels

Prepare the fabric panels by cutting them to size and marking baffle lines.

### 2. Baffles

Attach the baffles to the marks on the outer and inner materials

### 3. Closures

Baste or prepare the footbox and the collar of your quilt. Make sure to include pad straps.

### 4. Stuff

Fill each baffle with down making sure to evenly distribute the clusters. Ensure 1-2 sides of the quilt are sewn closed before stuffing.

### 5. Finish

Sew the remaining sides closed and include any finishing steps for your features.

Sewability | Breathability | Hand-Feel | Durability | Price | Popularity

### 1.1 oz Ripstop Nylon

Calendered

★★★★★ ★★★★★ ★★★★★ ★★★★★ ★★★★★ ★★★★★

[View on Site](#)

### 0.75 oz MEMBRANE 10 Ripstop Nylon

★★★★★ ★★★★★ ★★★★★ ★★★★★ ★★★★★ ★★★★★

[View on Site](#)

### 0.66 oz MEMBRANE 10 Taffeta Nylon

★★★★★ ★★★★★ ★★★★★ ★★★★★ ★★★★★ ★★★★★

[View on Site](#)

### 0.56 oz MEMBRANE 7 Ripstop Nylon

★★★★★ ★★★★★ ★★★★★ ★★★★★ ★★★★★ ★★★★★

[View on Site](#)

### 0.9 oz MEMBRANE 15 Ripstop

★★★★★ ★★★★★ ★★★★★ ★★★★★ ★★★★★ ★★★★★


[View on Site](#)



[Custom Print Only](#)

## Design

50-62"

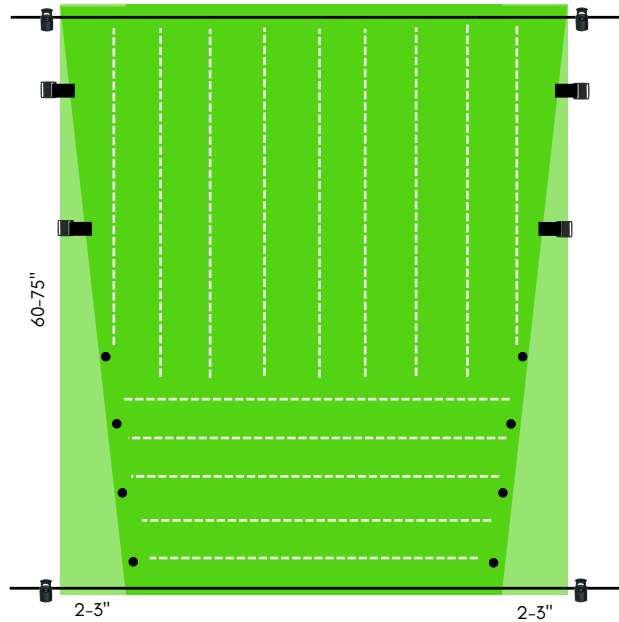

### Dimensions

- **Height:** ~70" (adjust to your height)
- **Width:** 56-62" (adjust to your body)
- **Taper:** Cut material on an angle, removing some material from the side

### Baffles

- 40° - 50°F: 1.5"
- 20° - 30°F: 2.5"
- 0° - 10°F: 3.5"

[Shop Baffles](#)

Material Choices

Listen to Ep. 105

### Insulation

800 Fill Power  
[SHOP NOW](#)

850 Fill Power  
[SHOP NOW](#)

## Components

**KAM Snaps**  
For the leg closure

[LEARN MORE](#)

**1.5 mm Cord**  
For the cinch bottom

[LEARN MORE](#)

**Cordlocks**  
For the cinch bottom

[LEARN MORE](#)

**Buckle**  
For the pad straps

[LEARN MORE](#)

**Flat Elastic**  
For the pad straps

[LEARN MORE](#)

