

Pack Cover Instructions

Ripstop by the Roll[®] 

Revision A – 10/25/15

Kit Contents

- 1 yd waterproof fabric (e.g. silnylon, silpoly)
- 1/16" Shock Cord – 10 ft
- (2) Mini-Cordlocks

Step 1: Measure Pack

Figure A

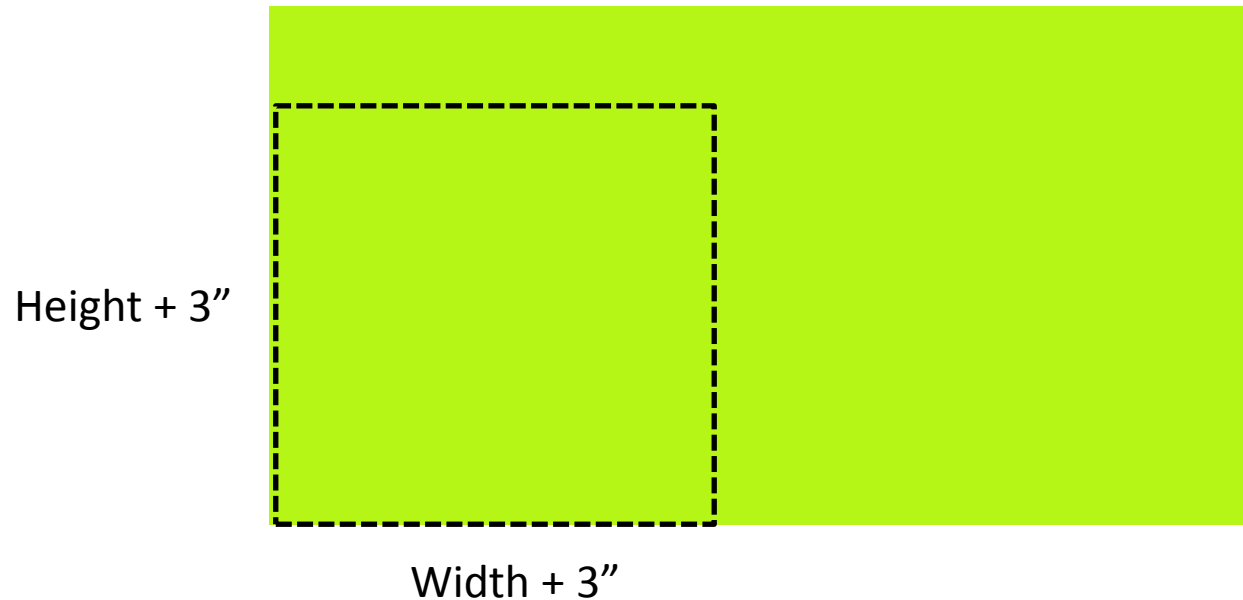


Figure B




- With your pack fully loaded, measure both the height and width
- When measuring, be sure to include the top/bottom for height (Fig A) and sides for width (Fig B)
- **IMPORTANT** - Add 3" to height and width measurements to account for hemmed channels (to be sewn later)

Step 2: Cut Fabric




- Using height and width measurements from Step 1 (*remember to include 3" extra for both), carefully cut out your fabric blank
- Save scrap fabric for stuff sack or other projects

Step 3: Fold and Pin Corners

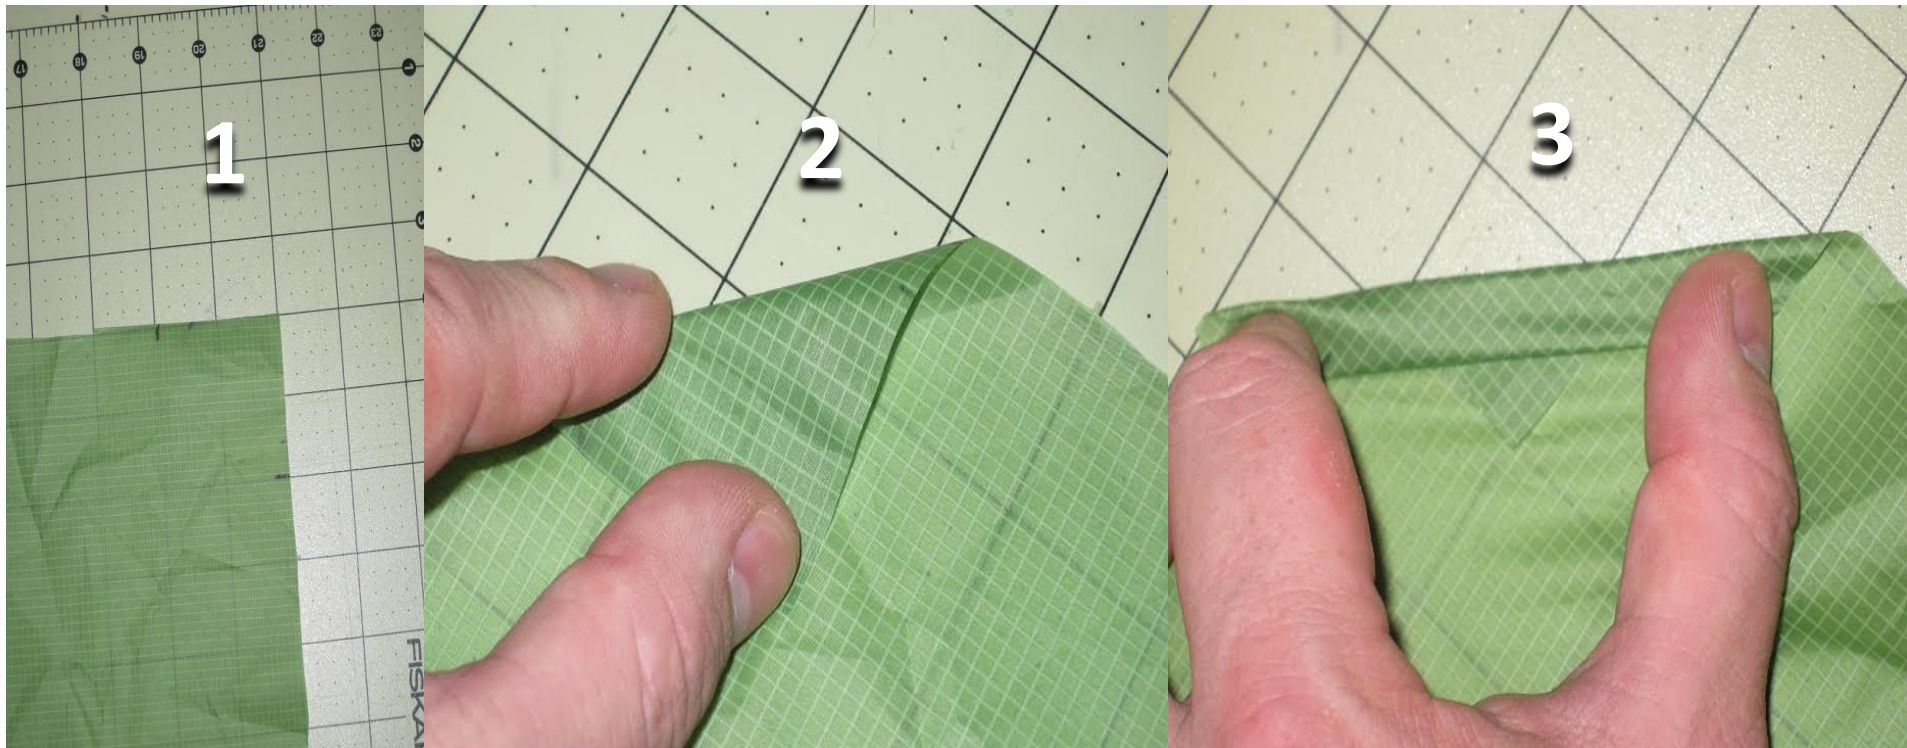

- Measure 2" down from corner and mark (1 above)
- Fold down the corner to make a triangle (2 above)
- Fold down again to make a ½" rolled hem (3 above)
- Pin to hold rolled hem in place
- Repeat for all four corners

Step 4: Sew and Trim the Corners

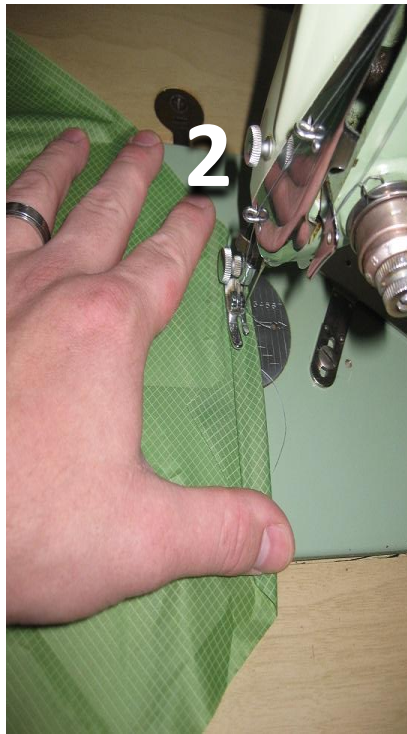

- Trim off excess flap at each corner (1 above)
- Sew rolled hems down for each corner (2/3 above)

Step 5: Create Channels on All Sides



- Sew $\frac{1}{2}$ " rolled hem down each side to create channel for $\frac{1}{16}$ " shockcord
- See **Appendix A** for further detail on rolled hem

Step 6: Run Shockcord Through Channels



- Run continuous piece of shockcord through all channels
- Exit/Enter from one corner, finish with mini-cordlock for adjustability




YOU'RE DONE!



ENJOY YOUR NEW PACK COVER

Appendix A – Rolled Hem Detail

Figure 3 – Rolled hem

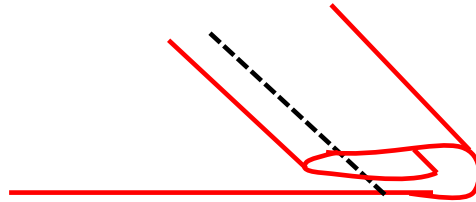

- To construct rolled hem, roll fabric edge over twice, then stitch down on far edge. See Fig 3 above for detail.