



# Steeda S550 Mustang Bumpstop Kit

Installation Instructions for Part: 555-4445




For Stock Ride Height Vehicles and 555-8223 Steeda Minimum Drop Springs:

**FRONT**

**REAR**



**USE BOTH THE BASE AND SECONDARY BUMPSTOPS ON THE FRONT AND REAR**

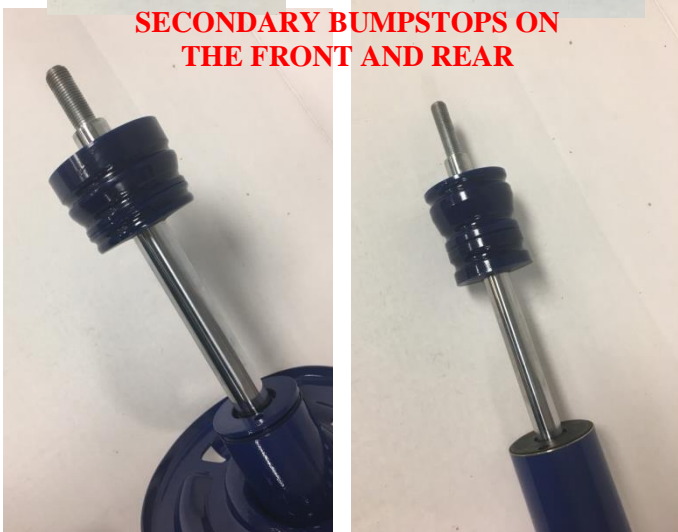


For Lowered Ride Height Vehicles and ALL other Steeda Springs:

**FRONT**

**REAR**



**USE ONLY THE BASE BUMPSTOP ON THE FRONT AND REAR**

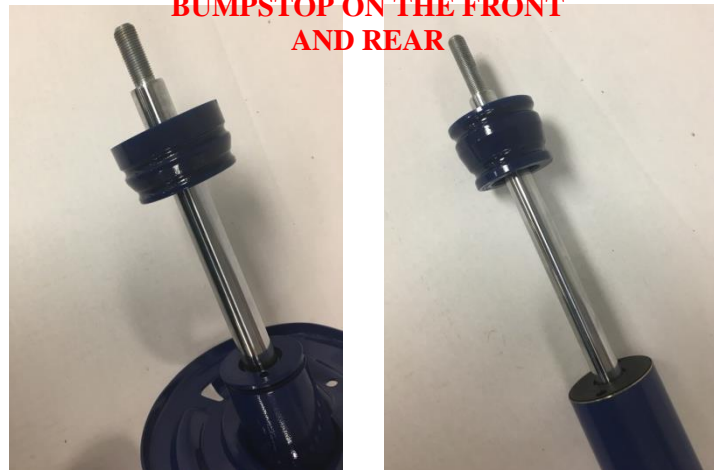

**Use the provided o-rings on the REAR shocks below the bumpstops for lowered applications**