



IMPORTANT


In case of recent painting, wait at least 45 days to apply the sticker. Clean the wall surface with alcohol and wait for it to dry. Apply the sticker and pass the spatula so that the glue is activated. If the wall is cool to the touch, we recommend heating it with a hair dryer and smoothing the sticker again. Do not apply in places with seepage, irregularities or over wet paint. The sticker can only be applied once.

WET AREAS


The sticker is washable and can be applied to wet areas such as showers, including the inside. Dry the area well, then clean it with alcohol and wait for it to dry. Apply the sticker and smooth well with the spatula to avoid bubbles and activate the glue. Wait 24 hours before re-wetting.

TIP FOR USE ON WALL TILES

For better adhesion, we recommend that the sticker is applied 100% inside the tile area (1) or over the grout (2).

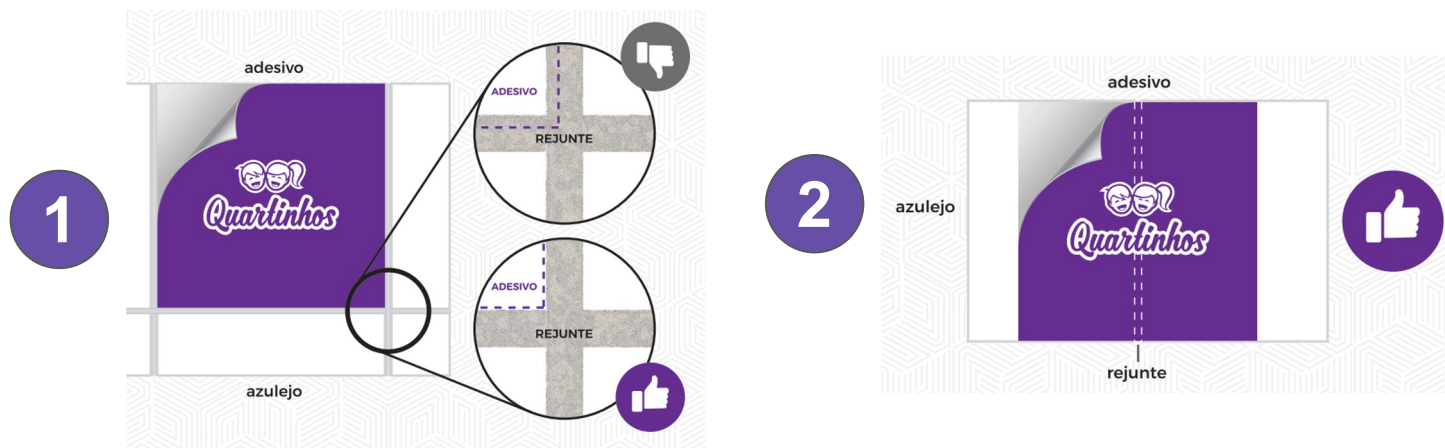

STICKER WITH MASK

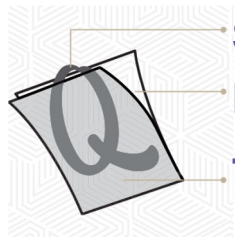

Sticker: vinyl.

Liner: Protective film (white paper).

Transfer Mask: Transparent.

TIP - Initially pass the spatula on the sticker to improve adhesion to the transfer mask.



1 Compose the sticker in the desired location, fixing it with tape.



2 With the sticker stuck to the wall, peel off the liner behind it and smooth the transfer mask.



3 Peel off the transfer mask by sliding it close to the wall, down.



4 Ready! Your sticker is applied and beautiful!

STICKER WITHOUT MASK



1 Peel off a small part of the protective film.



2 Position and paste in the chosen location.



3 Carefully smooth the vinyl with the putty knife, from the center to edges, removing the paper slowly.



4 Run the putty knife across the sticker to ensure it sticks.



5 Ready! Your sticker is applied and beautiful!

WALLPAPER

Use on smooth and painted walls (more than 45 days ago). Never apply over old wallpaper.



1 Peel off a small part of the protective film.

2 Position and paste on the wall starting from the upper left corner.

3 Carefully smooth the vinyl with the putty knife, from the center to edges, removing the paper slowly.

4 Run the putty knife across the wallpaper to ensure it sticks.

5 When applying the next part, always overlap 1cm to fit the design.