


**The Fan-Brand  
Retro Clock / Note Board Installation Template**

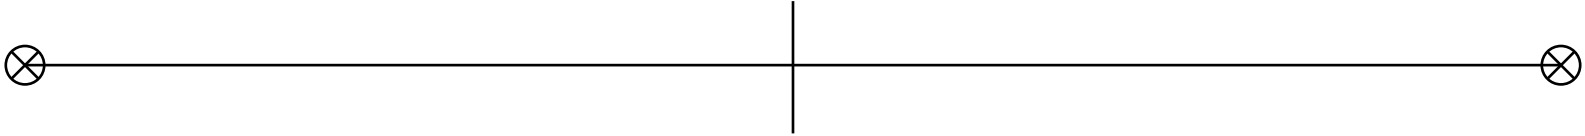

Place on wall, aligning center line to your center point on the wall and ensuring horizontal line is level.  
Drill 1/8" hole at the marked points about 3/4" deep.