


SUNSCREENS

MOTOR SELECTION CHART

The following chart is a guide only.
Refer to the hardware manufacturer for more details.

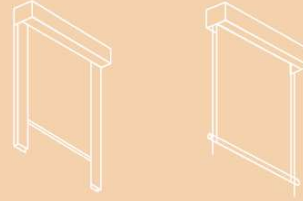

HOW TO USE THIS SELECTION CHART

- Select the installation weight from the horizontal bar ("x" axis).
- Select the tube size from the left hand column ("y" axis).
- Select the motor suitable by matching the weight & tube size together.
- A safety factor has already been incorporated.
- Installation weight shown in kilograms.

		Blind Weight (kg)																													
		5	6	7	8	9	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100	105					
Tube Diameter	ø 50	6 Nm					10 Nm					15 Nm					20 Nm					25 Nm					30 Nm				
	ø 63	6 Nm					10 Nm					15 Nm					20 Nm					25 Nm					30 Nm				
	ø 70	6 Nm					10 Nm					15 Nm					20 Nm					25 Nm					30 Nm				
	ø 78	6 Nm					10 Nm					15 Nm					20 Nm					25 Nm					30 Nm				

Calculating the total weight of the blind:

Total weight = width x drop x weight per m².

Also take into consideration the weight of the bottom bar.