

SPRINTER VAN DUAL 6" LIGHT BRACKET KIT

2019-2020 MERCEDES-BENZ SPRINTERS

Thank you for purchasing the Outside Van Sprinter Van 6" Light Bracket Kit. This installation guide is meant to direct you through the easy and seamless installation process. Before beginning the assembly, visually inspect all components for defects in finish or craftsmanship and check that you have all necessary hardware.

MASTER PARTS LIST

#	DESCRIPTION	Used In
1	Outside Van 2019+ Bumper Bracket	Step 4
1	RIGID Dual 6" SAE Lights (White/Selective Yellow)	Step 6
1	Outside Van Hardware Kit	-

MASTER HARDWARE LIST

#	DESCRIPTION	Used In
2	Spacer 3/4" OD, 1/2" Long	Step 3
2	M8 X 1.25mm, 35mm Long	Step 4
1	RIGID Hardware Kit	Step 7

TOOLS NEEDED

#	DESCRIPTION	Used In
1	Pry Tool	Step 1
1	T45 Torx	Step 2
1	5mm Hex Wrench	Step 5
1	7/16" Open End Wrench	Step 9



STEP 1

Use the pry tool to remove both covers to expose the factory T45 bolts.



STEP 2

Remove the two factory T45 bolts.




STEP 3

Place the two provided spacers in the holes.



STEP 4

Set the Bumper Bracket on top of the spacers and start the M8 flat head hex bolts by hand.

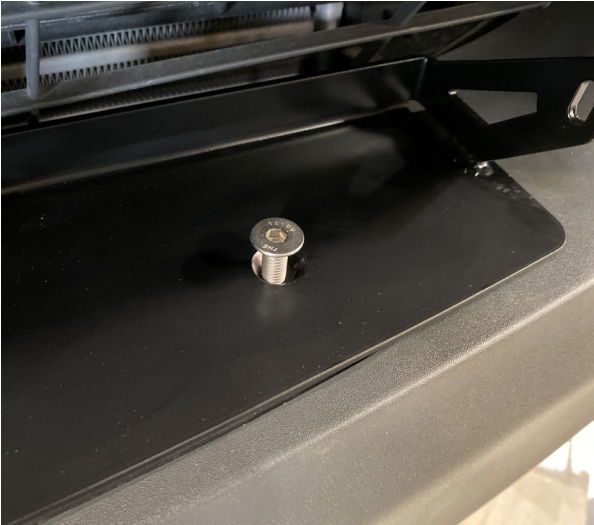

STEP 5

Tighten the M8 bolts with a 5mm hex wrench.



STEP 6

Open the RIGID Dual 6" SAE Light box and remove the lights and hardware.



STEP 7

Follow the RIGID hardware install guide.



STEP 8

Slide outer end of the light in first then slide inner side down into the slot.



STEP 9

Add one washer and nyloc tighten with the 7/16" wrench.



STEP 10

Wire the lights using the RIGID installation harness and manual.



STEP 11

Aim the lights against a wall on a flat surface so the beam pattern is below the low beam pattern.

