

Ulti-MATE 2

I ; &%\$\$* 6 ŽK Ž ŽGŽ/ ; '7 UV]bYh'
 : `i gl `K U``A ci bh=bgfi W]cwg`

1. Install a 2x4 board (or **Gi ddcfh7`YUh**) at the desired location and height (6" – 8" off the floor) by screwing into studs.
2. Set assembled cabinets - without doors & shelves - onto 2x4 **Gi ddcfh7`YUh**
3. Attach cabinets to wall using #8 x 2-1/2" screws through **FYUf`GdUbbYfg (HCD`/`A=88 @`E`** Parts # D & E) into studs. Screw through **6 UgY`DUBy`** of Cabinet (Part #B) into Support Cleat.
4. On top of cabinets, attach a 2"x2" right angle bracket to stud (using 2 - #8 x 2-1/2" screws). Attach to Top of Cabinet using:
 - 1/4" x 1-1/2" bolt
 - #6 x 5/8" screw

ADCFH5BH

FOR ADDED SUPPORT, ATTACH **HCD D5 B9 @** OF CABINET (Part #A) TO **HCD`GD5 BB9 F`** (Part #D) USING 4 - 2-1/2" SCREWS THROUGH TOP INTO TOP SPANNER.

(EVENLY PLACE SCREWS ALONG TOP REAR EDGE)

H`G`95 G`9 F`HC`BG9 FH`H`9`G`7 F`9 K`G`69 : CF`9`DCG`HC`B`B ; 756`B9HG`CBHC`H`K`9`G`I`DDCFH7`@5H`

5. Repeat 2"x2" angle bracket attachment to each stud and cabinet across entire line of cabinets.
6. Install shelves and doors to complete installation.



1




2



3



4

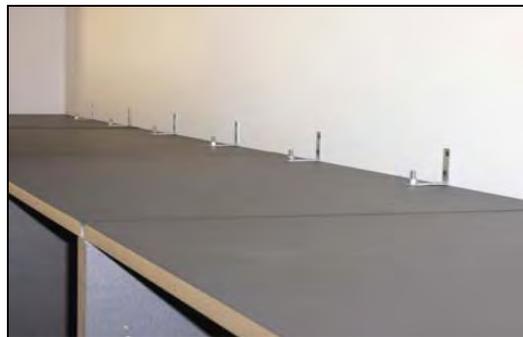

5



6

