



Anya Courtesy Light

Part#: 696RX1-FF-KK-XXX

INSTALLATION INSTRUCTIONS

PARTS/TOOLS NEEDED:

			
Courtesy Light	Two #8 Pan Head Screws	Butt Splice Connectors (not provided)	Power Drill (not provided)

IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- It is recommended that fuse protection be added to the positive (+) input.

1. Determine the installation location for your light and drill a ½" hole. Pull the units wiring through and wire using the diagram below right.

Screw in the housing using the provided screws.




2. To install the light in the housing, line up the tab on the light with the gap in the housing¹ and press down on the opposite corner until it snaps in place.²



3. Push bezel in place.



4. Wire the light following the wiring diagram below.

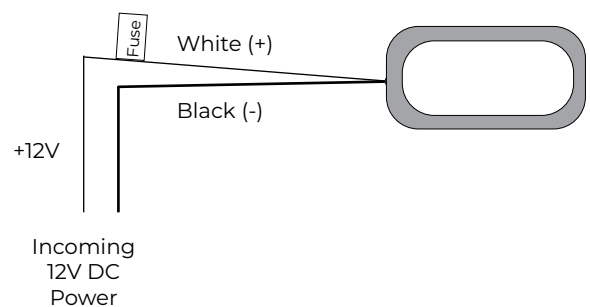

3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355
itc-us.com

For warranty information please visit www.itc-us.com/warranty-return-policy
DOC #: 710-00178 · Rev B · 07/27/22