

Surfit™ Table Leg Installation Instructions

(Part #'s: 81TS1000, 81TR1000 Series)


PARTS/TOOLS NEEDED:

					
Table Base	Floor Base	Table Leg	#10 Phillips Oval Head Screws (not provided)	Power Drill (Not Provided)	2.5\"/3.25\" Hole Saw Bit (Not Provided)

INSTALLATION CONSIDERATIONS


- To avoid a hazard to children, account for all parts and destroy all packing materials.
- Do not sit on or lean on table, intended for use as a table only.

1. Drill hole* in the floor making sure the base will be mounted into solid floor structure (wood, fiberglass, etc.) Using #10 phillips oval head screws attach the base to the floor.

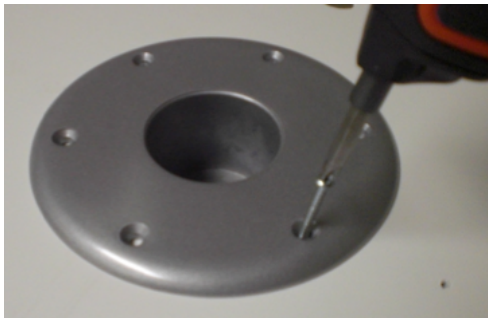

*2.50" Diameter Hole - aluminum base (81TR1000-X)
*3.25" Diameter Hole - polymer base (TR1000HPPR-B)

2. Mount the table base into table top (customer provided) using #10 phillips oval head screws. Make sure the weight of the table top is evenly supported over the table leg.

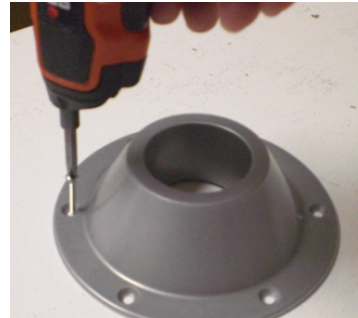

3. Insert the table leg into the hole in the base. To remove the leg, rotate and pull straight up to remove completely.

