




Hot & Cold Stainless Steel Shower Install Instructions

(Part #: 97012)

PARTS/TOOLS NEEDED:

	<p>Drill, Jigsaw & Wrench</p>	<p>4 Exterior Grade Screws</p>
<p>Shower</p>	<p>Not Provided</p>	<p>Not Provided</p>


IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

- * To avoid a hazard to children, account for all parts and destroy all packing materials.
- * Turn off water.
- * Designed for use in a pressure regulated, portable water system with a maximum operating pressure of 40 PSI.
- * Maximum flow rate with the faucets fully opened - 2.5GPM.
- * DO NOT ALLOW TO FREEZE.
- * Do not connect directly to a high pressure residential water supply.

1. Choose a location that is flat and has a minimum of 10" of rear clearance for hose and water connections. Cut out hole for shower.



2. Place the shower in the hole. Mount shower and bezel to opening and drive in screws until secure.

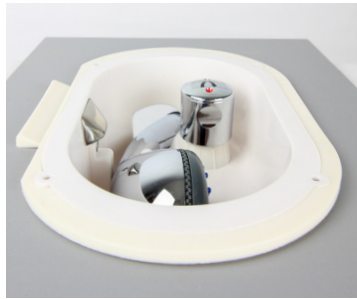

4. Connect to the water lines matching hot to hot and cold to cold. After installing shower, turn on water to remove any debris and check for leaks.

