


LEITNER

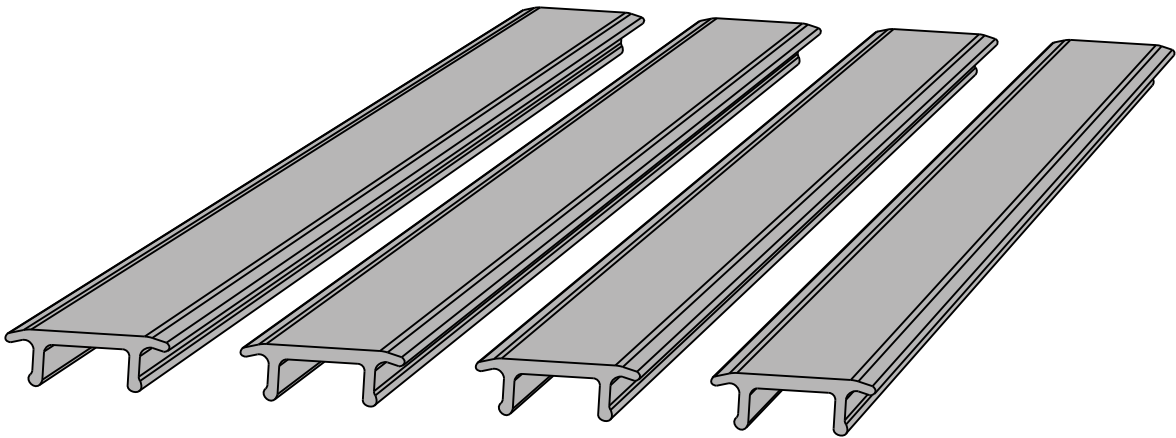

WIRELOK

LEITNERDESIGNS.COM | SALES@LEITNERDESIGNS.COM | 949-395-3049

ASSEMBLY / INSTALLATION INSTRUCTIONS:

PART NUMBER:

00-WL460-1371

INSTALL: SNAP WIRELOK INTO T-CHANNEL

- SNAP THE WIRELOK INTO PLACE ANYWHERE YOU NEED TO HOLD WIRES. THE WIRE LOCK CAN BE USED AS A CONTINUES STRIP OR CUT INTO SHORTER SECTIONS AND USED INTERMITTENTLY

TRIM: CUT WIRELOK TO LENGTH

- THE WIRELOK IS MADE FROM RIGID ASA PLASTIC. IT IS BEST CUT WITH A SIDE CUTTERS. ALTERNATIVELY IT CAN ALSO BE SCORED WITH A SERRATED KNIFE (BREAD KNIFE OR STEAK KNIFE) AND SNAPPED AT THE SCORE MARK.