



BMW 3 Series 2006-2009



BM-53-08-G3

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS VSM G3

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.


**When properly installed, the metal between the ball and 2 small holes is all that is exposed.
(Some exceptions apply).**

TOOLS REQUIRED: Dash Trim Removal Tool (DTRT), Marking Pen, 5/64" bit and drill, Phillips screw driver


PARTS INCLUDED: VSM G3, A Plate, J Stem, two (2) #8X1/2" screws

LOCATION: Above Right Air Vent

Step 1: First the trim piece above the radio, surrounding the air vents must be removed. Start by placing the DTRT between the dash molding and the trim piece starting near the "Start" button on the trim piece. Use a gentle twisting motion in order to begin releasing a series of retainer clips. After you have released two retainer clips begin to remove the trim piece starting from the passenger side. Work your way toward the center of the trim piece until all of the retainer clips have released.

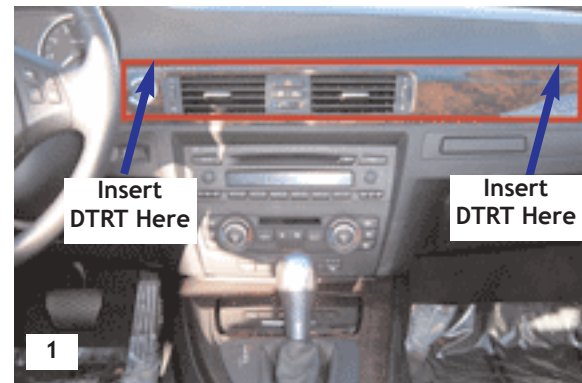

Step 2: Do not disconnect any wiring to the trim bezel. Simply remove it enough to allow access to the mounting point. Place the VSM G3 above the right air vent located above the radio just as pictured in **Photo #2**. Once the VSM G3 is flush to the dash molding and in place, use the VSM G3 as a guide and mark the locations of the pilot holes with a marking pen. With a 5/64" bit and drill, drill out the marked locations. **DO NOT DRILL MORE THAN 1/4" DEEP.** Place the VSM G3 over the pilot holes as pictured and evenly tighten the mount to the dash with the two (2) provided #8X1/2" screws.

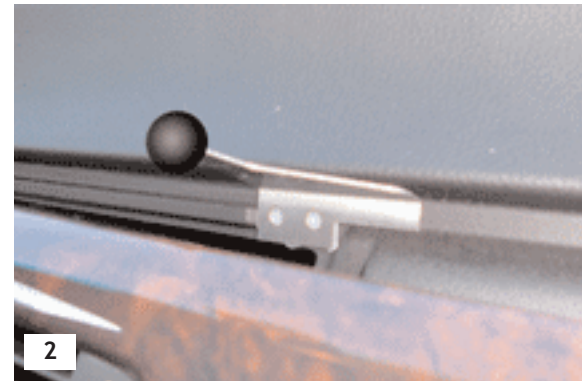

Step 3: Once the VSM G3 is flush and secure to the dash molding, simply replace the trim piece back into position. You have successfully installed your VSM G3!



Note: See the Assembly Instructions for G3 Components for additional information.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this VSM G3™. Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651.688.3588 or 800.388.0073 Fx: 651.688.9876

Installation Difficulty

● ● ○ ○ ○
Simple Advanced