



Chevrolet Malibu 2008-2010

CV-53-08-G3



PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS VSM G3

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

When properly installed, the metal between the ball and 2 small holes is all that is exposed.
(Some exceptions apply).

TOOLS REQUIRED: Dash Trim Removal Tool (DTRT), 7mm socket/driver

PARTS INCLUDED: VSM G3, A Plate, J Stem

LOCATION: Right of Radio

STEP 1. Place vehicle in neutral and apply the parking brake. Place the DTRT in the space between the shifter bezel and the floor console. Use a twisting motion to release four (4) retainer clips that secure the shifter bezel to the floor console. There are two upward facing slots on the right and left side of the shifter bezel that slide up into the radio bezel. After releasing the retainer clips, gently pull the shifter bezel downward to release the shifter bezel from the radio bezel.


STEP 2. Do not remove the shifter bezel completely, simply move it aside enough to allow access to the two (2) 7mm bolts located directly below and on each side of the climate control. Remove these two (2) bolts and set them carefully aside.

STEP 3. Next the radio/climate control bezel must be removed. Place your fingers underneath the two tabs that were held in place with the two 7mm bolts. Gently pull out on these tabs releasing a series of retainer clips on the bottom of the bezel. Also try placing the DTRT in the space between the climate control and the bezel and use a gentle twisting motion to release a total of eight (8) retainer clips. Once the radio/climate control bezel has been removed, carefully place it off to the side.

STEP 4. Removing the radio/climate control bezel reveals a series of 7mm bolts securing both sides of the radio and climate control to the dash molding. Remove the 7mm located to the lower right side of the radio knob with the musical note. See Photo #3. Place the VSM G3 as pictured flush and secure over the 7mm bolt hole. Replace the 7mm bolt and tighten in order to secure the VSM G3.

STEP 5. After the VSM G3 is secure, assemble the dash in the reverse order in which it was dismantled. This completes the installation of your VSM G3.

Note: See the Assembly Instructions for G3 Components for additional information.

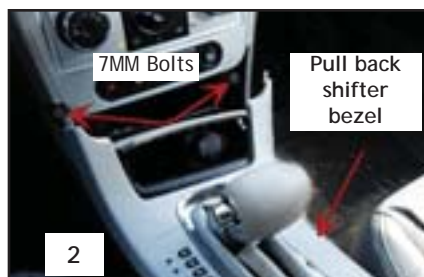

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this VSM G3™. Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651.688.3588 or 800.388.0073 Fx: 651.688.9876

Installation Difficulty
● ● ○ ○ ○
Simple Advanced

© Pro.Fit International, Eagan, MN 2008

View Instruction & Updates
Online at
www.pro-fit-intl.com