

## Subaru Tribeca 2008-2009

## GZ VEN

CV-71-07-G3

## PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS VSM G3

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.


When properly installed, the metal between the ball and 2 small holes is all that is exposed. (Some exceptions apply).


TOOLS REQUIRED: Dash Trim Removal Tool (DTRT), 5/64"bit and drill, Phillips Screwdriver, marking pen

PARTS INCLUDED: VSM G3, A Plate, J Stem, three (3) #8x1/2" screws

LOCATION: Right of Radio

STEP 1. Place the DTRT in the space between the dash molding and the trim piece that runs just above the glove box. See Photo #1. Use the DTRT in a gentle twisting motion to release the four (4) retaining clips that secure this trim piece to the dash molding. Set trim piece safely aside.

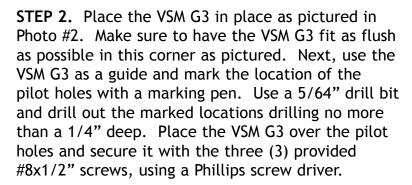



Note: See the Assembly Instructions for G3 Components for additional information.







Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this VSM G3<sup>TM</sup>. Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651.688.3588 or 800.388.0073 Fx: 651.688.9876

