



CHEVROLET S-10 PICKUP (1998-2005)
GMC ENVOY (1998-2001), SONOMA PICKUP (1998-2003)
GMC JIMMY (1998-2001) OLDSMOBILE BRAVADA (1998-2001)
CHEVROLET BLAZER (1998-2001) ISUZU HOMBRE PICKUP (1998)

(See reverse side for Chevrolet Trail Blazer (2002-2004) Instructions)

PART NUMBER: CV-76-98

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.
 All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: 9/32" socket & driver and ratchet, small flat head screwdriver.

PARTS INCLUDED: Pro.Fit VSM®, instructions.

LOCATION: To the right of the climate control.

STEP 1. This step is for Model Years 1998-2000 only! Proceed to Step 2 for Model years 2001 and later. Locate the trim panel below the steering column. Using your 9/32" socket & driver remove **two (2) screws** that hold this panel in place. There is one (1) screw to the left and one (1) to the right of the steering column. Set screws aside. **Proceed to Step 3.**

STEP 2. This step is for Model Years 2001 and later only! Locate the trim panel below the steering column. Using your 9/32" socket & driver, remove the **five (5) screws** that hold this panel in place. The screws are located in the top left and right, bottom left, center and right areas of the panel. Set screws aside.

STEP 3. Grasp this panel with both hands on the left and right sides of steering column and pull towards you to release two (2) clips. **NOTE: This panel does not need to be totally removed.** Pull the top of this panel out just far enough to gain access to two (2) screws that hold the top trim bezel in place. Both these screws are located on the right and left of the steering column. Using your 9/32" socket & driver remove these screws and set them aside. Using your 9/32" socket & ratchet locate and remove one (1) screw above the instrument cluster. Set screw aside. Grasp the trim bezel that surrounds the radio and climate control on the right side and pull toward you to release two (2) clips. Once clips are released continue working bezel loose all the way over to the drivers side door releasing a series of clips. When bezel is loose, **disconnect all wiring harnesses.** Set bezel aside.


STEP 4. Locate and remove two (2) screws that hold the climate control in place using your 9/32" socket & driver. Set screws aside. There are four (4) tabs on both sides of the climate control holding it in place. With your fingers press these tabs and pull the climate control out. **Do not disconnect wiring.**

STEP 5. Locate the hole to the right of the climate control and align **Pro.Fit VSM®** with that hole. Slide climate control back into place reinsert factory screws and tighten with socket & driver. Reassemble dash in reverse order **reconnecting all wiring.** Install hang up cup onto **Pro.Fit VSM®.**

This completes the installation of your **Pro.Fit VSM®.**



Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

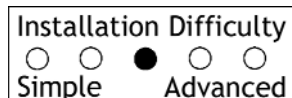

© Pro.Fit International, Eagan, MN 2005

VIEW INSTRUCTIONS & UPDATES ONLINE @ WWW.PRO-FIT-INTL.COM
--



CHEVROLET TRAIL BLAZER (2002-2004) (With or Without Auto Climate Control)

(See reverse side for the following instructions)

CHEVROLET S-10 PICKUP (1998-2005), GMC ENVOY (1998-2001), GMC JIMMY (1998-2001)
SONOMA PICKUP (1998-2003), ISUZU HOMBRE PICKUP (1998)
OLDSMOBILE BRAVADA (1998-2001), CHEVROLET BLAZER (1998-2001)

PART NUMBER: CV-76-98

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.
All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.


Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: 9/32" socket & driver and ratchet, small flat head screwdriver.

PARTS INCLUDED: Pro.Fit VSM®, instructions.

LOCATION: To the right of the climate control.


STEP 1. Begin by setting the emergency brake and putting the gear shift into neutral. Directly below the climate control panel and to the left of the cigarette lighter is a small cubby hole. (See Photo # 2). Remove one (1) Phillips screw from the back of the cubby hole. Remove two (2) Phillips screws from the bezel above the speedometer. (See Photo # 1).

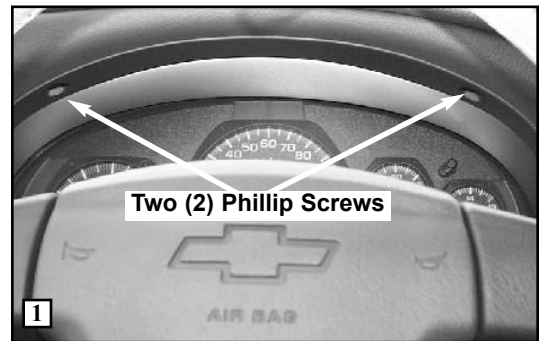

STEP 2. Insert a hook tool behind the lower right corner of the radio and climate control bezel. (See Photo # 4). Gently pull outward until a retainer clip is released. Work a hook tool counter-clockwise from the lower right corner of the bezel up to the upper left corner, pulling outward to release clips along the way. Continue releasing bezel clips until the 7mm factory bolt to the right of the climate control is easily accessible. (See Photo # 3).

NOTE: It is not necessary to remove the bezel from the dash.

NOTE: The following instructions is for models with auto climate control only. Look at Photo # 3. There is a triangular, strength rib located along the illustrated black line that needs to be filed down in order for the Pro.Fit VSM® to seat properly. (See 'File Here'). Once the triangular rib is filed down, proceed to STEP 3.

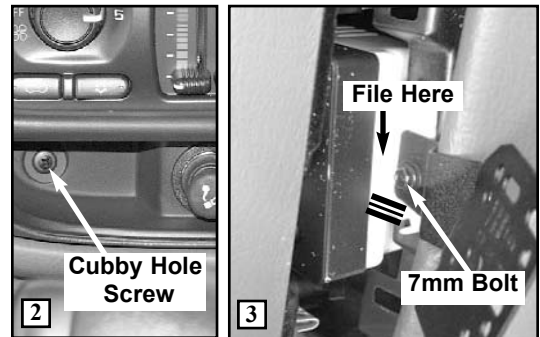

STEP 3. Remove the 7mm factory bolt. Align the VSM® over the bolt hole. (See Photo # 3). Place the 7mm bolt back into the hole and tighten. Reassemble the dash in reverse order. Place the gear shift into park and release the parking brake.



This completes the installation of your Pro.Fit VSM®.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

