



**GMC Envoy (2002-2009)
Oldsmobile Bravada (2003)
Isuzu Ascender (2003-2007)
PART NUMBER: CV-77-02**

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.


Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: #2 Phillips screwdriver, T15 Torx driver, hook tools, 5/64" drill bit and drill, 7mm nut driver.


PARTS INCLUDED: **Pro.Fit VSM®**, instructions, three (3) #8 x 3/8" screws.

LOCATION: Right of climate control.


STEP 1. Remove the gear shift knob and boot. Loosen the T-15 Torx screw located directly below the shift release button. The boot is held in place with four (4) retainer clips, one in each corner. Insert a hook tool under the lower left corner of the boot and gently pull upward, releasing the clip. Work the hook tool around the boot until all the clips are released. Lift the shifter handle and boot off the shifter lever and set aside. Open the center console armrest and find the two (2) Phillips screws near the front of it. Locate and remove the two (2) rubber pads from inside the console, exposing four (4) screws. Remove all six (6) Phillips screws from inside the console box. Lift the armrest box out of its cavity and set aside. Take the rubber liner out of the front cup holder and remove the 7mm bolt from the bottom of the cup holder. Remove the two (2) 7mm bolts located in the back of the center console cavity. (See photo #1). Lift the center console partially off to reveal a wiring harness that must be disconnected before the console can be removed. (See photo #1). **The instructions for disconnecting the harness are clearly marked on the connector.** Disconnect the wiring harness, lift the center console off and set aside.

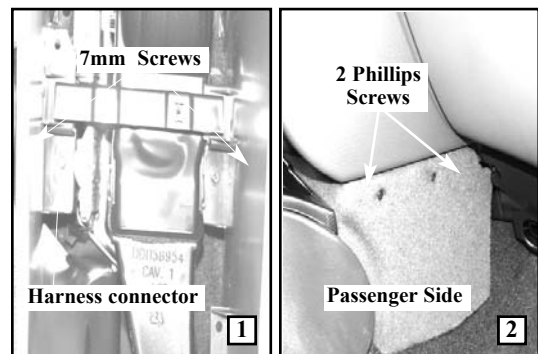

STEP 2. Below the cigarette lighter is a small carpeted panel that wraps around under the dash. (See photo #2). Remove two (2) #2 Phillips screws from each side of the carpeted panel. Lift the panel out and set aside. Remove the two (2) Phillips screws located directly below the cigarette lighter. Remove the trim bezel that surrounds the radio and climate control. Insert a hook tool under the upper left corner of the bezel and pull out, releasing a clip. Work the hook tool around the bezel until all the clips are released. (See photo #3). Disconnect the wiring harness connected to the bezel. Set bezel aside. Remove the two (2) 7mm bolts from both sides of the climate control. (See photo #3). Grasp the climate control with your hands and pull towards yourself to release four (4) retainer clips, one in each corner. (See photo #3). Pull the climate control out and move it off to the left side.

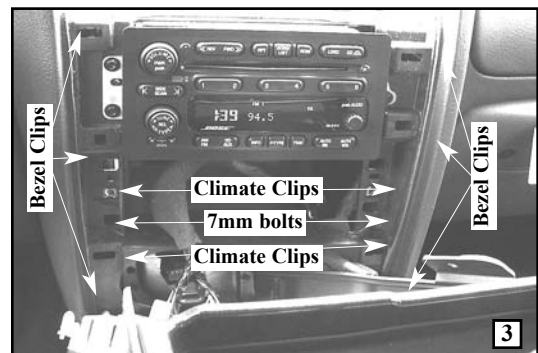

STEP 3. Place the **Pro.Fit VSM®** against the dash pad to the right of the climate control. (See photo #4). Using the **VSM®** as a guide, mark the location of the three (3) mounting holes. Set the **VSM®** aside. Using a 5/64" drill bit and drill, drill three (3) pilot holes, approximately 3/8" deep at the marked locations. Position the **VSM®** over the pilot holes, insert three (3) # 8 x 3/8" screws and tighten. Reassemble the dash and center console in reverse order remembering to reconnect all wiring.

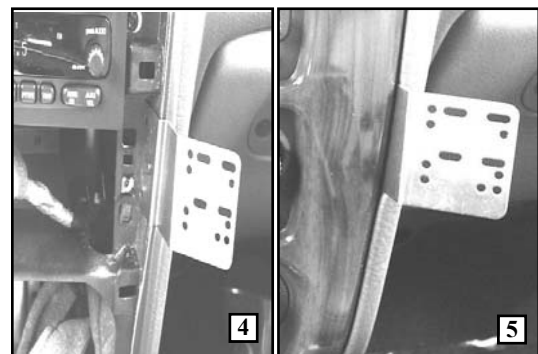

This completes the installation of your **Pro.Fit VSM®**.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this **Pro.Fit VSM®**. **Pro.Fit** may not be held liable for any personal injury resulting from accident or improper installation. **Pro.Fit International, Inc.®** 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

