



Ford Mustang 2005-2009

DG-53-07-G3



PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS VSM G3

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**When properly installed, the metal between the ball and 2 small holes is all that is exposed.
(Some exceptions apply).**

TOOLS REQUIRED: Dash Trim Removal Tool (DTRT), 5/64" drill bit and drill, marking pen, Phillips screwdriver

PARTS INCLUDED: VSM G3, A Plate, J Stem, two (2) 8 x 1/2" screws

LOCATION: Right of Radio

STEP 1. Set the parking brake and put the gear shift into neutral. Insert the DTRT behind the gear shift bezel. Press down to release a retainer clip and work the tool around the bezel until all the clips have been released. Lift over gear shift and set aside.

STEP 2. Open the arm rest and remove two (2) Phillips screws from either side of the hinge. Photo #1. Close the arm rest and lift the back end of it slightly. Slide the arm rest away from the dash.


STEP 3. Insert the DTRT behind the top of the small piece that is to the right of the radio. Use a twisting motion to release the retainer clip and move the tool downward and remove the trim piece. Proceed to remove the trim piece on the left side of the radio in the same manner.

STEP 4. Remove the 7mm bolts surrounding the radio and climate control and gently pull the assembly forward enough to provide sufficient access to the pilot holes on the VSM G3.

STEP 5. Place the VSM G3 into position as pictured. Photo #2. Using the VSM G3 as a guide, mark the location of the two (2) screw holes and set the VSM G3 aside. Drill two (2) pilot holes at the marked locations using a 5/64" bit and drill. Align the VSM G3 over the pilot holes, insert the two (2) screws and secure the VSM G3 flush to the dash molding.

STEP 6. Assemble the dash in reverse order. You have successfully installed your VSM G3.

Note: See the Assembly Instructions for G3 Components for additional information.

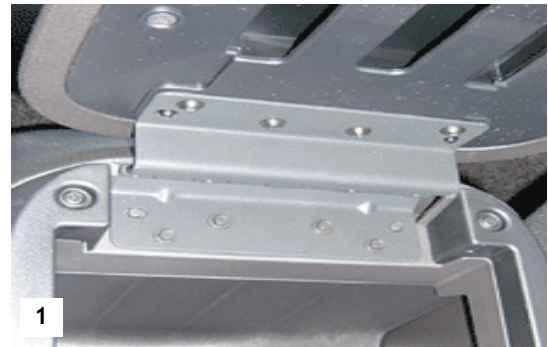

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this VSM G3™. Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651.688.3588 or 800.388.0073 Fx: 651.688.9876

Installation Difficulty
 ● ● ● ○ ○
 Simple Advanced

© Pro.Fit International, Eagan, MN 2008

View Instruction & Updates
 Online at
www.pro-fit-intl.com