



CHRYSLER PACIFICA (2003-2006)

PART NUMBER: DG-71-04-L



**PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit Legend.**

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.


**TOOLS REQUIRED:** #2 Phillips screwdriver, Dash Trim Removal Tool (DM-40-22)

**PARTS INCLUDED:** Pro.Fit Legend, instructions, two (2) #8x1/2" screws.

**LOCATION:** Right of climate control

#### STEP 1.

Insert the dash trim removal tool behind the trim bezel, left of the climate control. (Photo # 1). Pry outward to release a retainer clip. Pull outward on the bezel with your hands to continue loosening the bezel. Swing the bezel off to the side to reveal two (2) Phillips screws. (Photo # 1). Remove the screws.

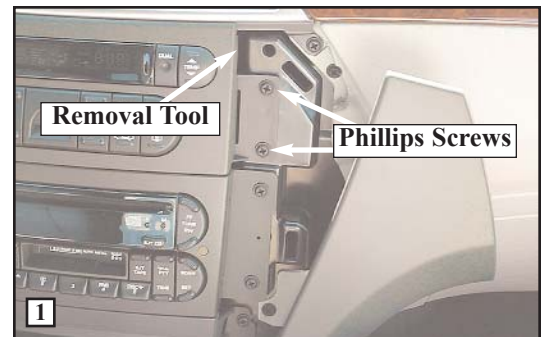


#### STEP 2.

Align the Pro.Fit Legend over the two (2) screw holes. Reinsert the screws and tighten. Replace the trim bezel.

**STEP 3.** Re-assemble the dash in reverse order. This completes the installation of your Legend.



Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit Legend™. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876



© Pro.Fit International, Eagan, MN 2005

**VIEW INSTRUCTIONS & UPDATES  
ONLINE @  
WWW.PRO-FIT-INTL.COM**