

**Dodge Caravan 2012-2017**  
**Chrysler Town & Country 2012-2016**  
**PART NUMBER: DG-92-08-G3**

**\*PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS VSM G3\***

All instructions assume a driver's seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

When properly installed, the metal between the ball and the small hole is all that is exposed. (Some exceptions apply).

**TOOLS REQUIRED:** Dash Trim Removal Tool (DTRT), Electric Screw Driver OR Cordless Drill, Phillips Screwdriver

**PARTS INCLUDED:** VSM G3, A Plate, 2-#8 x 3/8"



**LOCATION:** Right of Radio

Step 1: Use your DTRT to pop the radio trim bezel off by putting it between the dash and console. May have to do this all the way around the Bezel.

Step 2: Remove the top right screw and place G3 mount aligned with the hole. Return the screw back to original hole holding the G3 in place. Tighten screw to make sure the G3 and radio are stable.

Step 3: Pop on the trim bezel.

\*Note: We recommend use of the J-Stem to allow clearance for the screen to lower for proper CD/DVD ejection.

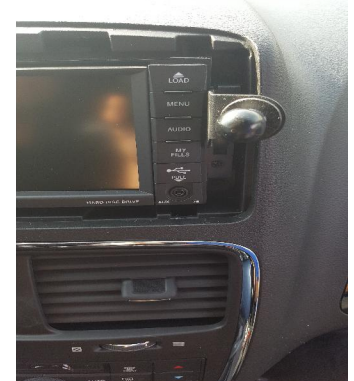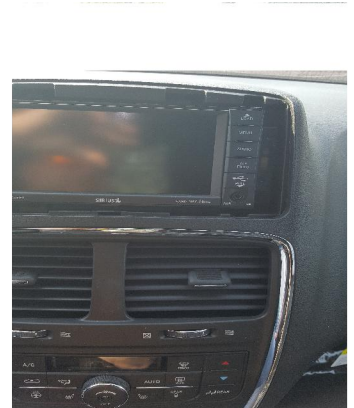

Pro.Fit International, Inc. ® may not be held liable for any damage to a vehicle before, during, or after the installation or removal of this VSM G3. Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation.

Pro.Fit International, Inc. ® 221 1<sup>st</sup> Street South, Montgomery, MN 56069, Ph: 507.364.7773 or 800.388.0073

Installation Difficulty



Simple

Advanced

©Pro.Fit International, Inc. Montgomery, Minnesota 2017

[View Instructions &  
Updates Online at  
www.pro-fit-intl.com](http://www.pro-fit-intl.com)