

Chevrolet Silverado – All Trims 1500, 2500, 3500 2014-2017

GMC Sierra – All Trims 2014-2017

PART NUMBER: FO-61-06-L

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS VSM G3

All instructions assume a driver's seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.


When properly installed, the metal between the ball and the small hole is all that is exposed. (Some exceptions apply).

TOOLS REQUIRED: Dash Trim Removal Tool (DTRT), Electric Screw Driver OR Cordless Drill, Phillips Screwdriver, 9/64 Socket

PARTS INCLUDED: VSM Legend, 2-#8 x 3/8"

LOCATION: Right of Radio


Step 1: Use your DTRT to pop the radio trim bezel off by putting it between the dash and console. May have to do this all the way around the Bezel.

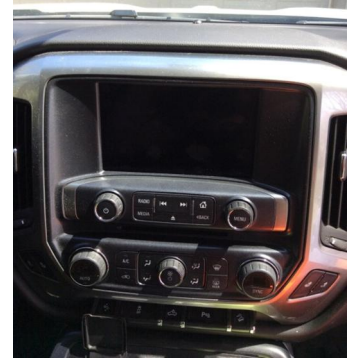

Step 2: Unplug heated seats switches to allow removal of radio trim bezel.



Step 3: Align the VSM Legend on the right side below the vent (Photo #2). Loosen the bottom vent screw so the Legend's corner can fit behind it. Tighten screw to hold it in place. Using the Legend as a guide, mark the location of 2 screw holes. Set legend aside. Drill 2 pilot holes at the marked location using a 5/64" drill bit and drill. Align the Legend over the pilot holes insert the 2 screws provided.

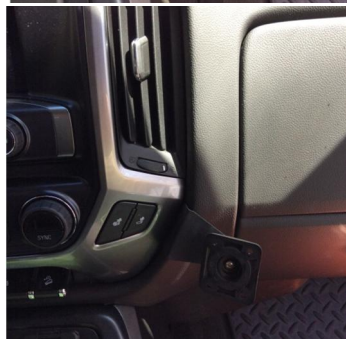

Step 4: Plug in heated seats and pop on the trim bezel.

Pro.Fit International, Inc. ® may not be held liable for any damage to a vehicle before, during, or after the installation or removal of this VSM G3. Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation.

Pro.Fit International, Inc. ® 221 1st Street South, Montgomery, MN 56069, Ph: 507.364.7773 or 800.388.0073

Installation Difficulty



Simple

Advanced

©Pro.Fit International, Inc. Montgomery, Minnesota 2017

[View Instructions & Updates Online at www.pro-fit-intl.com](#)