



FORD EXPLORER (2002-2005) MERCURY MOUNTAINEER (2002-2005)

PART NUMBER: FO-71-02

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM®.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.


Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: Hook tool, #2 Phillips screwdriver, 5/64" drill bit and drill, marking pen.


PARTS INCLUDED: Pro.Fit VSM®, three (3) #8 x 1/2" screws, instructions.

LOCATION: Right of climate control.

STEP 1. Remove the trim bezel from around the radio and climate control. Insert a hook tool behind the upper right corner of the bezel and gently pull forward, releasing a retainer clip. Work the hook tool around the bezel, pulling forward until all six (6) clips have been released. (See photo # 1). The air vents are built into the trim bezel. Move the bezel to the left enough to expose the right center clip hole. (See photo # 2). It is not necessary to disconnect any wiring to the bezel.

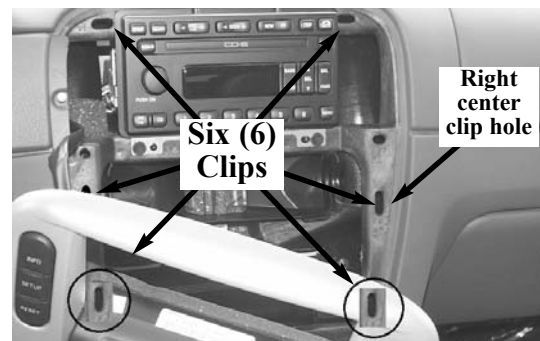


STEP 2. Align the Pro.Fit VSM® directly below the right center clip hole. (See photo # 2). Press the VSM® firmly against the right edge of the dash pad. This will allow enough room for the VSM® to fit neatly between the bezel and dash pad. Using the VSM® as a guide, mark the location of the three (3) mounting holes. Set the VSM® aside. Using a 5/64" drill bit and drill, drill three (3) pilot holes at the marked locations. Position the VSM® over the pilot holes, insert three (3) #8 x 1/2" screws and tighten. Reassemble the dash in reverse order.

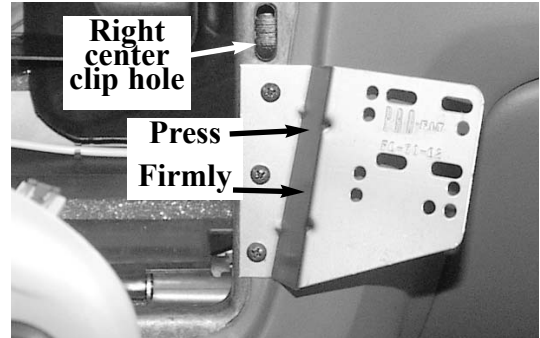

This completes the installation of your Pro.Fit VSM®.



Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 808-388-0073 Fx: 651-688-9876



© Pro.Fit International, Eagan, MN 2004

