



**Ford Sport Trak (2001-2006)**  
**Ford Explorer (1995-2001)**  
**Mercury Mountaineer (1996-2001)**  
**Mazda B Series Pickup Pickup (1995-2009)**  
**Ford Explorer Sport (2002-2005)**  
**Ford Ranger (1995-2009)**

**PART NUMBER: FO-71-95**

**PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM©.**  
 All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**Pro.Fit logo and part number will be right side up and readable when installed.**

**TOOLS REQUIRED:** 9/32" socket & driver, 5/64" drill bit, drill, #2 Phillips screwdriver, hook tool, one (1) set of radio removal tools (DIN tools), protective towel.

**PARTS INCLUDED:** Pro.Fit VSM©, two (2) #8x3/8" screw, instructions.


**LOCATION:** To the right of the climate control.

**STEP 1.** Begin by inserting DIN tools into the holes on radio. Apply outward pressure on DIN tools and pull outward to remove radio. Disconnect all wiring to radio. Set radio aside.


**STEP 2.** Remove trim bezel surrounding the climate control and radio. Using 9/32" socket & driver, remove two (2) screws which are located just above climate control in trim bezel. Set screws aside. Insert hook tool into the upper right corner of trim bezel, between the bezel and dash pad. Pull toward you to release one (1) clip. Perform this same action in the remaining three (3) corners of the bezel releasing three (3) more clips. Using a **protective towel** between the bezel and dash pad, let the bezel hang out of the way.

**STEP 3.** Using the 9/32" socket & driver, remove the four (4) screws that hold the climate control in place. Set screws aside. Place **Pro.Fit VSM©** behind the right side of climate control mounting bracket, aligning the holes in the VSM© with the holes in the climate control mounting bracket. **DO NOT REINSTALL FACTORY SCREWS AT THIS TIME.** On the flat surface to the right of the next bend in VSM©, use the VSM© as a guide for drilling two (2) pilot holes. **CAUTION!** Be sure to press the VSM© into position so that VSM© is snug. Using a 5/64" drill bit and drill, drill pilot holes. Using a #2 Phillips screwdriver insert and tighten provided screws. Insert and tighten the four (4) factory screws that hold the climate control in place.

**STEP 4.** Reassemble dash in reverse order, making sure to reconnect all wiring. This completes the installation of your **Pro.Fit VSM©.**

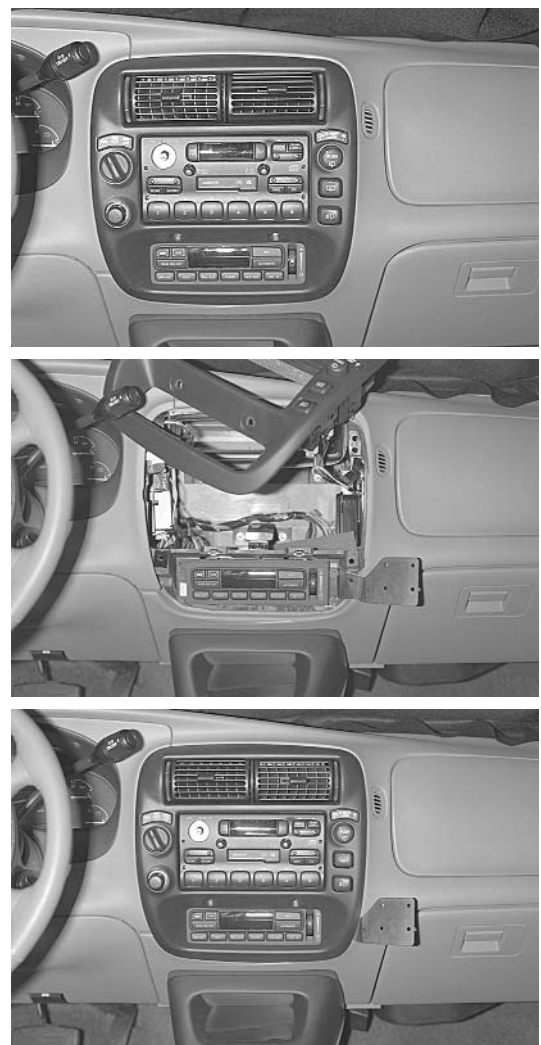

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM©. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

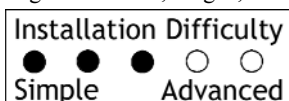

© Pro.Fit International, Eagan, MN 2005

**VIEW INSTRUCTIONS & UPDATES  
 ONLINE @  
 WWW.PRO-FIT-INTL.COM**