



## Lincoln Mark LT 2007-2008 Ford F-150 2007-2008



PART NUMBER: FO-72-08-G3

**PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS VSM G3**

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**When properly installed, the metal between the ball and 2 small holes is all that is exposed.  
(Some exceptions apply).**

**TOOLS REQUIRED:** Dash Trim Removal Tool (DTRT), 7mm socket and driver, needle nose pliers

**PARTS INCLUDED:** VSM G3, A Plate, J Stem


**LOCATION:** Right of Radio

**STEP 1.** Insert the DTRT in the upper right hand corner of the bezel that surrounds the radio and climate control. Using a gentle twisting motion, begin to release a total of eight (8) clips in a clockwise rotation around the radio bezel. Once the bezel has released from the clips, disconnect the wiring to the passenger air bag indicator light located at the very top of the bezel. Do not disconnect any other wiring; simply allow the bezel to hang carefully out of the way. **NOTE:** The clips themselves will disconnect from the bezel and remain in the dash molding. You must use a needle nose plier to pull the clips from the dash molding and place them back on the bezel before you fit the bezel back on the dash molding.

**STEP 2.** Locate the two (2) 7mm bolts securing the right side of the radio as pictured in Photo 2. Remove these bolts and secure the VSM G3 flush to the radio as pictured; be sure to tighten the bolts evenly over the VSM G3 tabs or it will not fit flush to the radio.

**STEP 3.** Once the VSM G3 is secure, place the dash back together in the reverse order it was dismantled. You have successfully installed your VSM G3!

Note: See the Assembly Instructions for G3 Components for additional information.

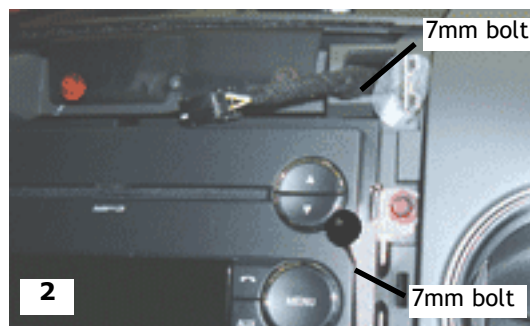

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this VSM G3™. Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651.688.3588 or 800.388.0073 Fx: 651.688.9876

Installation Difficulty

● ○ ○ ○ ○  
Simple Advanced

© Pro.Fit International, Eagan, MN 2008

View Instruction & Updates  
Online at  
[www.pro-fit-intl.com](http://www.pro-fit-intl.com)