



# Lincoln Navigator 2007-2008

(With In-Dash Navigation Only)

## FO-72-08-G3



### PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS VSM G3

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**When properly installed, the metal between the ball and 2 small holes is all that is exposed. (Some exceptions apply).**


**TOOLS REQUIRED:** Dash Trim Removal Tool (DTRT), 7mm socket and driver

**PARTS INCLUDED:** VSM G3, A Plate, J Stem

**LOCATION:** Right of Radio



**STEP 1.** Place the DTRT underneath the chrome piece surrounding the shifter. Use a gentle twisting motion to release the four (4) retainer clips. Next remove the wood grain cup holder bezel by inserting the DTRT toward the rear of the bezel. Photo #1. Twist and release a total of six (6) retainer clips; two (2) on both the right and left side pointing down, and two (2) retainer clips situated on the front of the floor console bezel pointing towards the motor. Once the cup holder bezel has been released, lift it over the shifter and set it carefully off to the side.

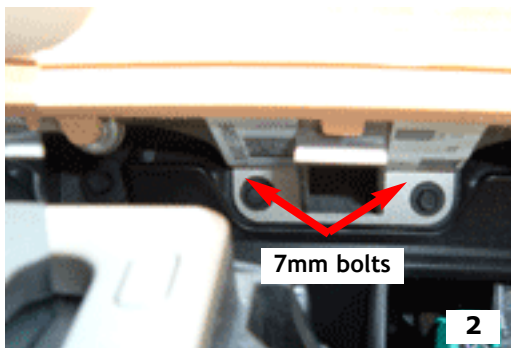

**STEP 2.** Removing the cup holder bezel will reveal two (2) 7mm bolts anchoring the bottom portion of the radio/climate control dash bezel. Remove these two bolts and set them aside. Photo #2. Next, insert the DTRT in the lower right hand corner of the radio bezel near where you removed the 7mm bolts. Begin to twist and release the retainer clips securing the radio bezel to the dash molding. Once the retainer clips have been freed, disconnect the radio bezel and set aside.

**STEP 3.** Locate and remove the two (2) 7mm bolts securing the right side of the radio to the dash. Place the VSM G3 flush and into position over the existing bolt holes. Photo #3. Replace the 7mm bolts once the VSM G3 is in place and tighten the bolts evenly over the legs of the VSM G3.

**STEP 4.** Assemble the dash in the reverse order in which it was dismantled. You have successfully installed your VSM G3!

Note: See the Assembly Instructions for G3 Components for additional information.



Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this VSM G3™. Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651.688.3588 or 800.388.0073 Fx: 651.688.9876

Installation Difficulty  
 ● ● ○ ○ ○  
 Simple Advanced

© Pro.Fit International, Eagan, MN 2008

View Instruction & Updates  
 Online at  
[www.pro-fit-intl.com](http://www.pro-fit-intl.com)