



FORD EXPEDITION (2012-2017) (With Center Console see page 2)



PART NUMBER: FO-73-09-G3

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM-G3.
All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

TOOLS REQUIRED: 7mm socket & driver, DTRT (dash trim removal tool), 3/16" drill bit & drill, duct tape, phillips screw driver.

PARTS INCLUDED: **VSM-G3**, two (2) #10 x 5/8" screws, instructions.

LOCATION: To the right side of the radio/climate control pod.

STEP 1.

Begin by removing the rubber pad just above the hazard switch. This will expose two (2) 7 mm bolts that must be removed.

STEP 2.

Using the DTRT (dash trim removal tool) unclip the tall trim pieces on each side of the radio/climate control pod. Begin at the bottom of each releasing the clips as you work toward the top. These trim pieces are not completely removed. Once each is pulled out remove four (4) 7 mm bolts at the lower end of the radio pod. Two (2) on each side.

STEP 3.

The radio pod can now be carefully pulled out. Grasping the top and bottom and pulling toward the seat will release the clips to remove. It may be necessary to unplug the top wires to adequately access the mounting position for the VSM-G3 bracket.

STEP 4.

Position the bracket as pictured against bottom of clip receiver. Tape bracket in place aligning the bend in the bracket to the edge of the plastic substructure. The bend must accept the side ridge of the radio pod. Drill starter holes using the bracket holes as your guide. Attach with screws provided. Leave duct tape in place. Reassemble the dash in reverse order.


Attach your phone holder onto the A Plate and attach to the **VSM-G3 ball**. The J Stem is optional for repositioning to your liking.

This completes the installation of your **Pro.Fit VSM-G3**.



Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this **Pro.Fit VSM®**. **Pro.Fit** may not be held liable for any personal injury resulting from accident or improper installation. **Pro.Fit International,**

Inc.® 1335 Egandale Court, Eagan, MN 55121, Ph: 651.688.3588 or 800.388.0073 Fx: 651.688.9876

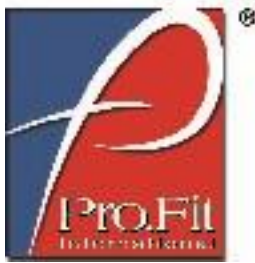

FORD EXPEDITION (2012-2017) With Center Console



PART NUMBER: FO-73-09-G3

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM-G3.
All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

TOOLS REQUIRED: 7mm socket & driver, DTRT (dash trim removal tool), 3/16" drill bit & drill, duct tape, phillips screw driver.

PARTS INCLUDED: VSM-G3, two (2) #10 x 5/8" screws, instructions.

LOCATION: To the right side of the radio/climate control pod.

STEP 1.

Begin by removing the rubber pad just above the hazard switch. This will expose two (2) 7 mm bolts that must be removed. Remove front portion of console around shifter, lift up on back first. This has no screws. Set aside.

STEP 2.

Using the DTRT (dash trim removal tool) unclip the tall trim pieces on each side of the radio/climate control pod. Begin at the middle of each, releasing the clips as you work toward the top. These trim pieces are not completely removed, bottom must stay attached with center console.



STEP 3.

The radio pod can now be carefully pulled out. Grasping the top and pulling toward the seat will release the clips to remove. Unplug the wires and remove Touch Screen to adequately access the mounting position for the VSM-G3 bracket. Use caution to remove radio pod, the trim pieces on each side should flex enough to remove, but will be very snug.



STEP 4.

Position the bracket as pictured against bottom of clip receiver. Tape bracket in place aligning the bend in the bracket to the edge of the plastic substructure. The bend must accept the side ridge of the radio pod. Drill starter holes using the bracket holes as your guide. Attach with screws provided. Leave duct tape in place. Reassemble the dash in reverse order.

Attach your phone holder onto the A Plate and attach to the VSM-G3 ball. The J Stem is optional for repositioning to your liking. This completes the installation of your Pro.Fit VSM-G3.



Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International,

Installation Difficulty
● ○ ○ ○ ○
Simple Advanced

© Pro.Fit International, Eagan, MN 2009


ONLINE @

WWW.PRO-FIT-INTL.COM

Inc.® 1335 Eagandale Court,
Eagan, MN 55121, Ph:

VIEW INSTRUCTIONS & UPDATES

651.688.3588 or 800.388.0073 Fx: 651.688.9876



© **Pro.Fit** International, Eagan, MN 2009

VIEW INSTRUCTIONS & UPDATES

**ONLINE @
WWW.PRO-FIT-INTL.COM**