



Ford Focus 2005-2007

PART NUMBER: IF-71-03-G3



PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit Legend.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.


**When properly installed, the metal between the ball and 2 small holes is all that is exposed.
(Some exceptions apply).**

TOOLS REQUIRED: #2 Phillips screwdriver, Dash Trim Removal Tool (DM-40-22), 5/64" drill bit and drill, protective cloth

PARTS INCLUDED: Pro.Fit VSM G3, two # 8 x 1/2" screws

LOCATION: Right of radio

STEP 1. Apply parking brake and place gear shift into neutral. Insert the dash trim removal tool behind the trim bezel, above the upper-right corner of the radio. **(Photo 3)**. Pry outward to release a retainer clip. Work the removal tool counter-clockwise around the bezel until all clips are released. Disconnect the wire harness on the power port. **Do Not** disconnect climate control wiring. Let bezel hang down.

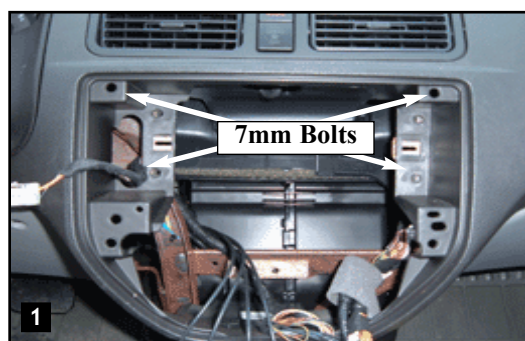

STEP 2. Remove the four (4) 7mm bolts that secure the radio. **(Photo1)**. There is one (1) at each corner. Slide the radio out of its cavity and let hang down. **Do Not disconnect radio wiring.**



STEP 3. Place the Pro.Fit VSM G3 against the right side of the radio cavity. **(Photo 2)**. Using the G3 as a guide, mark the location of two (2) screw holes. Set G3 aside. Drill two (2) pilot holes at the marked location using a 5/64" drill bit and drill. Align the G3 over the pilot holes, insert two (2) # 8 x 1/2" screws and tighten.



STEP 4. Re-assemble the dash in reverse order, remembering to reconnect the wiring harness. This completes the installation of your Pro.Fit VSM G3.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM G3™. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651.688.3588 or 800.388.0073 Fx: 651.688.9876

Installation Difficulty
 ● ● ○ ○ ○
 Simple Advanced

© Pro.Fit International, Eagan, MN 2008

View Instruction & Updates
 Online at
www.pro-fit-intl.com