



Subaru Outback 2010 Subaru Legacy 2010

Part Number: IF-71-03-G3
Page 15



PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS VSM G3
All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**When properly installed, the metal between the ball and 2 small holes is all that is exposed.
(Some exceptions apply).**


TOOLS REQUIRED: Hook Tool (DM-30-22), Dash Trim Removal Tool (DM-40-22), 5/64” bit and drill, Phillips screwdriver, marking pen
PARTS INCLUDED: VSM-G3, A-Plate, J-Stem, two (2) #8X1/2” screws
LOCATION: Right of center-right air vent

Step 1: Place the Hook Tool in the upper left hand corner of the dash bezel surrounding the radio and gently pull out the bezel enough to allow you to insert the Dash Trim Removal Tool (DTRT) (**Picture 1**). Use a gentle twisting motion with the DTRT all the way around the entire bezel. There are six (6) yellow retainer clips and three (3) smaller clips located directly above the radio that must be disconnected. **NOTE:** The cubby below the radio will come out with the bezel as well. Place the bezel carefully off to the side.

Step 2: Remove the four (4) Phillips screws securing the radio to the sub-dash structure and place them aside. Pull the radio out of dash and wrap a soft cloth around it to protect it. Allow the radio to “hang” out of the way; do not disconnect.

Step 3: Place the **VSM-G3** in place as pictured in **picture 2**. Use the **VSM-G3** as a guide and mark the locations of the pilot holes with a marking pen. With a 5/64” bit and drill, drill out the locations of the pilot holes, drilling no more than 1/4” deep! Place the **VSM-G3** over the pilot holes and secure it to the dash with the two (2) provided #8X1/2” screws and a Phillips screw driver.

Step 4: Once the **VSM-G3** is flush to the mounting location and secured, assemble the dash back together in the reverse order in which it was disassembled. You have successfully installed your **VSM-G3**!

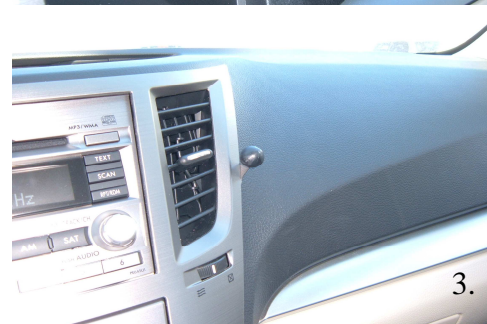

Note: See the Assembly Instructions for G3 Components for additional information.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this VSMG3™. Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651.688.3588 or 800.388.0073 Fx: 651.688.9876

Installation Difficulty
● ● ○ ○ ○
Simple Advanced

© Pro.Fit International, Eagan, MN 2008

**View Updated Instructions
Online at
www.pro-fit-intl.com**