



Volvo XC70 2005-2007 Volvo S60 2008-2009

PART NUMBER: IF-71-03-G3



PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS VSM G3

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**When properly installed, the metal between the ball and 2 small holes is all that is exposed.
(Some exceptions apply).**

TOOLS REQUIRED: Dash Trim Removal Tool (DTRT), T-25 Torx driver, Phillips screw driver

PARTS INCLUDED: VSM G3, A Plate, J Stem, two (2) #8 x 1/2" screws


LOCATION: Right of Radio

Step 1: Apply the emergency brake and shift the vehicle into neutral. Place the DTRT in the back corners of the shifter bezel, between the shifter bezel and the center console (Photo #1). Use the DTRT in a gentle twisting motion in order to release a series of four (4) retainer clips. Next you must remove the shift indicator assembly surrounding the shifter. With your fingers, simply push on the four (4) plastic clips underneath the shifter bezel that secure the shift indicator to the shifter bezel. While holding down the clips, pull down on the shift indicator assembly and carefully set the shift bezel aside.

Step 2: Removing the shifter bezel will reveal two (2) T-25 Torx screws below the power outlet/switches plate. Remove only the two center screws that secure the plate containing the radio and climate control. The radio and climate control unit will be removed as one piece including the bezel surrounding the outside of the radio/climate control. Carefully pull out on the bottom of the climate control in order to tilt the entire assembly and release the tongue and groove joint securing the top of the radio/climate control bezel and assembly. Place a protective towel over the center console, pull out the radio/climate control assembly out as much as possible and carefully set it on the center console. Do not disconnect any wiring.

Step 3: Place the VSM G3 flush to the dash molding and in position just as pictured (Photo #2). Secure the VSM G3 to the dash with the two (2) provided #8X1/2" screws. Use a Phillips screw driver to HAND TIGHTEN the screws, you do not need to drill out pilot holes. The dash molding material is fairly soft and you should be able to drive the screws into the dash molding using hand power only, DO NOT OVERTIGHTEN.

Step 4: Once the VSM G3 is in position, flush, and secured to the dash molding, simply place the dash back together in the reverse order in which it was dismantled. You have successfully installed your VSM G3!
Note: See the Assembly Instructions for G3 Components for additional information.

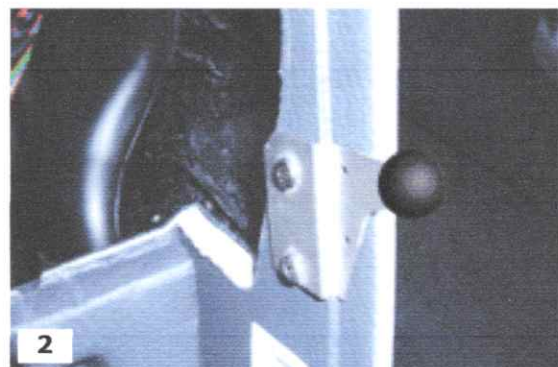

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this VSM G3™. Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651.688.3588 or 800.388.0073 Fx: 651.688.9876

Installation Difficulty
● ● ● ○ ○
Simple Advanced

© Pro.Fit International, Eagan, MN 2008

View Instruction & Updates
Online at
www.pro-fit-intl.com