



INSTALLATION INSTRUCTIONS

JEEP LIBERTY (2002-2006)

PART NUMBER: **JP-73-02**

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit VSM™.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

Pro.Fit logo and part number will be right side up and readable when installed.

TOOLS REQUIRED: #2 Phillips screwdriver, 5/64" drill bit and drill, marking pen, hook tool.

PARTS INCLUDED: Pro.Fit VSM™, instructions, three (3) # 8 x 1/2" screws.

LOCATION: Right of Radio



STEP 1. This step is for model years 1997-2004 only. 2005 starts with STEP 2. Set parking brake and putting the gear shift into neutral. Open the ashtray and remove it from its cavity.

STEP 2. Remove the Phillips screw from the upper left corner of the ashtray opening in the 2002-2004 model. The screw is right of center in the 2005 model. (See photo # 1). Insert your fingers in the cavity and pull out gently, releasing the a retainer clip. Using your hand or a hook tool, work your way around the radio and climate control bezel, pulling outward until all clips are released. The climate control module is part of the dash bezel. Let the bezel hang down.

STEP 3. There are two (2) wiring harnesses that connect to the back side of the climate control module. (See photo # 2). Release the two (2) quick connect plugs from their sockets.

STEP 4. Align the **Pro.Fit VSM™** below the radio. (See photo # 3). Using the **VSM™** as a guide, mark the location of the three (3) mounting holes. Set the **VSM™** aside. Using a 5/64" drill bit and drill, drill three (3) pilot holes at the marked locations. To avoid damaging the dash pad, **Do Not Drill** deeper than 1/2". Position the **VSM™** over the pilot holes, insert three (3) # 8 x 1/2" screws and tighten. Reassemble the dash in reverse order, remembering to reconnect the two (2) wiring harnesses and put the gear shift into park.

This completes the installation of your **Pro.Fit VSM™**.

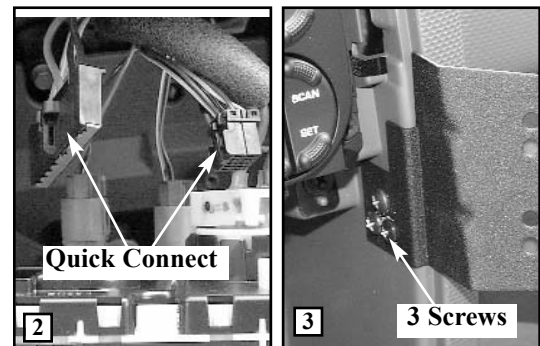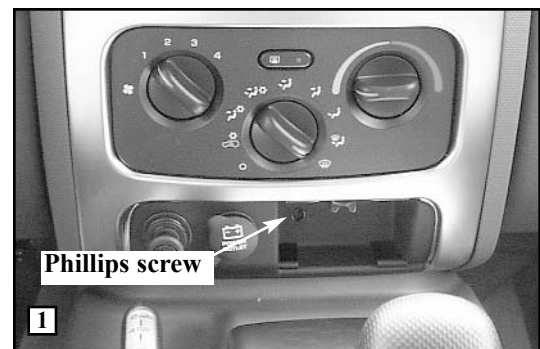

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit VSM®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

