



# FORD

## Explorer (2011-2019)



### MV-25-03-G3

#### PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS VSM G3

All instructions assume a driver's seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**When properly installed, the metal between the ball and 2 small holes is all that is exposed. (Some exceptions apply).**

**TOOLS REQUIRED:** Dash Trim Removal Tool (DTRT), Phillips screw driver, 5/64" drill bit and drill, marking pen

**PARTS INCLUDED:** VSM G3, Lock Plate, J Stem, three (3) #8 x 1/2" screws

**LOCATION:** RIGHT or LEFT of Center Air Vents

**STEP 1.** Use the DTRT (Dash Trim Removal Tool) to remove the trim bezels on each side of the radio/climate control (picture 1). Begin towards the bottom portion of these trim bezels and release a series of retainer clips. A push pin secures the upper portion of this bezel piece and requires significant effort to release. Be cautious not use too much force in releasing the push pin. Once you have removed each trim piece, simply set them carefully aside.



**STEP 2.** The removal of these trim pieces will reveal four (4) 7mm bolts that secure the bezel that contains the climate control/display/air vents. Carefully remove these bolts and again use the DTRT around this bezel. Do not disconnect the wiring to this bezel, simply allow it to hang out of the way.



**STEP 3.** Place the VSM-G3 in place against the inner dash molding as pictured (picture 2). Use the VSM-G3 as a guide and mark the locations of the pilot holes with a marking pen. With a 5/64" drill bit, drill out the marked locations, drilling no more than 1/4" deep! Place the VSM-G3 over the pilot holes and secure it to the dash using the two (3) provided #8 X 1/2" screws.




**STEP 4.** Once the VSM-G3 is secured and flush to its mounting location, place the dash back together in the reverse manner in which it was disassembled. You have successfully installed your VSM-G3!

Note: See the Assembly Instructions for G3 Components for additional information.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this VSM-G3. Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation.

Pro.Fit International, Inc.® 221 1<sup>st</sup> Street South, Montgomery, MN 56069 , Ph: 507-364-7773 or 800.388.0073

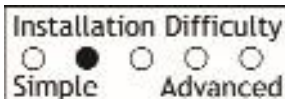

© Pro.Fit International, Montgomery, MN 2019

View Instruction & Updates  
Online at  
[www.pro-fit-intl.com](http://www.pro-fit-intl.com)