

Ford F250, F350 2017-2018

PART NUMBER: MV-25-03-G3

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS VSM G3

All instructions assume a driver's seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

When properly installed, the metal between the ball and the small hole is all that is exposed. (Some exceptions apply).

TOOLS REQUIRED: Dash Trim Removal Tool (DTRT), Electric Drill, Socket Wrench, 9/32 Socket

PARTS INCLUDED: VSM G3, 1 Lock-Plate, 1 J-stem, 3 4x3/8 screws

LOCATION: Right of radio

Step 1: Using the DTRT and your hand remove the center dash/speaker cover right above the radio.


Step 2: Remove the 2 nut screws using a 9/32 socket above and to the right and left of the speaker.

Remove the panel with speaker. Unplug speaker and set panel aside. (Photo #1)

Step 3: Remove 2 nut screws using the 9/32 socket. By pulling from the top now, remove the radio trim and controls leaving the screen in place. (Photo #2 & #3)

Step 4: Place mount on right side of opening along passenger side vent making sure not to place mount in bezel groove. Mark screw placement or using Drill screw in provided screws. For best appearance center screws to allow flush mounting of screws. (Photo #4)

Step 5: Then reverse steps 3 to 1.

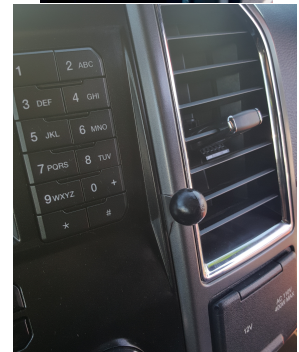

Pro.Fit International, Inc. ® may not be held liable for any damage to a vehicle before, during, or after the installation or removal of this VSM G3. Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation.

Pro.Fit International, Inc. ® 221 1st Street South, Montgomery, MN 56069, Ph: 507.364.7773 or 800.388.0073

Installation Difficulty



Simple

Advanced

©Pro.Fit International, Inc. Montgomery, Minnesota 2017

[View Instructions & Updates Online at www.pro-fit-intl.com](http://www.pro-fit-intl.com)