



**Subaru Impreza WRX 2002-2005**  
**Subaru Impreza 2002-2005**  
**Saab 92 2004-2006**  
**PART NUMBER: MV-50-03-G3**



**PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS VSM G3**

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**When properly installed, the metal between the ball and 2 small holes is all that is exposed.  
 (Some exceptions apply).**

**TOOLS REQUIRED:** #2 Phillips screwdriver, drill and 5/64" bit, Dash Trim Removal Tool (DTRT), marking pen


**PARTS INCLUDED:** VSM G3, A Plate, J Stem, two (2) #8 x 1/2" screws

**LOCATION:** Right of climate control

**STEP 1.** Set parking brake and put gear shift into drive. Insert DTRT behind lower left corner of the gear shift bezel and pry downward to release retainer clip. Lift bezel up and over gear shift and set aside.



**STEP 2.** Remove two (2) Phillips screws from below climate control bezel. Pull out bottom of bezel and continue moving your hands upward to release two (2) clips at the top. Wrap bezel in protective cloth and let hang down. Remove six (6) Phillips screws that secure the radio. Slide radio out of cavity, wrap in protective cloth and let hang down. DO NOT disconnect any wires from the radio.

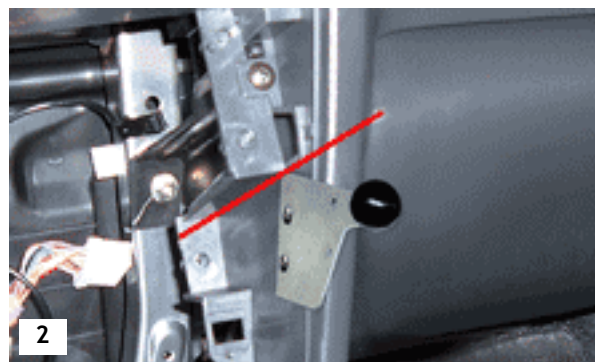

**STEP 3.** Align VSM G3 so that the top of the mount touches the ridge right of the radio. Photo #2.

**STEP 4.** Using the holes in the G3 as a guide, mark pilot holes with marking pen. Set the mount aside. Carefully drill pilot holes with 5/64" drill bit and drill. Place the G3 over pilot holes and align. Insert provided screws and tighten with #2 Phillips screwdriver.



**STEP 5.** Assemble the dash in reverse order, securing all clips and hardware. This completes the installation of your VSM G3.

Note: See the Assembly Instructions for G3 Components for additional information.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this VSM G3™. Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651.688.3588 or 800.388.0073 Fx: 651.688.9876

Installation Difficulty  
 ● ● ○ ○ ○  
 Simple Advanced

© Pro.Fit International, Eagan, MN 2008

View Instruction & Updates  
 Online at  
[www.pro-fit-intl.com](http://www.pro-fit-intl.com)