



Toyota Avalon 2005-2010

PART NUMBER: MV-50-03-G3



PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS VSM G3

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

When properly installed, the metal between the ball and 2 small holes is all that is exposed.
(Some exceptions apply).

TOOLS REQUIRED: #2 Phillips screwdriver, drill and 5/64" bit, Dash Trim Removal Tool (DTRT), marking pen

PARTS INCLUDED: VSM G3, A Plate, J Stem, two (2) #8 x 1/2" screws

LOCATION: Right of climate control

STEP 1. Insert DTRT behind the round bezel around the ignition switch and pry downward to remove. Insert DTRT behind lower-right corner of the steering column bezel and pry downward to release retainer clips until the right side of the bezel is loose and can be pulled out several inches. Do not remove this bezel.


STEP 2. Insert DTRT behind lower-left corner of radio/climate control bezel and pry downward around bezel until it is completely loose. Pull bezel out and disconnect the wiring harness on the left side. Do not disconnect right side. Wrap bezel in protective cloth and let rest on passenger seat.

STEP 3. Place the VSM G3 against the dash, right of climate control. Photo #2. There is a small ridge (Orange line) on the side. Mark the ridge that is covered with the VSM G3. Using a utility knife, carefully trim the ridge flush with the dash pad.

STEP 4. Place the G3 against the dash, centered over the area that was trimmed. Using the holes in the G3 as a guide, mark pilot holes with marking pen. Set the mount aside. Carefully drill pilot holes with 5/64" drill bit and drill. Place the G3 over pilot holes and align. Insert provided screws and tighten with a #2 Phillips screwdriver. This step is easier if you use a right angle tool like the SkewDriver, part number DM-60-22.

STEP 5. Assemble the dash in reverse order, securing all clips and wiring. This completes the installation of your VSM G3.

Note: See the Assembly Instructions for G3 Components for additional information.

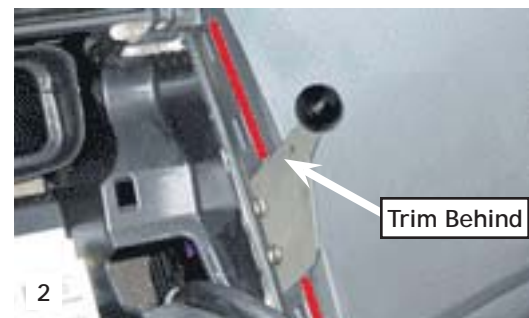

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this VSM G3™. Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651.688.3588 or 800.388.0073 Fx: 651.688.9876

Installation Difficulty
● ● ● ○ ○
Simple Advanced

© Pro.Fit International, Eagan, MN 2008

View Instruction & Updates
Online at
www.pro-fit-intl.com