



Toyota Camry 2007-2011

All Models Including Hybrid

PART NUMBER: MV-50-03-G3



PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS VSM G3

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

When Properly installed, the metal between the ball and 2 small holes is all that is exposed.
(Some exceptions apply).

TOOLS REQUIRED: 5/64" drill bit and drill, marking pen, Phillips screwdriver, Dash Trim Removal Tool (DTRT)
10mm nut driver

PARTS INCLUDED: VSM G3, A Plate, J Stem, two (2) #8 x 1/2" screws

LOCATION: Right of Radio


STEP 1. Remove the trim bezel that surrounds the shifter. Using the DTRT, begin in any corner to release all 7 clips, using a gentle twisting motion, working all the way around the bezel. Using the DTRT, remove the 2 tall narrow trim pieces (Photo #1), one on each side of the pocket immediately below the radio. Each has two (2) clips.



STEP 2. Keeping pocket closed, remove the two (2) screws securing the pocket and pull it out gently. With DTRT, remove air vents above radio. Start in a corner and work around to release the retainer clips, then place the air vents aside. Remove four (4) 10mm bolts securing radio, two above and two below.



STEP 3. Carefully slide radio out and wrap it with a protective cloth. Do not disconnect. Position VSM G3 along the right edge of molding (Photo #3) approximately 2 inches above base of the molding. Mark position of mount and holes using a marking pen. Carefully drill starter holes. Place G3 in position and secure with two (2) #8 x 1/2" screws provided. Snug down screws by hand. Always use caution to avoid over tightening and stripping out screws that anchor into plastic. Assemble in the reverse order. This completes the installation of your VSM G3.

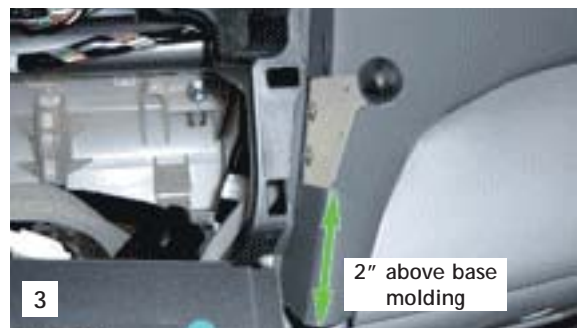

Note: See the Assembly Instructions for G3 components for additional information.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this VSM G3™. Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651.688.3588 or 800.388.0073 Fx: 651.688.9876

Installation Difficulty
● ● ● ○ ○
Simple Advanced

© Pro.Fit International, Eagan, MN 2008

View Instruction & Updates
Online at
www.pro-fit-intl.com