



Hyundai Sante Fe 2001-2006

PART NUMBER: MV-50-03-G3



PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS VSM G3

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**When properly installed, the metal between the ball and 2 small holes is all that is exposed.
(Some exceptions apply).**

TOOLS REQUIRED: #2 Phillips screwdriver, drill and 5/64" bit, Dash Trim Removal Tool (DTRT), marking pen

PARTS INCLUDED: VSM G3, A Plate, J Stem, two (2) #8 x 1/2" screws

LOCATION: Right of radio

STEP 1. Open and remove ashtray. Remove screws from both sides of ashtray cavity. Insert DTRT behind the upper-right corner of the climate control bezel and using a gentle twisting motion, pry outward releasing a clip in each corner. (Photo #3). Pull the bezel out enough to access and remove the two (2) vertical screws from the bottom of the radio.



STEP 2. Pull out the bottom of the radio bezel with your hands. Moving your hands upward, continue pulling outward until you release two (2) clips. (Photo #1). Lift bezel off centering pins, disconnect bezel wiring and set aside.

STEP 3. Remove four (4) radio mounting screws. Pull radio out of its cavity and let it hang down. Do not disconnect wiring to the radio.

STEP 4. Align top of VSM G3 as pictured in Photo #2. Using the holes of the VSM G3 as a guide, mark the location of the two (2) holes and drill two (2) pilot holes. Align the VSM G3 over the pilot holes, insert two (2) #8 x 1/2" screws and tighten.

STEP 5. Assemble the dash in reverse order. Remember to reattach wiring to the bezel. This completes the installation of your VSM G3.

Note: See the Assembly Instructions for G3 Components for additional information.

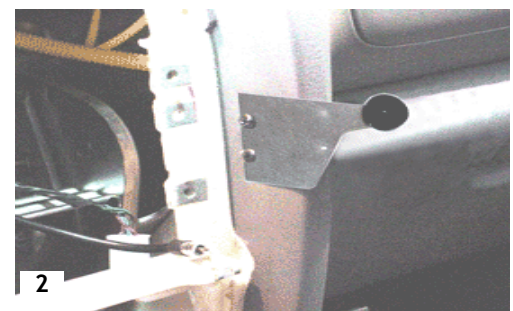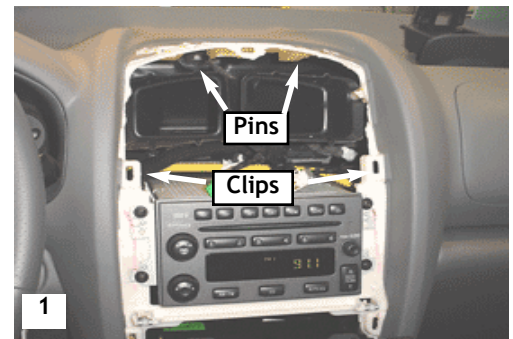

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this VSM G3™. Pro.Fit International may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651.688.3588 or 800.388.0073 Fx: 651.688.9876

Installation Difficulty
 ● ● ● ○ ○
 Simple Advanced

© Pro.Fit International, Eagan, MN 2008

View Instruction & Updates
 Online at
www.pro-fit-intl.com