



Toyota Camry Solara (2004-2009)

PART NUMBER: MV-50-03-L



PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit Legend.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

TOOLS REQUIRED: #2 Phillips screwdriver, drill and 5/64" bit, Dash trim removal tool (DM-40-22), 10mm nut driver, marking pen

PARTS INCLUDED: Pro.Fit Legend, instructions, two (2) # 8 x 1/2" screws.

LOCATION: Right of climate control

STEP 1. Set parking brake and put gear shift into low. Open arm rest. Remove gear shift bezel by inserting trim tool behind lower right corner of bezel and prying up. Work tool around bezel until all clips are released. Lift bezel up over gear shift and set aside. Wiring does not need to be disconnected.


STEP 2. Use the trim tool to pry out the pocket below the climate control. Set pocket to the side. Do not disconnect wiring.

STEP 3. Insert the dash tool behind the lower left corner of the air vent. **Photo 1.** Pry out approximately 1/8" to slightly release clip. Slide the trim tool to the right, releasing center and right clip slightly. Do not try to remove the bottom clips, only pulled out 1/8". Insert trim tool behind the upper left corner of the vent assembly. Pry outward to release clip. Work the tool to the right until vent top is free. Pull top forward and lift bottom clips out of holders and set vent assembly on dash. Do not disconnect vent wiring.

STEP 4. Remove four (4) 10mm bolts from the four corners of the radio / climate control module. Slide radio / climate control out of the cavity, wrap in a protective cloth, and let hang down. **DO NOT** disconnect any wiring to the radio module.

STEP 5. Align the bottom of the Legend VSM even with the top of the clip hole. **Photo 2.** Using the screw holes as a guide, mark the location of the top and bottom hole. **Carefully** drill two (2) pilot holes at the marked location using a 5/64" drill bit and drill. Align the LEGEND over the pilot holes, insert two (2) # 8 x 1/2" screws and tighten.

STEP 6. Re-assemble the dash in reverse order. This completes the installation of your Legend.

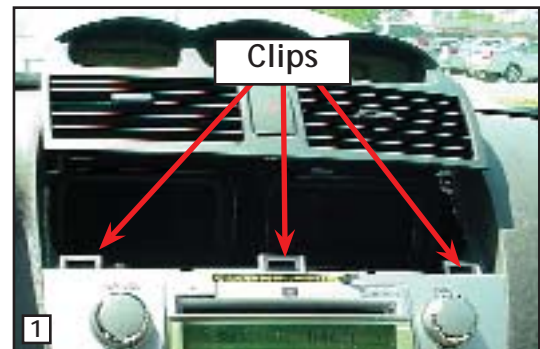

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit Legend®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

Installation Difficulty
● ● ● ● ○
Simple Advanced

© Pro.Fit International, Eagan, MN 2004

VIEW INSTRUCTIONS & UPDATES
ONLINE @
WWW.PRO-FIT-INTL.COM