



# Honda Accord (2003-2007)

(Vehicles built for the US market only)



PART NUMBER: MV-50-03-L

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit Legend.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**TOOLS REQUIRED:** #2 Phillips screwdriver, drill and 5/64" bit, Dash trim removal tool (DM-40-22), 10mm

**PARTS INCLUDED:** nut driver, marking pen

Pro.Fit Legend, instructions, two (2) # 8 x 1/2" screws.


**LOCATION:** Right of radio

**STEP 1.** Begin by setting the emergency brake and putting the gear shift into neutral. Using a trim removal tool, remove the bezel surrounding the gear shift lever. Starting in the lower left corner of the bezel, work the tool around the bezel, releasing six (6) clips. Lift bezel over shifter and set aside. Remove the two (2) screws in front of the shifter.


**STEP 2.** Open the tray cover to the left of the power outlet. Use trim tool to lift the tray out, releasing two (2) clips on the bottom. Remove the two (2) screws that are under the tray. Use the trim tool to lift the front of the power outlet assembly, releasing three (3) clips. Set outlet aside. Remove the two (2) screws from the bottom corners of the bin above the power outlet. Close the door and pull the box out. Remove the two (2) hex-head screws from the bottom of the radio. (Photo 1).



**STEP 3.** Insert the removal tool behind the lower right corner of the air vent and release the clip. (Photo 3). Work the tool to the left to release two (2) more clips. Pivot the bottom edge of the vent upward until the top comes free. Set the vent on top of the dash. Remove the three (3) Phillips screws from the top of the radio. Use the removal tool to release three (3) clips at the bottom of the radio. They are located directly below the large, round knobs. Pull the radio out of the dash and let hang down. **DO NOT** disconnect any wires to the radio.

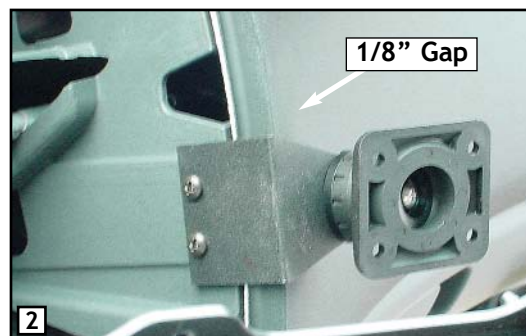

**STEP 4.** Place the Legend against the dash pad to the right of the radio. The bottom edge of the Legend be approximately 1/4" above a small ridge and 1/8" away from the dash pad. (Photo 2). Using the holes of the Legend as a guide, mark the location of two (2) holes and drill two (2) pilot holes. Align the Legend over the pilot holes, insert two (2) # 8 x 1/2" screws and tighten.

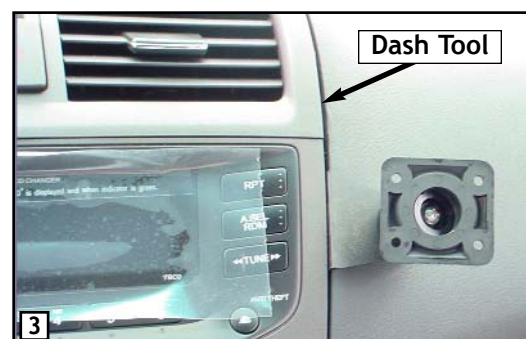

**STEP 5.** Re-assemble the dash in reverse order, remembering to reattach wiring to bezel. This completes the installation of your Legend.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit Legend®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

