



Toyota Camry (2002-2006)



PART NUMBER: MV-50-03-L

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit Legend.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

TOOLS REQUIRED: #2 Phillips screwdriver, drill and 5/64" bit, Dash trim removal tool (DM-40-22), 10mm

PARTS INCLUDED: nut driver, marking pen

Pro.Fit Legend, instructions, two (2) # 8 x 1/2" screws.

LOCATION: Below climate control - Left or right side


STEP 1.

Begin by removing the climate control panel located below the cassette player. Insert a hook tool behind the climate control panel and pry out gently, releasing a retainer clip. Work the hook tool around the panel, pulling outward until all four (4) clips are loose. (Photo 1). Let the panel hang downward.



STEP 2.

Place the LEGEND on the left or right side of the bottom of the climate control cavity. (Photos 2-4). Using the LEGEND as a guide, mark the location of the top and bottom holes. Drill two (2) pilot holes at the marked location using a 5/64" drill bit and drill. Align the LEGEND over the pilot holes, insert two (2) # 8 x 1/2" screws and tighten. Reassemble the dash in reverse order.

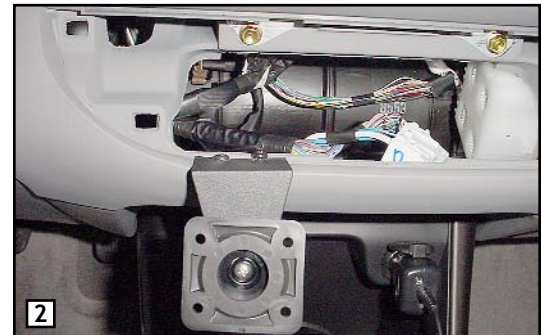


STEP 3.

Re-assemble the dash in reverse order. This completes the installation of your Legend.



Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit Legend®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

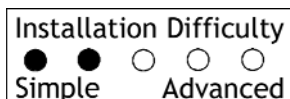

© Pro.Fit International, Eagan, MN 2006

VIEW INSTRUCTIONS & UPDATES
ONLINE @
WWW.PRO-FIT-INTL.COM