



Lexus SC430 (2003-2006)



PART NUMBER: MV-50-03-L

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit Legend.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

TOOLS REQUIRED: #2 Phillips screwdriver, drill and 5/64" bit, Dash trim removal tool (DM-40-22), 10mm nut driver, marking pen

PARTS INCLUDED: Pro.Fit Legend, instructions, two (2) # 8 x 1/2" screws, hardware pack

LOCATION: Right of radio

STEP 1. Set parking brake and put gear shift into low. Remove seat heater switch panel by inserting a dash trim tool behind right side of panel and prying up, releasing a retainer clip. Repeat on left side. Lift panel up, disconnect wiring and set aside.

STEP 2. Remove gear shift bezel by inserting trim tool behind lower right corner and prying up. Work tool up the right side of bezel until all four (4) clips are released. Repeat on left side. Lift bezel up, disconnect wiring and set aside.

STEP 3. USE EXTREME CAUTION!! Read and understand this step before proceeding. The climate control module is extremely expensive and will break if not removed correctly. Insert a trim tool behind the top left and right corners of the climate control module. You need to use two (2) tools to safely remove this module. Press the trim tools forward at the same time to release six (6) clips. **Photo 1.** Slide the module out, disconnect all wiring and set aside.




STEP 4. Remove four (4) 10mm bolt from the corners of the radio. Grab the face of the radio with both hands and tilt the front up. Use the same motion you would use to open the car's hood. With the radio tilted up, slide the radio out of its cavity, wrap with a protective cloth and let hang down. **Do Not** disconnect any wiring to the radio.

STEP 5.


Align the Legend VSM in the bottom right corner of the radio cavity as shown in **Photo 2.** The Legend should be out from the dash approximately 1/16". Using the screw holes as a guide, mark the location of the top and bottom hole. Drill two (2) pilot holes at the marked location using a 5/64" drill bit and drill. Align the **LEGEND** over the pilot holes, insert two (2) # 8 x 1/2" screws and tighten.

STEP 6.

Re-assemble the dash in reverse order. Remember to reconnect all wiring. This completes the installation of your Legend.

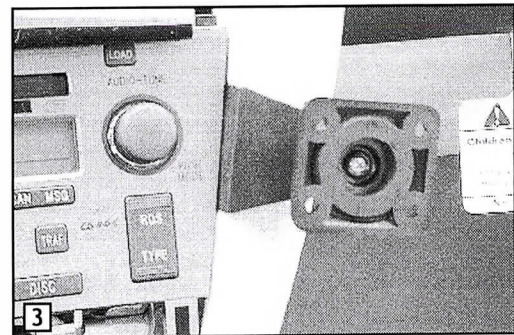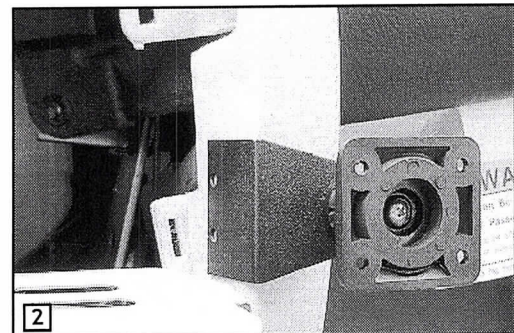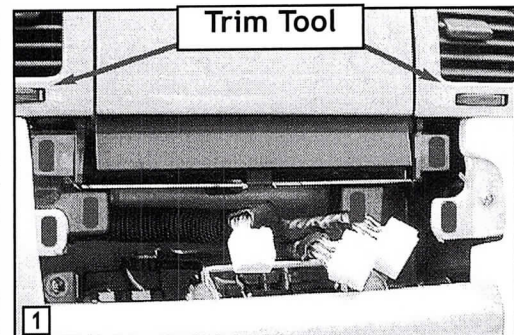

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit Legend®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

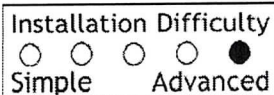

© Pro.Fit International, Eagan, MN 2006

VIEW INSTRUCTIONS & UPDATES
ONLINE @
WWW.PRO-FIT-INTL.COM