



Audi A8  
(2004-2005)



PART NUMBER: MV-50-03-L

PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit Legend.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

**TOOLS REQUIRED:** #2 Phillips screwdriver, drill and 5/64" bit, dash trim removal tool (DM-40-22), marking pen


**PARTS INCLUDED:** Pro.Fit Legend, instructions, two (2) # 8 x 1/2" screws, hardware pack

**LOCATION:** Below air vent

**STEP 1.** Push on the small door below the right air vent to open it. Insert a dash trim tool behind the lower-right corner of the trim bezel that surrounds the small door and buttons. **Photo 1.** Start by the right door and work the dash tool towards the steering column, releasing clips along the way. Let bezel hang down when released. Do not disconnect any wiring.




**STEP 2.** Locate metal frame directly below the left air vent. Slide right corner of Legend under lip and push back to ridge. **Photo 2.**

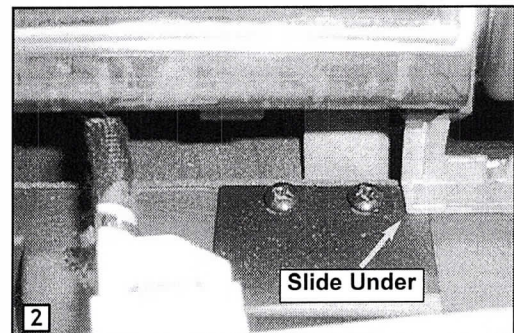


**STEP 3.** Using the holes in the Legend as a guide, mark pilot holes with marking pen. Set the mount aside. **Carefully** drill pilot holes with 5/64" drill bit and drill. Slide right corner of Legend under lip as before. Align the Legend over pilot holes and insert provided screws. Tighten with # 2 Phillips screwdriver.

**STEP 4.** Assemble dash in reverse order securing all clips. This completes the installation of your Pro.Fit Legend.

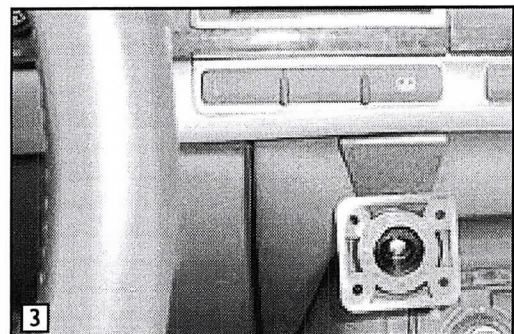

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit Legend®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876



© Pro.Fit International, Eagan, MN 2005

