

Lincoln Town Car (2003-2006)

PART NUMBER: MV-50-03-L



PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit Legend.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.

TOOLS REQUIRED: #2 Phillips screwdriver, drill and 5/64" bit, Dash trim removal tool (DM-40-22), 10mm

PARTS INCLUDED: nut driver, marking pen

Pro.Fit Legend, instructions, two (2) # 8 x 1/2" screws, hardware pack

LOCATION: Right of climate control

STEP 1.

Set the parking brake, put the gear shift into low and tilt the steering wheel completely down. Locate and remove two 7mm screws from dash above steering wheel. Insert the dash trim tool behind the upper right corner of the radio bezel. (Photo 1). Pry outward to release a retainer clip. Work the tool clockwise around the bezel until all clips are released. Disconnect the bezel wiring harness and set bezel aside.

STEP 2.


Remove a 7mm screw from each corner of the climate control. Slide the climate control out and let hang down. The wiring does not need to be disconnected.


STEP 3.


Press the Legend against the dash, right of the climate control. (Photo 2). With the Legend out 1/4 inch from the back edge of the dash pad, mark the location of the top and bottom hole. Drill two (2) pilot holes at the marked location using a 5/64" drill bit and drill. Align the LEGEND over the pilot holes, insert two (2) # 8 x 1/2" screws and tighten.

STEP 4.


Re-assemble the dash in reverse order, remembering to put the gear shift back into park and release the parking break. This completes the installation of your Legend.

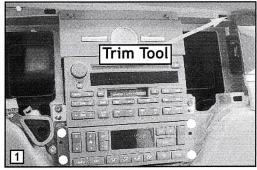

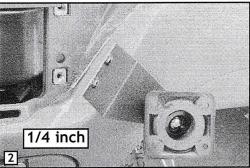

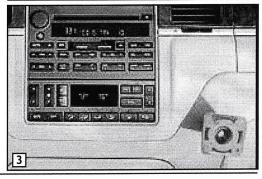

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit Legend®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876



VIEW INSTRUCTIONS & UPDATES ONLINE @ WWW.PRO-FIT-INTL.COM