



## Volkswagen Touareg (2003-2006)

PART NUMBER: MV-50-03-L



PLEASE READ COMPLETE INSTRUCTIONS BEFORE INSTALLING THIS Pro.Fit Legend.

All instructions assume a drivers seat vantage point. Caution is advised when removing and reassembling wood or plastic parts of a dash. Applying unnecessary force or pressure may cause a piece to crack or break.


**TOOLS REQUIRED:** #2 Phillips screwdriver, drill and 5/64" bit, Dash trim removal tool (DM-40-22), 10mm nut driver, marking pen

**PARTS INCLUDED:** Pro.Fit Legend, instructions, two (2) # 8 x 1/2" screws, hardware pack

**LOCATION:** Right of radio


### STEP 1.

Insert four (4) radio removal tools into the slots on the face of the radio. **Photo 1.** NOTE: Make sure the two (2) notches on the removal tools are pointed inward on both the left and right sides. Insert the tools just far enough to feel and hear a click.

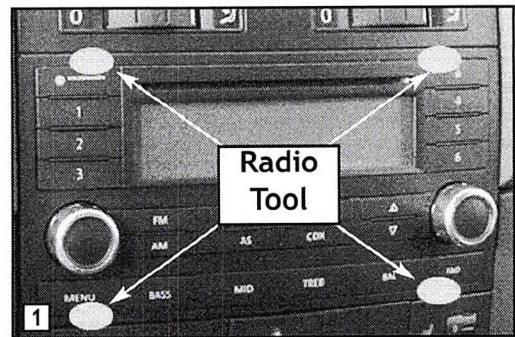


### STEP 2.

Insert a finger into the top-left and lower-right removal tool's rings and carefully pull toward you to remove the radio from its cavity. Wrap the radio with a protective cloth to prevent scratches to the dash and let hang down. DO NOT disconnect the radio wiring.

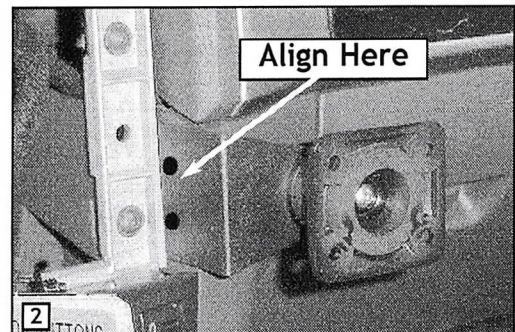

### STEP 3.

Align the back edge of the Legend VSM against the radio mounting bracket. **Photo 1.** Using the screw holes as a guide, mark the location of the top and bottom hole. Drill two (2) pilot holes at the marked location using a 5/64" drill bit and drill. Align the LEGEND over the pilot holes, insert two (2) # 8 x 1/2" screws and tighten.

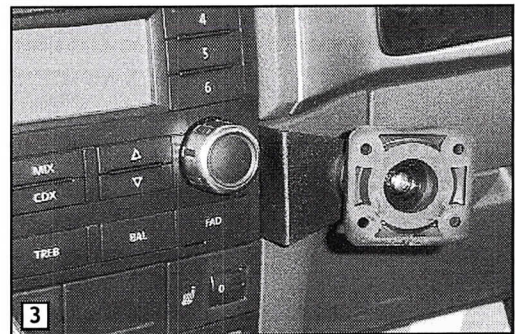

### STEP 4.

Re-assemble the dash in reverse order. This completes the installation of your Legend.

Pro.Fit International, Inc.® may not be held liable for any damage to a vehicle before, during or after the installation or removal of this Pro.Fit Legend®. Pro.Fit may not be held liable for any personal injury resulting from accident or improper installation. Pro.Fit International, Inc.® 1335 Eagandale Court, Eagan, MN 55121, Ph: 651-688-3588 or 800-388-0073 Fx: 651-688-9876

Installation Difficulty  
 ○ ○ ● ○ ○  
 Simple Advanced

© Pro.Fit International, Eagan, MN 2004

VIEW INSTRUCTIONS & UPDATES  
 ONLINE @  
 WWW.PRO-FIT-INTL.COM